Manualslib.com - The Global Manuals Library

Manuals / Brands / Sharp Manuals / TV / 14D1-SA / Service manual / PDF

SHARP 14D1-SA SERVICE MANUAL

Table of Contents

Table of Contents
SPECIFICATIONS
IMPORTANT SERVICE NOTES
ADJUSTMENT PRECAUTIONS
MEMORY MAP
GA1 HOTEL MODE APPLICATION
TROUBLE SHOOTING FLOWCHART
WAVEFORMS
SOLID STATE DEVICE BASE DIAGRAM
TOP VIEW

SIDE VIEW
CHASSIS LAYOUT
BLOCK DIAGRAM
BLOCK DIAGRAM:HEADPHONE UNIT
DESCRIPTION OF SCHEMATIC DIAGRAM
SCHEMATIC DIAGRAM:MAIN UNIT
Ë MAIN UNIT
SCHEMATIC DIAGRAM:CRT UNIT
Ë CRT UNIT
SCHEMATIC DIAGRAM:HEADPHONE UNIT
Ë HEADPHONE UNIT
PRINTED WIRING BOARD ASSEMBLIES
REPLACEMENT PARTS LIST
MAIN UNIT
CRT UNIT
HEADPHONE UNIT
Ë SUPPLIED ACCESSORIES
Ë PACKING PARTS
Ë CABINET PARTS
CABINET PARTS LOCATION
PACKING OF THE SET
Other ManualsLib Projects

SHARP SERVICE MANUAL

S14M714D1-SA/

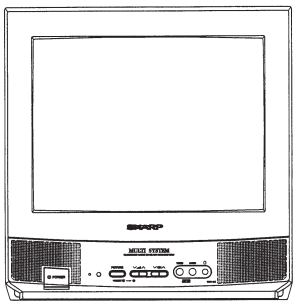

14D1-SA/SF/GA/GF

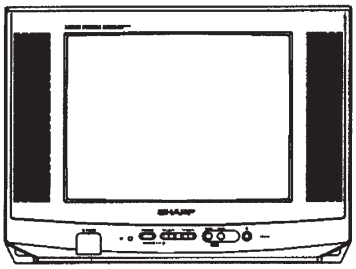

14D2-SA/SF/GA/GF

COLOUR TELEVISION

Chassis No. GA-1AM

MODELS 14D1-SA/SF/GA/GF 14D2-SA/SF/GA/GF

In the interests of user-safety (Required by safety regulations in some countries) the set should be restored to its original condition and only parts identical to those specified should be used.

FEATURES

- Multi 18 systems
- Full Auto Channel Preset and Auto Channel Skip
- 100-CH Program Memory
- CATV(Hyper Band) Ready
  <Used Frequency Synthesizer Tuner>
- AVL(Sound Keeper) Function
- Black Stretch Circuit
- On Timer/Sleep Timer/Reminder Timer
- Blue Back Noise Mute
- Front Headphone Terminal
- Front AV-In & Rear AV-In/Out Terminals (Front Priority)
- Colour Comb Filter(NTSC only)
- High Contrast Picture
- Hotel Mode
- Arabic/Chinese/English/French/Malay 5 Languages OSD
- White Temperature Adjustment

CONTENTS

	Page
• SPECIFICATIONS	2
• IMPORTANT SERVICE NOTES	2
• ADJUSTMENT PRECAUTIONS	3
• MEMORY MAP	12
• GA1 HOTEL MODE APPLICATION	16
• TROUBLE SHOOTING FLOWCHART	17
• WAVEFORMS	19
• SOLID STATE DEVICE BASE DIAGRAM	21
• CHASSIS LAYOUT	23
• BLOCK DIAGRAM	27
• DESCRIPTION OF SCHEMATIC DIAGRAM	33
• SCHEMATIC DIAGRAM	
■ MAIN UNIT	34
■ CRT UNIT	42
■ HEADPHONE UNIT	44
• PRINTED WIRING BOARD ASSEMBLIES	46
• REPLACEMENT PARTS LIST	
■ ELECTRICAL PARTS	
MAIN UNIT	51
CRT UNIT	55
HEADPHONE UNIT	55
■ SUPPLIED ACCESSORIES	55
■ PACKING PARTS	56
■ CABINET PARTS	56
• PACKING OF THE SET	58

WARNING

The chassis in this receiver is partially hot. Use an isolation transformer between the line cord plug and power receptacle, when servicing this chassis. To prevent electric shock, do not remove cover. No user – serviceable parts inside. Refer servicing to qualified service personnel.

SHARP CORPORATION

SPECIFICATIONS

Convergence ..... Self Convergence System
Focus ..... Electrostatic Focus High Bi-Potential

Sweep Deflection ..... Magnetic
Intermediate Frequencies
  Picture IF Carrier 38.9MHz
  Sound IF Carrier Frequency
    6.5MHz 32.4MHz
    6.0MHz 32.9MHz
    5.5MHz 33.4MHz
  Colour Sub-Carrier Frequency 34.47MHz

Power Input ..... 110 ~ 240V AC 50/60 Hz
Power Consumption
  14D1-SA/SF/GA/GF 58W
  14D2-SA/SF/GA/GF 62W

Audio Power Output Rating
  14D1-SA/SF/GA/GF ..... 3.0W(at Max.)
  14D2-SA/SF/GA/GF ..... 5.0W(at Max.)

Speaker
  Size
    14D1-SA/SF/GA/GF ..... 5 x 9 cm Elliptic (1pc)
    14D2-SA/SF/GA/GF ..... 5 x 9 cm Elliptic (2 pcs)
  Voice Coil Impedance ..... 16 ohms at 400 Hz

Aerial Input Impedance
  VHF/UHF ..... 75 ohms Unbalanced
Receiving System ..... CCIR SECAM/PAL B, G,D,K,I

Tuner Ranges
  VHF-Channels ..... E2(48.25MHz) thru E12(224.25MHz)
    C1(49.75MHz) thru C12(216.25 MHz)
    S1(105.25MHz) thru S36(423.25HMz)
  UHF-Channels ..... E21(471.25MHz) thru E69(855.25MHz)
    C13(471.25MHz) thru C57(863.25MHz)
    S37(431.25MHz) thru S41(463.25MHz)

Dimensions
  14D1-SA/SF/GA/GF ..... Width: 357.0mm
    Height: 465.0mm
    Depth: 370.5mm
    Weight(approx): 9.5 kg
  14D2-SA/SF/GA/GF ..... Width: 466.0mm
    Height: 333.0mm
    Depth: 362.0mm
    Weight(approx): 9.2 kg

Cabinet material ..... All Plastics

Specifications are subject to change without prior notice.

IMPORTANT SERVICE NOTES

Maintenance and repairing of this receiver should be done by qualified service personnel only.

SERVICE OF HIGH VOLTAGE SYSTEM AND PICTURE TUBE

When servicing the high voltage system, remove static charge from it by Connecting a 10K ohm Resistor in series with an insulated wire(such as a test probe) between picture tube dag and 2nd anode lead. (AC line cord should be disconnected from AC outlet.)

1. **Picture tube in this receiver employs integral implosion protection.**
2. **Replace with tube of the same type number for continued safety.**
3. **Do not lift picture tube by the neck.**
4. **Handle the picture tube only when wearing shatterproof goggles and after discharging the high voltage completely.**

X-RAY

This receiver is designed so that any X-Ray radiation is kept to an absolute Minimum. Since certain malfunctions or servicing may produce potentially hazardous radiation with prolonged exposure at close range, the following precautions should be observed:

1. **When repairing the circuit, be sure not to increase the high voltage to more than 25.2kV(at beam 0 μA) for the set.**
2. **To keep the set in a normal operation, be sure to make it function on 22.7kV±1.5kV(at beam 800 μA) in the case of the set. The set has been factory - Adjusted to the above-mentioned high voltage.**
   - *** If there is a possibility that the high voltage fluctuates as a result of the repairing, never forget to check for such high voltage after the work.**
3. **Do not substitute a picture tube with unauthorized types and/or brands which may cause excess X-ray radiation.**

BEFORE RETURNING THE RECEIVER

Before returning the receiver to the user, perform the following safety Checks.

1. **Inspect all lead dress to make certain that leads are not pinched or that hardware is not lodged between the chassis and other metal parts in the receiver.**
2. **Inspect all protective devices such as non-metallic control knobs, insulating fishpapers, cabinet backs, adjustment and compartment covers or shields, isolation resistor- capacity networks, mechanical insulators etc.**

ADJUSTMENT PRECAUTIONS

This model's setting are adjusted in two different ways: through the I²C bus control and in the conventional analog manner. The adjustments via the I²C bus control include preset-only items and variable data.
CAUTION: Make sure TV Set is in "Normal Condition" before switch to Service Mode for adjustment.

1. Setting the service mode by the microprocessor.

①. Short JA 137 & JA 138 for 1 second and release to switch to the service mode position, and the microprocessor is in input mode. (Adjustment through the I²C bus control).

②. Press the CH DOWN / UP key on the remote controller to get ready to select the mode one by one.

③. Press the CH DOWN / UP key on the remote controller to select the modes reversibly one by one.

④. Using the VOLUME UP/ DOWN key on the remote controller, the data can be modified.

⑤. Short JA 137 & JA 138 for 1 second and release to switch to the normal mode position, and the microprocessor is in out of the service mode.

2. Factory Presetting.

①.Short JA 137 & JA 138 then turn "ON" the main power and release to switch to the Service Mode position.Initial values are automatically preset, only when a new EEPROM is used (Judge with the first 4 bytes).

②. The initial data are preset as listed in page 5.

③. Make sure the data need modification or not (Initial data).

Note: Once the chassis has been assembly together and ready to be POWER ON for the FIRST TIME, make sure to short JA137 & JA138 to switch to the service mode position first and then turn on the main power switch (See 2-① above).

Precaution: If haven't done this initialization, it may possibly generate excessive Beam current.

3. For reference please check with memory map (GA-1AM Series type RH-IX3368CE Attachment)

■ SERVICE MODE

(1) In the Service Mode, Key is used to select the mode in the following order.

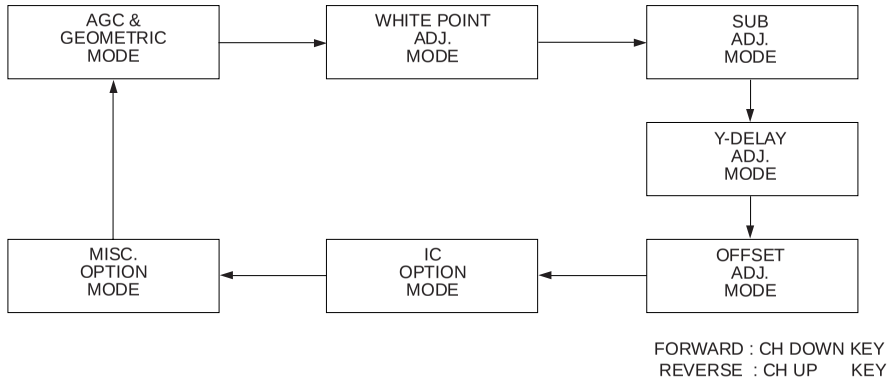

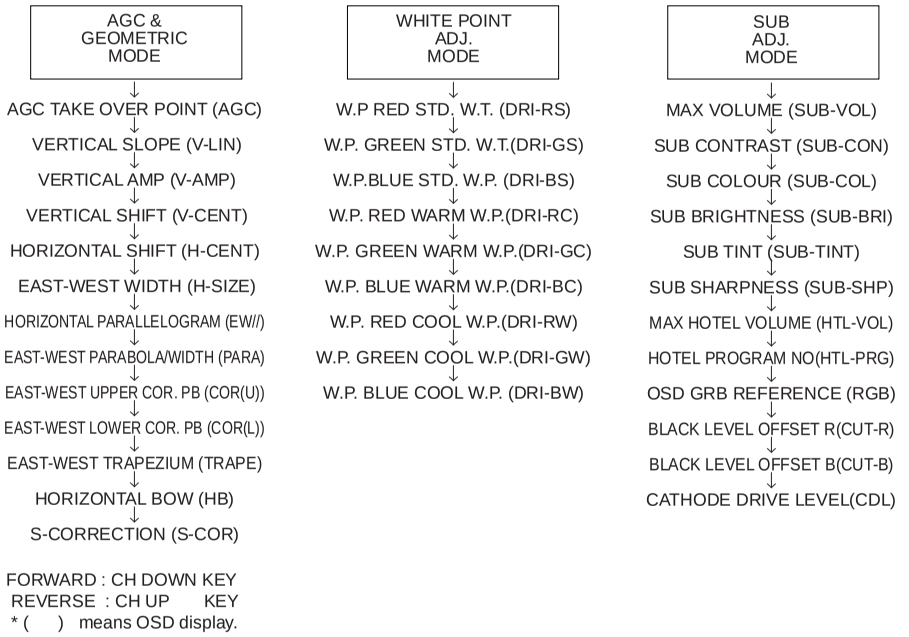

Y-DELAY ADJ. MODE
Y-D TIME FOR PAL (TV) (DL-PT)
Y-D TIME FOR SECAM (TV) (DL-ST)
Y-D TIME FOR N358 (TV) (DL-3T)
Y-D TIME FOR N443 (TV) (DL-4T)
Y-D TIME FOR B/W (TV) (DL-TV)
Y-D TIME FOR PAL (AV) (DL-PA)
Y-D TIME FOR SECAM (AV) (DL-SA)
Y-D TIME FOR N358 (AV) (DL-3A)
Y-D TIME FOR N443(AV) (DL-4A)
Y-D TIME FOR B/W (AV) (DL-AV)
*(Y-D : Y-DELAY)
OFFSET ADJ. MODE
COLOUR OFFSET (PAL) (COL-OP)
COLOUR OFFSET (SECAM) (COL-OS)
COLOUR OFFSET (NTSC358) (COL-O3)
COLOUR OFFSET (NTSC443) (COL-O4)
SHARPNESS OFFSET (PAL) (SHP-OP)
SHARPNESS OFFSET (SECAM) (SHP-OS)
SHARPNESS OFFSET (NTSC358) (SHP-O3)
SHARPNESS OFFSET (NTSC443) (SHP-O4)
IC OPTION MODE
VERTICAL SCAN DISABLE(VSD)
BLACK STRETCH (BKS)
AUTO VOLUME LEVELING(AVL)
FAST FILTER IF-PLL(FFI)
ENABLE VERTICAL GUARD (EVG)
EHT TRACKING MODE (EHT)
OVERSCAN SWITCH OFF(OSO)
AUTO COLOUR LIMIT(ACL)
FORCED COLOUR LIMIT(FCO)
MISC. OPTION MODE
SOUND SYSTEM M (S-M)
SOUND SYSTEM DK (S-DK)
SOUND SYSTEM I (S-I)
SOUND SYSTEM BG (S-BG)
PLAYBACK SECAM (P-SECAM)
FE (RF) NTSC 3.58 (F-N358)
FE (RF) NTSC 4.43 (F-N443)
FE (RF) SECAM (F-SECAM)
VIDEO MUTE AT IDENT LOSS (VMI)
VIDEO MUTE AT PROGRAM /SOURCE CHANGE (VMC)
HOTEL MODE (HTL)
REDUCED FM DEMODULATION GAIN FOR BTSC SIGNAL (BTSC)
A
A
NUMBER OF EXT AV SOURCE (AV)
FM WINDOW SELECTION (FMWS)
SOUND MUTE BIT 0 (SM0)
SOUND MUTE BIT 1 (SM1)
THAI LANGUAGE (THA)
ARABIC LANGUAGE (ARA)
MALAY LANGUAGE (MAL)
CHINESE LANGUAGE (CHI)
FRENCH LANGUAGE (FRE)
RUSSIAN LANGUAGE (RUS)
FORCED V-SYNC SLICING LEVEL(FSL)
SYNC OF OSD (HP2)
TUNER SELECTION (CPT)
B
B
BILINGUAL(BIL)
IF AGC SPEED BIT 0 (AGC0)
IF AGC SPEED BIT 1 (AGC1)
FOA Time Constant-RF (FOA-FE)
FOB Time Constant-RF (FOB-FE)
FOA Time Constant-AV (FOA-AV)
FOB Time Constant-AV (FOB-AV)
LED BLINK SPEED (LED-F)
VOLUME CONTROL TABLE (MSA)
OUTPUT VERTICAL GUARD (NDF)

* Direct Key-in Mode for Service Items in Service Mode

RC CODE (HEX)	R/C KEY NAME	SERVICE ITEM
FA	FUNCTION	AGC
C4	CONTRAST DOWN	V-LIN
A4	COLOUR DOWN	V-AMP
54	BRIGHTNESS DOWN	V-CENT
74	TINT DOWN	H-CENT
8D	SHARPNESS DOWN	EW//
F6	S-SYSTEM	HB
DC	BLUE BACK	S-COR
CA	TIMER	SUB-VOL
44	CONTRAST UP	SUB-CON
24	COLOUR UP	SUB-COL
94	BRIGHTNESS UP	SUB-BRI
B4	TINT UP	SUB-TINT
0D	SHARPNESS UP	SUB-SHP

AFTER SHORT JA 137 & JA 138 ,AND TURN ON THE MAIN POWER SWITCH,READ DATA FROM EEPROM ADDRESS 00H ~ 03H,AND COMPARE TO THE LIST BELOW, IF DIFFERENT, INITIALIZE THE EEPROM.

Address	:	Data	Address	:	Data
00H	:	55H	02H	:	43H
01H	:	4FH	03H	:	A1H

EEPROM ITEMS	OSD	DATA LENGTH	INITIAL DATA	FIX/ADJ	REMARKS
AGC TAKE OVER POINT	AGC	0~63	14	ADJ	
VERTICAL SLOPE	V-LIN	0~63	32	ADJ	
VERTICAL AMPLITUDE	V-AMP	0~63	32	ADJ	
VERTICAL SHIFT	V-CENT	0~63	32	ADJ	
HORIZONTAL SHIFT	H-CENT	0~63	32	ADJ	
EAST-WEST WIDTH	H-SIZE	0~63	32	*FIX	
HORIZONTAL PARALLELOGRAM	EW//	0~63	32	*FIX	
EAST-WEST PARABOLA/WIDTH	PARA	0~63	32	*FIX	
EAST-WEST UPPER CORNER PARABOLA	COR (U)	0~63	32	*FIX	
EAST-WEST LOWER CORNER PARABOLA	COR (L)	0~63	32	*FIX	
EAST-WEST TRAPEZIUM	TRAPE	0~63	32	*FIX	
HORIZONTAL BOW	HB	0~63	32	*FIX	
S-CORRECTION	S-COR	0~63	0	ADJ	*4
WHITE POINT RED STD WHITE TEMP	DRI-RS	0~63	32	*FIX	
WHITE POINT GREEN STD WHITE TEMP	DRI-GS	0~63	32	ADJ	
WHITE POINT BLUE STD WHITE TEMP	DRI-BS	0~63	32	ADJ	
WHITE POINT RED COOL WHITE TEMP	DRI-RC	0~63	25	ADJ	*3
WHITE POINT GREEN COOL WHITE TEMP	DRI-GC	0~63	32	ADJ	*3
WHITE POINT BLUE COOL WHITE TEMP	DRI-BC	0~63	32	ADJ	SAME AS (DRI-BS) DATA
WHITE POINT RED WARM WHITE TEMP	DRI-RW	0~63	32	*FIX	
WHITE POINT GREEN WARM WHITE TEMP	DRI-GW	0~63	32	ADJ	*8
WHITE POINT BLUE WARM WHITE TEMP	DRI-BW	0~63	32	ADJ	*8
MAX VOLUME	SUB-VOL	0~63	63	*FIX	
SUB CONTRAST	SUB-CON	0~63	63	ADJ	*6
SUB COLOUR	SUB-COL	0~63	32	ADJ	
SUB BRIGHTNESS	SUB-BRI	0~63	32	ADJ	
SUB TINT	SUB-TINT	0~63	32	ADJ	
SUB SHARPNESS	SUB-SHP	0~63	32 (20)	*FIX	
MAX HOTEL VOLUME	HTL-VOL	0~63	32	*FIX	
HOTEL PROGRAM NUMBER	HTL-PRG	0~99 OR>99FOR NONE	255	*FIX	
OSD RGB REFERENCE	RGB	0~15	15	ADJ	*7
BLACK LEVEL OFF-SET R	CUT-R	0~63	32	ADJ	
BLACK LEVEL OFF-SET G	CUT-G	0~63	32	ADJ	
CATHODE DRIVE LEVEL	CDL	0~15	0	ADJ	*2
Y-DELAY TIME FOR PAL(TV) [YD]	DL-PT	0~15	12	*FIX	
Y-DELAY TIME FOR SECAM(TV) [YD]	DL-ST	0~15	15	*FIX	
Y-DELAY TIME FOR N358 (TV) [YD]	DL-3T	0~15	12	*FIX	
Y-DELAY TIME FOR N443 (TV) [YD]	DL-4T	0~15	12	*FIX	
Y-DELAY TIME FOR B/W (TV) [YD]	DL-TV	0~15	12	*FIX	
Y-DELAY TIME FOR PAL (AV) [YD]	DL-PA	0~15	12	*FIX	
Y-DELAY TIME FOR SECAM (AV) [YD]	DL-SA	0~15	15	*FIX	
Y-DELAY TIME FOR N358 (AV) [YD]	DL-3A	0~15	12	*FIX	
Y-DELAY TIME FOR N443 (AV) [YD]	DL-4A	0~15	12	*FIX	
Y-DELAY TIME FOR B/W (AV) [YD]	DL-AV	0~15	12	*FIX	
COLOUR OFFSET (PAL)	COL-OP	0~15	8	ADJ	*5
COLOUR OFFSET (SECAM)	COL-OS	0~15	8	ADJ	*5
COLOUR OFFSET (NTSC358)	COL-O3	0~15	4	ADJ	*5
COLOUR OFFSET (NTSC443)	COL-O4	0~15	4	ADJ	*5
SHARPNESS OFFSET (PAL)	SHP-OP	0~15	8	*FIX	
SHARPNESS OFFSET (SECAM)	SHP-OS	0~15	4	*FIX	
SHARPNESS OFFSET (NTSC358)	SHP-O3	0~15	12 (8)	*FIX	
SHARPNESS OFFSET (NTSC443)	SHP-O4	0~15	8	*FIX	
VERTICAL SCAN DISABLE	VSD	0(DISABLE)/1(ENABLE)	0	*FIX	
BLACK STRETCH	BKS	0(DISABLE)/1(ENABLE)	1	*FIX	
AUTOMATIC VOLUME LEVELING	AVL	0(DISABLE)/1(ENABLE)	1	*FIX	
FAST FILTER IF-PLL	FFI	0(DISABLE)/1(ENABLE)	0	*FIX	
ENABLE VERTICAL GUARD (RGB BLANKING)	EVG	0(DISABLE)/1(ENABLE)	1	*FIX	
EHT TRACKING MODE (HCO)	EHT	0(DISABLE)/1(ENABLE)	1	*FIX	
OVERSCAN SWITCH OFF	OSO	0(DISABLE)/1(ENABLE)	0	*FIX	
AUTO COLOUR LIMIT	ACL	0(DISABLE)/1(ENABLE)	0	*FIX	
FORCED COLOUR LIMIT	FCO	0(DISABLE)/1(ENABLE)	0	*FIX	
SOUND SYSTEM M	S-M	0(DISABLE)/1(ENABLE)	0	*FIX	
SOUND SYSTEM DK	S-DK	0(DISABLE)/1(ENABLE)	1	*FIX	
SOUND SYSTEM I	S-I	0(DISABLE)/1(ENABLE)	1	*FIX	
SOUND SYSTEM BG	S-BG	0(DISABLE)/1(ENABLE)	1	*FIX	
PLAYBACK SECAM	P-SECAM	0(DISABLE)/1(ENABLE)	1	*FIX	
FE (RF) NTSC 3.58	F-N358	0(DISABLE)/1(ENABLE)	0	*FIX	
FE (RF) NTSC 4.43	F-N443	0(DISABLE)/1(ENABLE)	1	*FIX	
FE (RF) SECAM	F-SECAM	0(DISABLE)/1(ENABLE)	1	*FIX	
VIDEO MUTE AT IDENT LOSS	VMI	0(DISABLE)/1(ENABLE)	1	*FIX	
VIDEO MUTE AT PROGRAM/SOURCE CHANGE	VMC	0(DISABLE)/1(ENABLE)	1	*FIX	
HOTEL MODE	HTL	0(DISABLE)/1(ENABLE)	0	*FIX	
REDUCED FM DEMODULATOR GAIN FOR BTSC SIGNAL	BTSC	0(DISABLE)/1(ENABLE)	0	*FIX	
NUMBER OF EXTERNAL AV SOURCE	AV	0 FOR1 AV/1 FOR 2AV	1 (0)	*FIX	
FM WINDOW SELECTION	FMWS	0(DISABLE)/1(ENABLE)	0	*FIX	
SOUND MUTE BIT 0	SM0	0(DISABLE)/1(ENABLE)	1	*FIX	
SOUND MUTE BIT 1	SM1	0(DISABLE)/1(ENABLE)	0	*FIX	
THAI LANGUAGE	THA	0(DISABLE)/1(ENABLE)	0	*FIX	
ARABIC LANGUAGE	ARA	0(DISABLE)/1(ENABLE)	1	*FIX	
MALAY LANGUAGE	MAL	0(DISABLE)/1(ENABLE)	1	*FIX	
CHINESE LANGUAGE	CHI	0(DISABLE)/1(ENABLE)	1	*FIX	
FRENCH LANGUAGE	FRE	0(DISABLE)/1(ENABLE)	1	*FIX	
RUSSIAN LANGUAGE	RUS	0(DISABLE)/1(ENABLE)	1 (0)	*FIX	
FORCED V-SYNC SLICING LEVEL	FSL	0(DISABLE)/1(ENABLE)	0	*FIX	
SYNC OF OSD	HP2	0(DISABLE)/1(ENABLE)	0	*FIX	
TUNER SELECTION (0:SHARP/ALPS;1:MURATA)	CPT	0(DISABLE)/1(ENABLE)	0	*FIX	
BILINGUAL	BIL	0(DISABLE)/1(ENABLE)	0	*FIX	
IF AGC SPEED BIT 0	AGC0	0(DISABLE)/1(ENABLE)	1	*FIX	
IF AGC SPEED BIT 1	AGC1	0(DISABLE)/1(ENABLE)	0	*FIX	
PHI-1 TIME CONSTANT (RF)	FOA-FE	0(DISABLE)/1(ENABLE)	0	*FIX	
PHI-1 TIME CONSTANT (RF)	FOB-FE	0(DISABLE)/1(ENABLE)	0	*FIX	
PHI-1 TIME CONSTANT (OFF AIR)	FOA-AV	0(DISABLE)/1(ENABLE)	1	*FIX	
PHI-1 TIME CONSTANT (OFF AIR)	FOB-AV	0(DISABLE)/1(ENABLE)	1	*FIX	
LED BLINK SPEED	LED_F	0(DISABLE)/1(ENABLE)	0 (1)	*FIX	
VOLUME CONTROL PWM TABLE	MSA	0(DISABLE)/1(ENABLE)	0 (1)	*FIX	
OUTPUT VERTICAL GUARD	NDF	0(DISABLE)/1(ENABLE)	0 (1)	*FIX	

NOTE :

1) *FIX: PLEASE DO NOT CHANGE FIXED DATA WITHOUT SPECIFIC INSTRUCTION.
   Please set the EEPROM initial data according to the value in parenthesis ( ) before adjustment.
2) *2: CDL ADJUST = 5
3) *3: ADJUST DRI-RC AND DRI-GC AS FOLLOWS:

	SMEF	OTHER
DRI-RC =	27	25
DRI-GC =	(DRI-GS)-5	(DRI-GS)-7

4) *4: S-COR ADJUST = 17
5) *5: ADJUST COLOUR OFFSET AFTER ADJUST SUB-COLOUR.
   COLOUR OFFSET (PAL) COL-OP : 8 -----> 14
   COLOUR OFFSET (SECAM) COL-OS : 8 -----> 14
   COLOUR OFFSET (NTSC358) COL-O3 : 4 -----> 10
   COLOUR OFFSET (NTSC443) COL-O4 : 4 -----> 10
6) *6: SUB-CON = 52
7) *7: RGB = 6
8) *8 PLEASE REFER TO PAGE 8-2 (WHITE BALANCE ADJUSTMENT MODE)

INITIAL SHIPPING SETTING

(1). Please set to **MCL1** for all models.
(2). After set the MCL, please set the **INITIAL SETTING** for each models.
INITIAL 3 : For Singapore and Africa (All Channel Sound System are set to B/G)
INITIAL 4 : For Middle-East (All Channel Sound System are set to B/G)

MCL1 (HEX AE)		
CH-NO	**Fv (MHz)**	**SOUND SYS**
0		
1	48.25	B/G
2	62.25	B/G
3	77.25	D/K
4	175.25	B/G
5	182.25	B/G
6	183.25	D/K
7	191.25	D/K
8	196.25	B/G
9	199.25	M
10	210.25	B/G
11	224.25	B/G
12	471.25	B/G
13	487.25	I
14	503.25	B/G
15	575.25	B/G
16	583.25	B/G
17	599.25	B/G
18	621.25	M
19	639.25	D/K
20	703.25	B/G
21	735.25	I
22	767.25	B/G
23	815.25	B/G
24	855.25	I
25	855.25	B/G
26	55.25	M
27	83.25	M
28	183.25	M
29	193.25	M
30	217.25	M
31	471.25	M
32	477.25	M
33	693.25	M
34	41.10	
35	112.25	B/G
36	168.25	B/G
37		
38	294.25	B/G
39	463.25	B/G
40		
41	647.25	B/G
42	663.25	B/G
43	679.25	B/G
44	174.95	B/G
45	175.55	B/G
46		

SHIPPING SETTING & CHECKING

(1) The following default data has been factory-set for the EEPROM follow by INITIAL DATA selected.

ITEMS	DATA SETTING
LAST PROGRAM/CHANNEL	1
FLASHBACK PROGARM/CH	1
CHANNEL ENTRY DIGIT NUMBER	1
C-SYSTEM	AUTO
S-SYSTEM	*1
SKIP	OFF
AFC	ON
VOLUME	1
CONTRAST	MAX
COLOUR	CENTER
BRIGHTNESS	CENTER
TINT	CENTER
SHARPNESS	CENTER
WHITE TEMP	STANDARD
REMINDER TIMER	In-active, "--:--"
ON TIMER	In-active, "--:--"
OFF TIMER	In-active, "--:--"
LAST POWER	POWER-ON
LANGUAGE	*1
BLUE BACK MUTE	ON
HOTEL MODE	OFF
0 CHANNEL SKIP	ON
LAST TV/AV	TV

*1: Please refer defaults for LANGUAGE and SOUND SYSTEM per MODEL as follows,

INITIAL	LANGAUGE	SOUND SYSTEM
3	ENGLISH	B/G
4	ARABIC	B/G

FACTORY SETTING BY MODEL (Reference: Geomagnetism Adjustment)

MODEL	MAGNETIC FILED (H,V) nT		Background	Lang.	S-SYS	Lang. QTY
SINGAPORE	-10,000	40,000	12300K	ENGLISH	B/G	5
AFRICA	-10,000	40,000	12300K	ENGLISH	B/G	5
MID-EAST	30,000	20,000	18000K	ARABIC	B/G	5

*NOTE FOR OSD TYPE
5: ENGLISH/CHINESE/FRENCH/ARABIC/MALAY

ADJUSTMENT PRECAUTION:

Make sure TV Set is in "Normal Condition" before switch to service mode for adjustment.

PIF ADJUSTMENT

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	**Tuner IFT (PRESET)**	1. Get the tuner ready to receive the CH. E - 9 signal,but with no signal input. Adjust the PLL data. 2. Connect the sweep generator's output cable to the tuner antenna. (RF SWEEP) 3. Adjust the sweep generator's to 80dBuV. 4. Connect the response lead (use LOW IMPEDANCE probe with wave detector ; see Fig.1) to the tuner's IF output terminal. (This terminal must have the probe alone connected). 5. Set the RF AGC to 0 - 6 V with no saturation with the waveform. 6. Adjust the tuner IF coil to obtain the waveform as shown in Fig. 2. **Note: Be sure to keep the tuner cover in position during this adjustment.**	 Fig.1  Fig.2
2	**RF-AGC TAKE OVER POINT ADJUSTMENT (I²C BUS CONTROL)**	1. Receive "PAL COLOUR BAR" signal. ● Signal Strength: 57 ± 1 dBμV (75 ohm open) 2. Connect the oscilloscope to TP201(Tuner's AGC Terminal) as shown in Fig. 3. 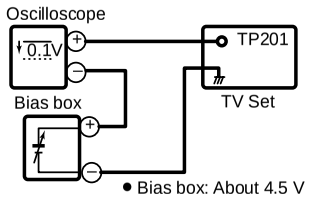 ● Bias box: About 4.5 V Fig. 3 3. Call "AGC" mode in service mode. Adjust the "AGC" bus data to obtain the Tuner output pin drop 0.1V below maximum voltage. 4. Change the antenna input signal to 63~67dBμV, and make sure there is no noise. 5. Turn up the input signal to 90~95 dBμV to be sure that there is no cross modulation beat.	**Note: For the 50 ohm signal strength gauge, when not using 50/75 impedance adapter, signal strength is 52±1dBμV(75 ohm open), instead of 57±1dBμV (75 ohm open).** **Precaution: The loss of using impedance adapter**

PURITY ADJUSTMENT

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	**PURITY ADJ.**	1. Receive the GREEN-ONLY signal. Adjust the beam current to about 500 μA. 2. Degauss the CRT enough with the degausing coil. **Note: Follow the Job Instruction Sheet to adjust the magnetic field.** 3. Maintain the purity magnet at the zero magnetic field and keep the static convergence roughly adjusted. 4. Observe the points a, b as shown in Fig. 4-1 through the microscope. Adjust the landing to the rank A requirements. 5. Orient the raster rotation to 0 eastward. 6. Tighten up the deflection coil screws. ● Tightening torque: 108 ± 20 N (11 ± 2 kgf) 7. Make sure the CRT corners landing meet the A rank requirements. If not, stick the magnet sheet to correct it. **Note: This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 500 μA.** * For the following colours press R/C RGB key to change. 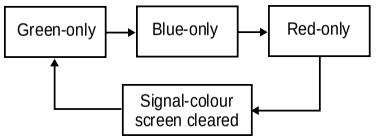	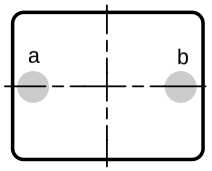 Fig. 4-1 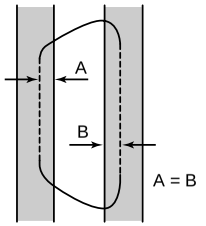 Fig. 4-2 Rank "A" (on the right of the CRT) 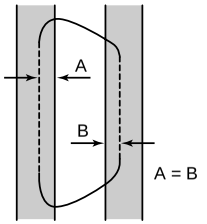 Fig. 4-3 Rank "A" (on the left of the CRT) * Press R/C RGB key for 1 second in NORMAL MODE, the colour will change to RGB mono colour mode.

CONVERGENCE ADJUSTMENT

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	**CONVERGENCE ADJ. (To be done after the purity adjustment)**	1. Receive the "Crosshatch Pattern" signal. 2. Using the remote controller, call NORMAL mode. **STATIC CONVERGENCE** 1. Turn the 4-pole magnet to a proper opening angle in order to superpose the blue and red colours. 2. Turn the 6-pole magnet to a proper opening angle in order to superpose the green colour over the blue and red colours. **DYNAMIC CONVERGENCE** 1. Adjust the convergence on the fringes of the screen in the following steps. a) Fig. 5-1: Drive the wedge at point "a" and swing the deflection coil upward. b) Fig. 5-2: Drive the wedge at points "b" and "c" and swing the deflection coil downward. c) Fig. 5-3: Drive the "c" wedge deeper and swing the deflection coil rightward. d) Fig. 5-4: Drive the "b" wedge deeper and swing the deflection coil leftward. 2. Fix all the wedges on the CRT and apply glass tape over them. 3. Apply lacquer to the deflection yoke lock screw, magnet unit (purity, 4-pole, 6-pole magnets) and magnet unit lock screw. Finally received the Red-only and Blue-only signals to make sure there is no other colours on the screen. **Note*** **SAMSUNG CRT : 32mm** **CPT CRT : 35mm** **TOSHIBA CRT : 35mm**	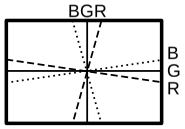 Fig. 5-1 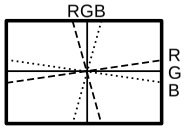 Fig. 5-2 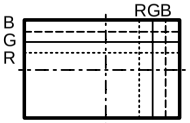 Fig. 5-3 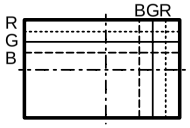 Fig. 5-4 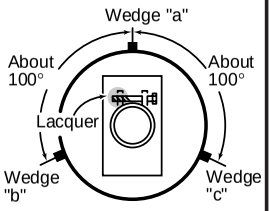 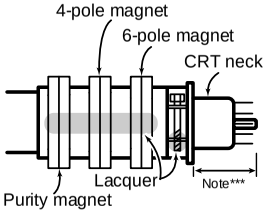

CRT CUT-OFF, SUB-BRIGHT AND WHITE BALANCE ADJUSTMENT

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	**CRT CUTOFF ADJUSTMENT (I²C BUS CONTROL)**	Remark 1. Before CRT cutoff adjustment, SUB-BRIGHT, DRI-RS/RW/RC, DRI-GS/GW/GC, DRI-BS/BW/BC, CUT-R and CUT-G must be INITIAL DATA. 2. CRT Cutoff adjustment must be done inside a dark room. 1. Switch TV to VIDEO mode,BLUE BACK OFF, with NO VIDEO signal. 2. Press R/C to set Picture Normal condition. 3. First, off the screen by adjust screen variable resistor. *4. Next, checking AKB circuit function by slowly increase screen variable resistor until colour raster suddenly on and off (AKB start function). 5. Then continue adjust until retrace line appear. 6. Finally, slowly decrease the screen variable resistor until screen retrace line cut off. (Not Raster) **Note :** **Must confirm the AKB function in set before continue the next adjustment.**	*Alternative Procedure (1) Step (1), (2), (3) and (4) are same as beside procedure. (2) Then continue adjust until retrace line appear and make sure the colour appear whether red, green or blue. (3) Connect the oscilloscope to related test points as below which is based on colour appear at (2) RED = TP47R, GREEN = TP47G, BLUE = TP47B. (4) Then adjust Screen VR until the tip of signal reach 3.3Vdc. 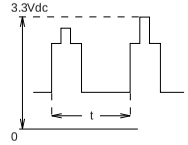
2	**SUB-BRIGHTNESS ADJUSMENT (I²C BUS CONTROL)**	1. Call " SUB-BRI" in service mode. (Receive Crosshatch pattern with 4 black level windows) *(2) Adjust the " SUB BRIGHT " bus data in order that the line 1and 2 have the same darkness wherelse line 3 is one step (data) brighter than line 2. Finally data minus 1 to make line 1, 2, and 3 are in same level (darkness).	1 Line 3 is one step (data) brighter than line 2 2
3	**WHITE BALANCE SERVICE MODE ADJ. (I²C BUS CONTROL)**	1. Receive the "WHITE" pattern with BURST signal. 2. Press R/C to set Picture NORMAL condition. 3. Connect the DC miliammeter between TP602 (-) TP603 (+). 4. Check Beam current should be around 800 μA. 5. Set it to service mode and adjust the DRI-GS, & DRI-BS data to have a colour temperature of 12300°K or 18000°K (white). * Note . 6. Receive "WHITE" pattern, WITH BURST signal, and set BRIGHTNESS Y by generator, to **10 cd/m2 (MINOLTA CA-100) by reducing LUMINATE Y signal. 7. Adjust "CUT-R" & "CUT-G" to get desired colour temperature #. Then go back NORMAL mode (HIGH BRIGHT**) to check colour temperature. If out of range, back to (1). **Note: This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 500μA.** * ADJUST DRI-GC/GW, DRI-BC/BW as following DATA, after finishing DRI-BS and DRI-GS DATA ADJUSTMENT. DRI-RW = 32 (FIXED), DRI-RS = 32 (FIXED) DRI-BC = "DRI-BS" (For 12300°K And 18000°K Condition)	# 12300°K X : 0.272 Y : 0.275 # 18000°K X : 0.255 Y : 0.255 (MINOLTA COLOUR ANALYZER CA-100) ***Note: Above Data can be UP/DOWN by Volume key.** LOW HIGH 10cd/m2 200cd/m2 * 12300°K DRI-GW="DRI-GS"-7 DRI-BW="DRI-BS"-7 DRI-GC="DRI-GS"-7 DRI-RC=25 * 18000°K DRI-GW="DRI-GS"-7 DRI-BW="DRI-BS"-7 DRI-GC="DRI-GS"-5 DRI-RC=27

CRT CUT-OFF, SUB-BRIGHT AND WHITE BALANCE ADJUSTMENT (Continued)

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
4	**Max beam check**	1. Receive the "Monoscope Pattern" signal. 2. Press R/C to set Picture NORMAL condition. 3. Connect the DC miliammeter between TP603 (+) & TP602 (–). (Full Scale: 3 mA Range) 4. Beam current must be within 800 ± 100 µA.(14")	

HORIZONTAL, VERTICAL DEFLECTION LOOP AND FOCUSADJUSTMENT

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	**V-LIN (I²C BUS CONTROL)**	1. Receive Monoscope Pattern Signal. 2. Call the "V-LIN" mode. 3. Increase or decrease "V-LIN" by Volume key till the horizontal line in the center of monoscope is just at the position where the blanking starts.	
2	**V-CENT (I²C BUS CONTROL)**	1. Call the "V-CENT" mode. 2. Increase or decrease "V-CENT" by Volume key till the picture is centered.	
3	**V-AMP (I²C BUS CONTROL)**	1. Call the "V-AMP" mode. 2. Increase or decrease "V-AMP" by Volume key to set overscan of 9.5% typical. Adjustment Spec 9.5% range +1% -0%.	
4	**H-CENT (I²C BUS CONTROL)**	1. Call the "H-CENT" mode. 2. Increase or decrease "H-CENT" by Volume key to center the picture horizontal.	
5	**S-CORRECTION (I²C BUS CONTROL)**	1. SET DATA TO 17. * Check the E-5 CH Monoscope Pattern then re-adjust V-Slope, V-Shift and V-Amp to makesure adjustment is in acceptable Ring-Shaped.	
6	**SUB-SHARPNESS**	1. SET DATA TO 20.	
1	**Focus**	1. Receive the "Monoscope Pattern" signal. 2. Press R/C to set Picture NORMAL condition. 3. Adjust the focus control to get the best focusing.	

PAL CHROMA ADJUSTMENT

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	**SUB COLOUR (I²C BUS CONTROL)**	1. Receive the "PAL Colour Bar" signal. 2. Press R/C to set Picture Normal condition. 3. Connect the oscilloscope to Red cathode(D881 Cathode). • Range : 20 V/div. (AC) (Using 10:1 probe) • Sweep time : 10 µsec/div. 4. Using the R/C call "SUB COL" in SERVICE mode. Adjust SUB COLOUR bus data, so that the 75% White & Red portions of PAL Color Bar be at the same level shown as **Fig. 1-1**. 5. Clear the SERVICE mode.	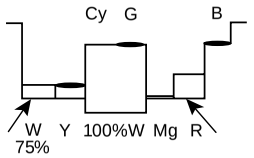 Fig. 1-1

NTSC CHROMA ADJUSTMENT

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	**SUB-TINT (I²C BUS CONTROL)**	1. Receive the "NTSC 3.58 Colour Bar" signal thru AV in. 2. Connect the oscilloscope to TP47B (P882 pin 5) BLUE-OUT. • Range : 100mV/div. (AC)(Use Probe 10:1) • Sweep time : 10 µsec/div. 3. Call the "SUB-TINT" mode in service mode. Adjust the "SUB-TINT" bus data to obtain the waveform shown as Fig. 1-1. 4. Clear the SERVICE mode.	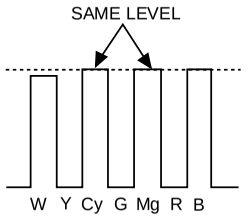 Fig. 1-1

PROTECTOR OPERATION CHECKING

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	**BEAM PROTECTOR**	1. Receive "Monoscope Pattern" signal. 2. Set CONTRAST MAX. 3. Set BRIGHT MAX. 4. During the Collector & Emitter of Q883/5/7 short, make sure the protector ON and switch to standby mode.	* Select one of Q883/5/7 to do each short test.
2	**H•V PROTECTOR**	1. Receive "Monoscope Pattern" signal. 2. Connect output of Bias Box to D603 cathode (R610 side). 3. Set voltage of Bias Box to 18V and make sure the protector is not working. 4. Set voltage of Bias Box to 27V, and make sure the protector is working.	
3	**Other protectors**	1. Once finish rectified Electrolytic Capacitor short testing in +B line, check all possible damaged components on +B line. (Use random selected set for inspection)	

A/V INPUT AND OUTPUT CHECKING

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	**VIDEO AND AUDIO OUTPUT CHECK**	1. Receive the "PAL Colour Bar" signal (100% White Colour Bar, Sound 400 Hz 100% Mod). 2. Terminate the Video output with a 75 ohm impedance. Make sure the output is as specified (1.0 Vp-p ±3 dB). 3. Terminate the Audio output with a 10k ohm impedance. Make sure the O/P is as specified (1.76 Vp-p ±3 dB).	
2	**VIDEO AND AUDIO INPUT CHECK**	1. Using the TV/AV key on the remote controller, make sure that the modes change in order of TV, AV & TV again and the video & audio output are according to the input terminal for each mode.If connect input to Front and Rear AV terminal, input terminal of Front AV will be selected.	

FUNCTION OPERATION CHECKING (VIDEO AND AUDIO)

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	**CONTRAST key**	1. Receive "Monoscope Pattern" signal. 2. Set P-Mode to select CONTRAST. 3. Press Volume Up/Down key to check whether the CONTRAST effect is OK or not.	
2	**COLOUR key**	1. Receive "Colour Bar" signal. 2. Set P-Mode to select COLOUR. 3. Press Volume Up/Down key to check whether the COLOUR effect is OK or not.	
3	**BRIGHTNESS key**	1. Receive "Monoscope Pattern" signal. 2. Set P-Mode to select BRIGHTNESS. 3. Press Volume Up/Down key to check whether the BRIGHTNESS effect is OK or not.	
4	**TINT key**	1. Receive the "NTSC Colour Bar" signal thru AV in. 2. Set P-Mode to select TINT. 3. Press Volume Up/Down key to check TINT, UP for GREEN direction and DOWN for PURPLE direction whether is OK or not.	
5	**SHARPNESS Key**	1. Receive "Monoscope Pattern" signal. 2. Set P-mode to select SHARPNESS. 3. Press Volume Up/Down key to check whether the SHARPNESS effect is OK or not.	
6	**CH DISPLAY COLOUR**	1. All Ch (1~99) will have an OSD display of the channel number in green colour under AFT ON condition.	
7	**NORMAL Key**	1. Once in PICTURE Mode, and the NORMAL key is pressed, all the settings will be present to normal setting. (Normal setting value for every mode). • CONTRAST : MAX • COLOUR : CENTER • BRIGHTNESS : CENTER • TINT : CENTER • SHARPNESS : CENTER	**Notes:If nothing is display mean contrast, colour, bright, tint, sharpness are all in normal setting.**
8	**WHITE TEMP**	1. Receive "Monoscope Pattern" signal. 2. Set FUNCTION to select WHITE TEMP. 3. Press Volume Up/Down key to check WHITE TEMP Option, STANDARD: NORMAL SETTING, WARM for more REDDISH direction changing, COOL for more BLUISH direction changing.	

FUNCTION OPERATION CHECKING (VIDEO AND AUDIO)
(Continued)

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
9	**COLOUR SYSTEM**	1. Receive the "PAL COLOUR BAR" signal, press the COLOUR SYSTEM key to select modes except PAL, check the COLOUR is not working properly. Then, select the "PAL" mode. Check again its colour so that it is working properly. 2. Receive "SECAM COLOUR BAR" signal, press COLOUR SYSTEM key to select modes except SECAM, check the COLOUR is not working properly. Then, select the "SECAM" mode. Check again its colour so that it is working properly. 3. Receive "NTSC 4.43/3.58 COLOUR BAR" signal thru AV, press COLOUR SYSTEM key to select modes except N4.43/3.58, check the COLOUR is not working properly. Then, select the "NTSC 4.43/3.58" mode. Check again its colour so that it is working properly.	
10	**SOUND SYSTEM**	1. Receive "PAL-D/K" signal, press the "SOUND SYSTEM" to select B/G, I. Check the sound output is not working properly. Select D/K and check the sound output to make sure it is working properly. 2. Receive "PAL-I" signal, press the "SOUND SYSTEM" to select B/G, D/K. Check the sound output is not working properly. Select I and check the sound output to make sure it is working properly. 3. Receive "PAL-B/G" signal, press the "SOUND SYSTEM"to select I, D/K. Check the sound output is not working properly. Select B/G and check the sound output to make sure it is working properly.	
11	**NOISE MUTE CHECKING**	1. Receive "PAL COLOUR BAR" signal. 2. Turn up the volume control to maximum, make sure the sound is heard from the speakers. Then put the unit in no signal state. 3. Check the sound mute is effective. 4. Finally turn sound level of CTV to minimum.	
12	**OSD LANGUAGE QUANTITY CHECK**	Check OSD LANGUAGE quantity and type as English, Chinese, French, Arabic and Malay.	

HOTEL MODE CHECKING

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	**HOTEL MODE FUNCTION CHECKING**	1. Press the R/C FUNCTION key until language appear, within five seconds press the (one/two digit) key and keep pressing it for five seconds, then the Hotel Mode with four digits password appears. 2. Key in the four digits password starting with number "1", "3", "7", "9" then the Hotel Mode will be enable, to switch ON/OFF the Hotel Mode please press volume up/down at R/C. HOTEL ON ← Set volume up/down by R/C key PASSWORD**** ← Input 1,3,7,9 by R/C key 3. After "ON" the Hotel Mode, user can't control Preset mode, Fine Tuning, Skip mode and System selection. Other functions are allowed to be used. **Note: Please OFF HOTEL mode after finish checking the hotel mode.** 4. To "OFF" HOTEL Mode, please follow steps (1) and (2) .	

SHOCK TEST CHECKING

No.	Adjusting point	Adjusting procedure/conditions	Waveform and others
1	**SHOCK TEST**	1. Hit at the top of TV set for two times. 2. Check TV set not damage and TV operation operate correctly.	

MEMORY MAP

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
00	PASS WORD								55	00-FF							
01	PASS WORD								4F	00-FF							
02	PASS WORD								43	00-FF							
03	PASS WORD								A1	00-FF							
04																	
05																	
06	AGC TAKE-OVER								0E	00-3F							
07	V-SLOPE								20	00-3F							
08	V-AMPLITUDE								20	00-3F							
09	V-CENTER								20	00-3F							
0A	H-CENTER								20	00-3F							
0B	H-SIZE								20	00-3F							
0C	EW-PARALLELOGRAM								20	00-3F							
0D	EW-PARABOLA/WIDTH								20	00-3F							
0E	EW-UPPER CORNER								20	00-3F							
0F	EW-LOWER CORNER								20	00-3F							
10	EW-TRAPEZIUM								20	00-3F							
11	HORIZONTAL-BOW								20	00-3F							
12	S-CORRECTION								00	00-3F							
13																	
14																	
15																	
16	DRIVE-R (STANDARD)								20	00-3F							
17	DRIVE-G (STANDARD)								20	00-3F							
18	DRIVE-B (STANDARD)								20	00-3F							
19	DRIVE-R (WARM)								20	00-3F							
1A	DRIVE-G (WARM)								20	00-3F							
1B	DRIVE-B (WARM)								20	00-3F							
1C	DRIVE-R (COOL)								19	00-3F							
1D	DRIVE-G (COOL)								20	00-3F							
1E	DRIVE-B (COOL)								20	00-3F							
1F																	
20																	
21																	
22	SUB-VOLUME								3F	00-3F							
23	SUB-CONTRAST								3F	00-3F							
24	SUB-COLOUR								20	00-3F							
25	SUB-BRIGHTNESS								20	00-3F							
26	SUB-TINT								20	00-3F							
27	SUB-SHARPNESS								20	00-3F							
28	HTL-VOLUME								20	00-3F							
29	HTL-POSITION								FF	00-FF							
2A																	
2B																	
2C																	
2D	OSD-REFERENCE								0F	00-0F							
2E	CUTOFF LEVEL -OFFSET R								20	00-3F							(1) 20th August 2001:Change of range & default.
2F	CUTOFF LEVEL -OFFSET G								20	00-3F							
30					CATHODE DRIVE LEVEL				00	00-0F							
31					Y-DELAY (TV PAL)				0C	00-0F							
32					Y-DELAY (TV SECAM)				0F	00-0F							
33					Y-DELAY (TV N358)				0C	00-0F							
34					Y-DELAY (TV N443)				0C	00-0F							
35					Y-DELAY (TV BW)				0C	00-0F							
36					Y-DELAY (AV PAL)				0C	00-0F							
37					Y-DELAY (AV SECAM)				0F	00-0F							
38					Y-DELAY (AV N358)				0C	00-0F							
39					Y-DELAY (AV N443)				0C	00-0F							
3A					Y-DELAY (AV BW)				0C	00-0F							
3B					COLOUR-OFFSET (PAL)				08	00-0F							
3C					COLOUR-OFFSET (SECAM)				08	00-0F							
3D					COLOUR-OFFSET (N358)				04	00-0F							
3E					COLOUR-OFFSET (N443)				04	00-0F							
3F					SHARPNESS-OFFSET (PAL)				08	00-0F							
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
40					SHARPNESS-OFFSET (SECAM)				04	00-0F							
41					SHARPNESS-OFFSET (N358)				0C	00-0F							
42					SHARPNESS-OFFSET (N443)				08	00-0F							
43																	
44	FCO	ACL	OSO	EHT	EVG	FFI	AVL	BKS	1B	00-FF							
45	SECAM	N443	N358	PB-SECAM	BG	I	DK	M	DE	00-FF							
46	SM1	SM0	FMWS	AV	BTSC	HTL	VMC	VMI	53	00-FF							
47	HP2	FSL	RUS	FRA	CHN	MLY	ARB	THA	3E	00-FF							
48	FOB-AV	FOA-AV	FOB-FE	FOA-FE	AGC1	AGC0	BIL	CPT	C4	00-FF							
49						NDF	MSA	LED-F	00	00-03							(1) 20th August 2001: Added 3 new items.
4A																	
4B																	
4C	VOLUME								01	00-3C							
4D	CONTRAST								3C	00-3C							
4E	COLOUR								1E	00-3C							
4F	BRIGHTNESS								1E	00-3C							
50	TINT								1E	00-3C							
51	SHARPNESS								1E	00-3C							
52																	
53																	
54																	
55	POSITION/AV1/AV2								01	00-FF							
56	FAV-POS A								0A	00-FF							
57	FAV-POS B								14	00-FF							
58	FAV-POS C								1E	00-FF							
59	FAV-POS D								28	00-FF							
5A																	
5B																	
5C	LAST POWER MODE								00	00-01							
5D	WHITE-TEMP								00	00-02							
5E	BLUE BACK								00	00-01							
5F	LANGUAGE								00	00-07							
60	LAST DIGIT MODE (1 OR 2)								00	00-01							
61																	
62	SKIP 0	SKIP 1	SKIP 2	SKIP 3	SKIP 4	SKIP 5	SKIP 6	SKIP 7	80	00-FF							
63	SKIP 8	SKIP 9	SKIP 10	SKIP 11	SKIP 12	SKIP 13	SKIP 14	SKIP 15	00	00-FF							
64	SKIP 16	SKIP 17	SKIP 18	SKIP 19	SKIP 20	SKIP 21	SKIP 22	SKIP 23	00	00-FF							
65	SKIP 24	SKIP 25	SKIP 26	SKIP 27	SKIP 28	SKIP 29	SKIP 30	SKIP 31	00	00-FF							
66	SKIP 32	SKIP 33	SKIP 34	SKIP 35	SKIP 36	SKIP 37	SKIP 38	SKIP 39	00	00-FF							
67	SKIP 40	SKIP 41	SKIP 42	SKIP 43	SKIP 44	SKIP 45	SKIP 46	SKIP 47	00	00-FF							
68	SKIP 48	SKIP 49	SKIP 50	SKIP 51	SKIP 52	SKIP 53	SKIP 54	SKIP 55	00	00-FF							
69	SKIP 56	SKIP 57	SKIP 58	SKIP 59	SKIP 60	SKIP 61	SKIP 62	SKIP 63	00	00-FF							
6A	SKIP 64	SKIP 65	SKIP 66	SKIP 67	SKIP 68	SKIP 69	SKIP 70	SKIP 71	00	00-FF							
6B	SKIP 72	SKIP 73	SKIP 74	SKIP 75	SKIP 76	SKIP 77	SKIP 78	SKIP 79	00	00-FF							
6C	SKIP 80	SKIP 81	SKIP 82	SKIP 83	SKIP 84	SKIP 85	SKIP 86	SKIP 87	00	00-FF							
6D	SKIP 88	SKIP 89	SKIP 90	SKIP 91	SKIP 92	SKIP 93	SKIP 94	SKIP 95	00	00-FF							
6E	SKIP 96	SKIP 97	SKIP 98	SKIP 99					00	00-FF							
6F																	
70																	
71																	
72																	
73																	
74	TUNING FREQUANCY (HIGHER PART)										S-SYS						POS 0
75	TUNING FREQUANCY (LOWER PART)										000:BG						
76	S-SYS			AFT	(auto)			C-SYS			001:I						
77	TUNING FREQUANCY (HIGHER PART)										010:DK						POS 1
78	TUNING FREQUANCY (LOWER PART)										011:M						
79	S-SYS			AFT	(auto)			C-SYS									
7A	TUNING FREQUANCY (HIGHER PART)										AFT						POS 2
7B	TUNING FREQUANCY (LOWER PART)										0:OFF						
7C	S-SYS			AFT	(auto)			C-SYS			1:ON						
7D	TUNING FREQUANCY (HIGHER PART)																POS 3
7E	TUNING FREQUANCY (LOWER PART)																
7F	S-SYS			AFT	(auto)			C-SYS									
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
80	TUNING FREQUANCY (HIGHER PART)																POS 4
81	TUNING FREQUANCY (LOWER PART)																
82	S-SYS			AFT	(auto)			C-SYS									
83	TUNING FREQUANCY (HIGHER PART)																POS 5
84	TUNING FREQUANCY (LOWER PART)																
85	S-SYS			AFT	(auto)			C-SYS									
86	TUNING FREQUANCY (HIGHER PART)																POS 6
87	TUNING FREQUANCY (LOWER PART)																
88	S-SYS			AFT	(auto)			C-SYS									
89	TUNING FREQUANCY (HIGHER PART)																POS 7
8A	TUNING FREQUANCY (LOWER PART)																
8B	S-SYS			AFT	(auto)			C-SYS									
8C	TUNING FREQUANCY (HIGHER PART)																POS 8
8D	TUNING FREQUANCY (LOWER PART)																
8E	S-SYS			AFT	(auto)			C-SYS									
8F	TUNING FREQUANCY (HIGHER PART)																POS 9
90	TUNING FREQUANCY (LOWER PART)																
91	S-SYS			AFT	(auto)			C-SYS									
92	TUNING FREQUANCY (HIGHER PART)																POS 10
93	TUNING FREQUANCY (LOWER PART)																
94	S-SYS			AFT	(auto)			C-SYS									
95	TUNING FREQUANCY (HIGHER PART)																POS 11
96	TUNING FREQUANCY (LOWER PART)																
97	S-SYS			AFT	(auto)			C-SYS									
98	TUNING FREQUANCY (HIGHER PART)																POS 12
99	TUNING FREQUANCY (LOWER PART)																
9A	S-SYS			AFT	(auto)			C-SYS									
9B	TUNING FREQUANCY (HIGHER PART)																POS 13
9C	TUNING FREQUANCY (LOWER PART)																
9D	S-SYS			AFT	(auto)			C-SYS									
9E	TUNING FREQUANCY (HIGHER PART)																POS 14
9F	TUNING FREQUANCY (LOWER PART)																
A0	S-SYS			AFT	(auto)			C-SYS									
A1	TUNING FREQUANCY (HIGHER PART)																POS 15
A2	TUNING FREQUANCY (LOWER PART)																
A3	S-SYS			AFT	(auto)			C-SYS									
A4	TUNING FREQUANCY (HIGHER PART)																POS 16
A5	TUNING FREQUANCY (LOWER PART)																
A6	S-SYS			AFT	(auto)			C-SYS									
A7	TUNING FREQUANCY (HIGHER PART)																POS 17
A8	TUNING FREQUANCY (LOWER PART)																
A9	S-SYS			AFT	(auto)			C-SYS									
AA	TUNING FREQUANCY (HIGHER PART)																POS 18
AB	TUNING FREQUANCY (LOWER PART)																
AC	S-SYS			AFT	(auto)			C-SYS									
AD	TUNING FREQUANCY (HIGHER PART)																POS 19
AE	TUNING FREQUANCY (LOWER PART)																
AF	S-SYS			AFT	(auto)			C-SYS									
B0	TUNING FREQUANCY (HIGHER PART)																POS 20
B1	TUNING FREQUANCY (LOWER PART)																
B2	S-SYS			AFT	(auto)			C-SYS									
B3	TUNING FREQUANCY (HIGHER PART)																POS 21
B4	TUNING FREQUANCY (LOWER PART)																
B5	S-SYS			AFT	(auto)			C-SYS									
B6	TUNING FREQUANCY (HIGHER PART)																POS 22
B7	TUNING FREQUANCY (LOWER PART)																
B8	S-SYS			AFT	(auto)			C-SYS									
B9	TUNING FREQUANCY (HIGHER PART)																POS 23
BA	TUNING FREQUANCY (LOWER PART)																
BB	S-SYS			AFT	(auto)			C-SYS									
BC	TUNING FREQUANCY (HIGHER PART)																POS 24
BD	TUNING FREQUANCY (LOWER PART)																
BE	S-SYS			AFT	(auto)			C-SYS									
BF	TUNING FREQUANCY (HIGHER PART)																POS 25
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
C0	TUNING FREQUANCY (LOWER PART)																POS 25
C1	S-SYS			AFT	(auto)			C-SYS									
C2	TUNING FREQUANCY (HIGHER PART)																POS 26
C3	TUNING FREQUANCY (LOWER PART)																
C4	S-SYS			AFT	(auto)			C-SYS									
C5	TUNING FREQUANCY (HIGHER PART)																POS 27
C6	TUNING FREQUANCY (LOWER PART)																
C7	S-SYS			AFT	(auto)			C-SYS									
C8	TUNING FREQUANCY (HIGHER PART)																POS 28
C9	TUNING FREQUANCY (LOWER PART)																
CA	S-SYS			AFT	(auto)			C-SYS									
CB	TUNING FREQUANCY (HIGHER PART)																POS 29
CC	TUNING FREQUANCY (LOWER PART)																
CD	S-SYS			AFT	(auto)			C-SYS									
CE	TUNING FREQUANCY (HIGHER PART)																POS 30
CF	TUNING FREQUANCY (LOWER PART)																
D0	S-SYS			AFT	(auto)			C-SYS									
D1	TUNING FREQUANCY (HIGHER PART)																POS 31
D2	TUNING FREQUANCY (LOWER PART)																
D3	S-SYS			AFT	(auto)			C-SYS									
D4	TUNING FREQUANCY (HIGHER PART)																POS 32
D5	TUNING FREQUANCY (LOWER PART)																
D6	S-SYS			AFT	(auto)			C-SYS									
D7	TUNING FREQUANCY (HIGHER PART)																POS 33
D8	TUNING FREQUANCY (LOWER PART)																
D9	S-SYS			AFT	(auto)			C-SYS									
DA	TUNING FREQUANCY (HIGHER PART)																POS 34
DB	TUNING FREQUANCY (LOWER PART)																
DC	S-SYS			AFT	(auto)			C-SYS									
DD	TUNING FREQUANCY (HIGHER PART)																POS 35
DE	TUNING FREQUANCY (LOWER PART)																
DF	S-SYS			AFT	(auto)			C-SYS									
E0	TUNING FREQUANCY (HIGHER PART)																POS 36
E1	TUNING FREQUANCY (LOWER PART)																
E2	S-SYS			AFT	(auto)			C-SYS									
E3	TUNING FREQUANCY (HIGHER PART)																POS 37
E4	TUNING FREQUANCY (LOWER PART)																
E5	S-SYS			AFT	(auto)			C-SYS									
E6	TUNING FREQUANCY (HIGHER PART)																POS 38
E7	TUNING FREQUANCY (LOWER PART)																
E8	S-SYS			AFT	(auto)			C-SYS									
E9	TUNING FREQUANCY (HIGHER PART)																POS 39
EA	TUNING FREQUANCY (LOWER PART)																
EB	S-SYS			AFT	(auto)			C-SYS									
EC	TUNING FREQUANCY (HIGHER PART)																POS 40
ED	TUNING FREQUANCY (LOWER PART)																
EE	S-SYS			AFT	(auto)			C-SYS									
EF	TUNING FREQUANCY (HIGHER PART)																POS 41
F0	TUNING FREQUANCY (LOWER PART)																
F1	S-SYS			AFT	(auto)			C-SYS									
F2	TUNING FREQUANCY (HIGHER PART)																POS 42
F3	TUNING FREQUANCY (LOWER PART)																
F4	S-SYS			AFT	(auto)			C-SYS									
F5	TUNING FREQUANCY (HIGHER PART)																POS 43
F6	TUNING FREQUANCY (LOWER PART)																
F7	S-SYS			AFT	(auto)			C-SYS									
F8	TUNING FREQUANCY (HIGHER PART)																POS 44
F9	TUNING FREQUANCY (LOWER PART)																
FA	S-SYS			AFT	(auto)			C-SYS									
FB	TUNING FREQUANCY (HIGHER PART)																POS 45
FC	TUNING FREQUANCY (LOWER PART)																
FD	S-SYS			AFT	(auto)			C-SYS									
FE	TUNING FREQUANCY (HIGHER PART)																POS 46
FF	TUNING FREQUANCY (LOWER PART)																
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
100		S-SYS		AFT	(auto)			C-SYS									POS 46
101				TUNING FREQUANCY (HIGHER PART)													POS 47
102				TUNING FREQUANCY (LOWER PART)													
103		S-SYS		AFT	(auto)			C-SYS									
104				TUNING FREQUANCY (HIGHER PART)													POS 48
105				TUNING FREQUANCY (LOWER PART)													
106		S-SYS		AFT	(auto)			C-SYS									
107				TUNING FREQUANCY (HIGHER PART)													POS 49
108				TUNING FREQUANCY (LOWER PART)													
109		S-SYS		AFT	(auto)			C-SYS									
10A				TUNING FREQUANCY (HIGHER PART)													POS 50
10B				TUNING FREQUANCY (LOWER PART)													
10C		S-SYS		AFT	(auto)			C-SYS									
10D				TUNING FREQUANCY (HIGHER PART)													POS 51
10E				TUNING FREQUANCY (LOWER PART)													
10F		S-SYS		AFT	(auto)			C-SYS									
110				TUNING FREQUANCY (HIGHER PART)													POS 52
111				TUNING FREQUANCY (LOWER PART)													
112		S-SYS		AFT	(auto)			C-SYS									
113				TUNING FREQUANCY (HIGHER PART)													POS 53
114				TUNING FREQUANCY (LOWER PART)													
115		S-SYS		AFT	(auto)			C-SYS									
116				TUNING FREQUANCY (HIGHER PART)													POS 54
117				TUNING FREQUANCY (LOWER PART)													
118		S-SYS		AFT	(auto)			C-SYS									
119				TUNING FREQUANCY (HIGHER PART)													POS 55
11A				TUNING FREQUANCY (LOWER PART)													
11B		S-SYS		AFT	(auto)			C-SYS									
11C				TUNING FREQUANCY (HIGHER PART)													POS 56
11D				TUNING FREQUANCY (LOWER PART)													
11E		S-SYS		AFT	(auto)			C-SYS									
11F				TUNING FREQUANCY (HIGHER PART)													POS 57
120				TUNING FREQUANCY (LOWER PART)													
121		S-SYS		AFT	(auto)			C-SYS									
122				TUNING FREQUANCY (HIGHER PART)													POS 58
123				TUNING FREQUANCY (LOWER PART)													
124		S-SYS		AFT	(auto)			C-SYS									
125				TUNING FREQUANCY (HIGHER PART)													POS 59
126				TUNING FREQUANCY (LOWER PART)													
127		S-SYS		AFT	(auto)			C-SYS									
128				TUNING FREQUANCY (HIGHER PART)													POS 60
129				TUNING FREQUANCY (LOWER PART)													
12A		S-SYS		AFT	(auto)			C-SYS									
12B				TUNING FREQUANCY (HIGHER PART)													POS 61
12C				TUNING FREQUANCY (LOWER PART)													
12D		S-SYS		AFT	(auto)			C-SYS									
12E				TUNING FREQUANCY (HIGHER PART)													POS 62
12F				TUNING FREQUANCY (LOWER PART)													
130		S-SYS		AFT	(auto)			C-SYS									
131				TUNING FREQUANCY (HIGHER PART)													POS 63
132				TUNING FREQUANCY (LOWER PART)													
133		S-SYS		AFT	(auto)			C-SYS									
134				TUNING FREQUANCY (HIGHER PART)													POS 64
135				TUNING FREQUANCY (LOWER PART)													
136		S-SYS		AFT	(auto)			C-SYS									
137				TUNING FREQUANCY (HIGHER PART)													POS 65
138				TUNING FREQUANCY (LOWER PART)													
139		S-SYS		AFT	(auto)			C-SYS									
13A				TUNING FREQUANCY (HIGHER PART)													POS 66
13B				TUNING FREQUANCY (LOWER PART)													
13C		S-SYS		AFT	(auto)			C-SYS									
13D				TUNING FREQUANCY (HIGHER PART)													POS 67
13E				TUNING FREQUANCY (LOWER PART)													
13F		S-SYS		AFT	(auto)			C-SYS									
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
140				TUNING FREQUANCY (HIGHER PART)													POS 68
141				TUNING FREQUANCY (LOWER PART)													
142		S-SYS		AFT	(auto)			C-SYS									
143				TUNING FREQUANCY (HIGHER PART)													POS 69
144				TUNING FREQUANCY (LOWER PART)													
145		S-SYS		AFT	(auto)			C-SYS									
146				TUNING FREQUANCY (HIGHER PART)													POS 70
147				TUNING FREQUANCY (LOWER PART)													
148		S-SYS		AFT	(auto)			C-SYS									
149				TUNING FREQUANCY (HIGHER PART)													POS 71
14A				TUNING FREQUANCY (LOWER PART)													
14B		S-SYS		AFT	(auto)			C-SYS									
14C				TUNING FREQUANCY (HIGHER PART)													POS 72
14D				TUNING FREQUANCY (LOWER PART)													
14E		S-SYS		AFT	(auto)			C-SYS									
14F				TUNING FREQUANCY (HIGHER PART)													POS 73
150				TUNING FREQUANCY (LOWER PART)													
151		S-SYS		AFT	(auto)			C-SYS									
152				TUNING FREQUANCY (HIGHER PART)													POS 74
153				TUNING FREQUANCY (LOWER PART)													
154		S-SYS		AFT	(auto)			C-SYS									
155				TUNING FREQUANCY (HIGHER PART)													POS 75
156				TUNING FREQUANCY (LOWER PART)													
157		S-SYS		AFT	(auto)			C-SYS									
158				TUNING FREQUANCY (HIGHER PART)													POS 76
159				TUNING FREQUANCY (LOWER PART)													
15A		S-SYS		AFT	(auto)			C-SYS									
15B				TUNING FREQUANCY (HIGHER PART)													POS 77
15C				TUNING FREQUANCY (LOWER PART)													
15D		S-SYS		AFT	(auto)			C-SYS									
15E				TUNING FREQUANCY (HIGHER PART)													POS 78
15F				TUNING FREQUANCY (LOWER PART)													
160		S-SYS		AFT	(auto)			C-SYS									
161				TUNING FREQUANCY (HIGHER PART)													POS 79
162				TUNING FREQUANCY (LOWER PART)													
163		S-SYS		AFT	(auto)			C-SYS									
164				TUNING FREQUANCY (HIGHER PART)													POS 80
165				TUNING FREQUANCY (LOWER PART)													
166		S-SYS		AFT	(auto)			C-SYS									
167				TUNING FREQUANCY (HIGHER PART)													POS 81
168				TUNING FREQUANCY (LOWER PART)													
169		S-SYS		AFT	(auto)			C-SYS									
16A				TUNING FREQUANCY (HIGHER PART)													POS 82
16B				TUNING FREQUANCY (LOWER PART)													
16C		S-SYS		AFT	(auto)			C-SYS									
16D				TUNING FREQUANCY (HIGHER PART)													POS 83
16E				TUNING FREQUANCY (LOWER PART)													
16F		S-SYS		AFT	(auto)			C-SYS									
170				TUNING FREQUANCY (HIGHER PART)													POS 84
171				TUNING FREQUANCY (LOWER PART)													
172		S-SYS		AFT	(auto)			C-SYS									
173				TUNING FREQUANCY (HIGHER PART)													POS 85
174				TUNING FREQUANCY (LOWER PART)													
175		S-SYS		AFT	(auto)			C-SYS									
176				TUNING FREQUANCY (HIGHER PART)													POS 86
177				TUNING FREQUANCY (LOWER PART)													
178		S-SYS		AFT	(auto)			C-SYS									
179				TUNING FREQUANCY (HIGHER PART)													POS 87
17A				TUNING FREQUANCY (LOWER PART)													
17B		S-SYS		AFT	(auto)			C-SYS									
17C				TUNING FREQUANCY (HIGHER PART)													POS 88
17D				TUNING FREQUANCY (LOWER PART)													
17E		S-SYS		AFT	(auto)			C-SYS									
17F				TUNING FREQUANCY (HIGHER PART)													POS 89
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
180	TUNING FREQUANCY (LOWER PART)																POS 89
181		S-SYS			AFT	(auto)		C-SYS									
182	TUNING FREQUANCY (HIGHER PART)																POS 90
183	TUNING FREQUANCY (LOWER PART)																
184		S-SYS			AFT	(auto)		C-SYS									
185	TUNING FREQUANCY (HIGHER PART)																POS 91
186	TUNING FREQUANCY (LOWER PART)																
187		S-SYS			AFT	(auto)		C-SYS									
188	TUNING FREQUANCY (HIGHER PART)																POS 92
189	TUNING FREQUANCY (LOWER PART)																
18A		S-SYS			AFT	(auto)		C-SYS									
18B	TUNING FREQUANCY (HIGHER PART)																POS 93
18C	TUNING FREQUANCY (LOWER PART)																
18D		S-SYS			AFT	(auto)		C-SYS									
18E	TUNING FREQUANCY (HIGHER PART)																POS 94
18F	TUNING FREQUANCY (LOWER PART)																
190		S-SYS			AFT	(auto)		C-SYS									
191	TUNING FREQUANCY (HIGHER PART)																POS 95
192	TUNING FREQUANCY (LOWER PART)																
193		S-SYS			AFT	(auto)		C-SYS									
194	TUNING FREQUANCY (HIGHER PART)																POS 96
195	TUNING FREQUANCY (LOWER PART)																
196		S-SYS			AFT	(auto)		C-SYS									
197	TUNING FREQUANCY (HIGHER PART)																POS 97
198	TUNING FREQUANCY (LOWER PART)																
199		S-SYS			AFT	(auto)		C-SYS									
19A	TUNING FREQUANCY (HIGHER PART)																POS 98
19B	TUNING FREQUANCY (LOWER PART)																
19C		S-SYS			AFT	(auto)		C-SYS									
19D	TUNING FREQUANCY (HIGHER PART)																POS 99
19E	TUNING FREQUANCY (LOWER PART)																
19F		S-SYS			AFT	(auto)		C-SYS									
1A0																	AV1
1A1																	
1A2						(auto)		C-SYS									
1A3																	AV2
1A4																	
1A5						(auto)		C-SYS									
1A6																	
1A7																	
1A8																	
1A9																	
1AA																	
1AB																	
1AC																	
1AD																	
1AE																	
1AF																	
1B0																	
1B1																	
1B2																	
1B3																	
1B4																	
1B5																	
1B6																	
1B7																	
1B8																	
1B9																	
1BA																	
1BB																	
1BC																	
1BD																	
1BE																	
1BF																	
MODEL									MODEL								
LETTER NO.									LETTER NO.								

ADDRESS	DATA								MICON	EEPROM	EEPROM	CHASSIS		CTV FINAL		LAST INITIAL SETTING DATA	REMARK
(HEX)	D7	D6	D5	D4	D3	D2	D1	D0	DEFAULT	RANGE	WRITE(CPU)	CHECK DATA	CHECK TYPE	CHECK DATA	CHECK TYPE		
1C0																	
1C1																	
1C2																	
1C3																	
1C4																	
1C5																	
1C6																	
1C7																	
1C8																	
1C9																	
1CA																	
1CB																	
1CC																	
1CD																	
1CE																	
1CF																	
1D0																	
1D1																	
1D2																	
1D3																	
1D4																	
1D5																	
1D6																	
1D7																	
1D8																	
1D9																	
1DA																	
1DB																	
1DC																	
1DD																	
1DE																	
1DF																	
1E0																	
1E1																	
1E2																	
1E3																	
1E4																	
1E5																	
1E6																	
1E7																	
1E8																	
1E9																	
1EA																	
1EB																	
1EC																	
1ED																	
1EE																	
1EF																	
1F0																	
1F1																	
1F2																	
1F3																	
1F4																	
1F5																	
1F6																	
1F7																	
1F8																	
1F9																	
1FA																	
1FB																	
1FC																	
1FD																	
1FE																	
1FF																	
MODEL									MODEL								
LETTER NO.									LETTER NO.								

GA1 HOTEL MODE APPLICATION

How to enable/disable the "Hotel Mode" ?

Ans: a) Press the R/C (FUNCTION) {1} key until language selection appear, within five second press the (one/two digit) {2} key and keep pressing it for five second, then you can see the hotel mode with four digits password.

b) Key in the four digits password starting with number "1", "3", "7", "9", then the hotel mode will be enable, you can switch on/off the hotel mode by using R/C (volume up/down) {3} key.



#1 Ch 1 is your selected channel for hotel mode.

* We recommend
  Before set the hotel mode, it is better to choose ch 1 & set s-vol level Up to 75% full scale.
  After set hotel mode, starting channel will be always ch 1 & maximum sound level out will be set the half of full scale.
* If you set hotel mode in AV, starting channel will be the last ch which you received before power off (same as normal operation)

CONDITION:

When using hotel mode, user can control "contrast", "brightness", "sharpness" and "tint" function.
But after power off, it will return to the initial setting.
You can't use:--

Preset mode
Fine tuning
Skip mode
System selection

The others function is allowed to be used.

TROUBLE SHOOTING FLOWCHART

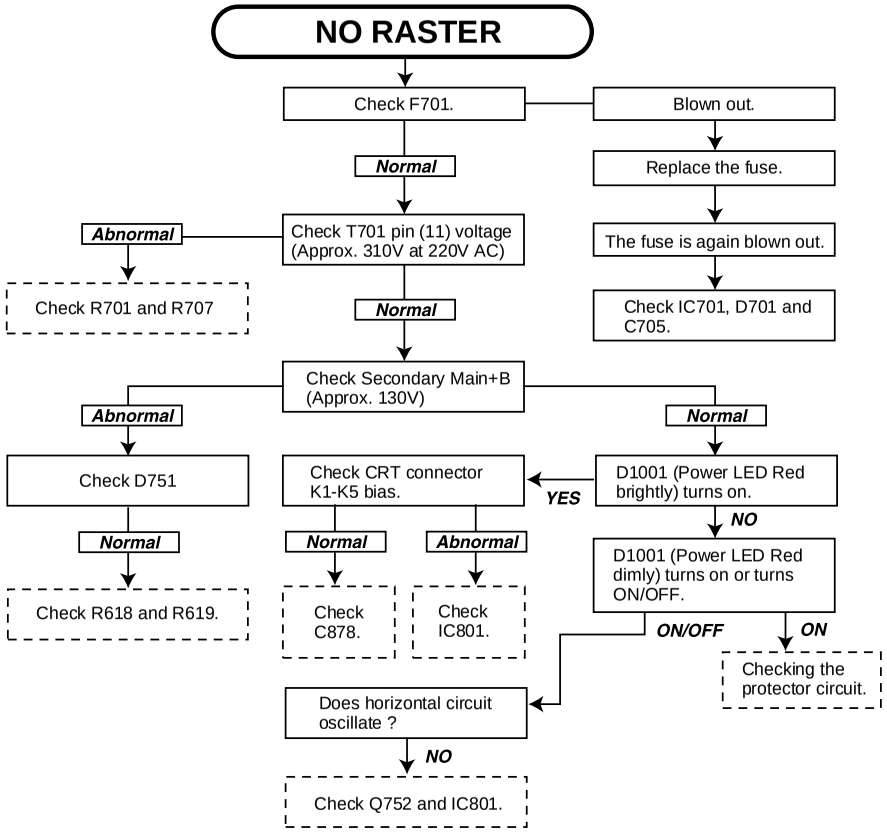

TROUBLE SHOOTING FLOWCHART (Continued)

CIRCUITS TO BE CHECKED:
- Tuner.
- PIF.
- Automatic Gain Control.
- (5V), (32V) Power Source.

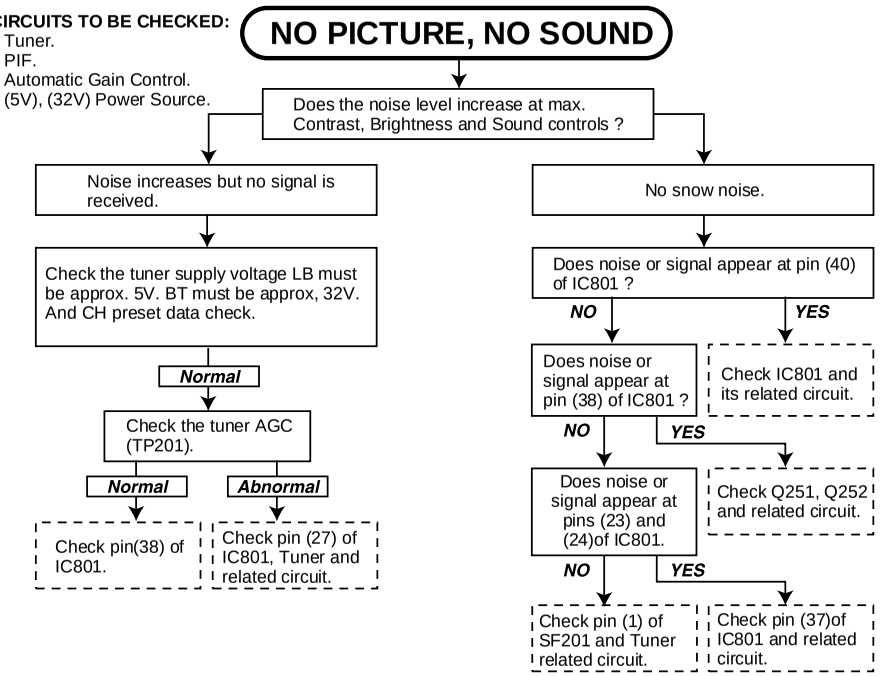
NO PICTURE, NO SOUND
Does the noise level increase at max. Contrast, Brightness and Sound controls ?
Noise increases but no signal is received.
No snow noise.
Check the tuner supply voltage LB must be approx. 5V. BT must be approx, 32V. And CH preset data check.
Does noise or signal appear at pin (40) of IC801 ?
NO
YES
Normal
Does noise or signal appear at pin (38) of IC801 ?
Check IC801 and its related circuit.
Check the tuner AGC (TP201).
NO
YES
Normal
Abnormal
Does noise or signal appear at pins (23) and (24)of IC801.
Check Q251, Q252 and related circuit.
Check pin(38) of IC801.
Check pin (27) of IC801, Tuner and related circuit.
NO
YES
Check pin (1) of SF201 and Tuner related circuit.
Check pin (37)of IC801 and related circuit.

CIRCUITS TO BE CHECKED:
- Sound system pins (28), (29) and (44) of IC801.
- Sound Detector Circuit.
- Sound Switch and Att. Control.
- Audio Output Circuit.

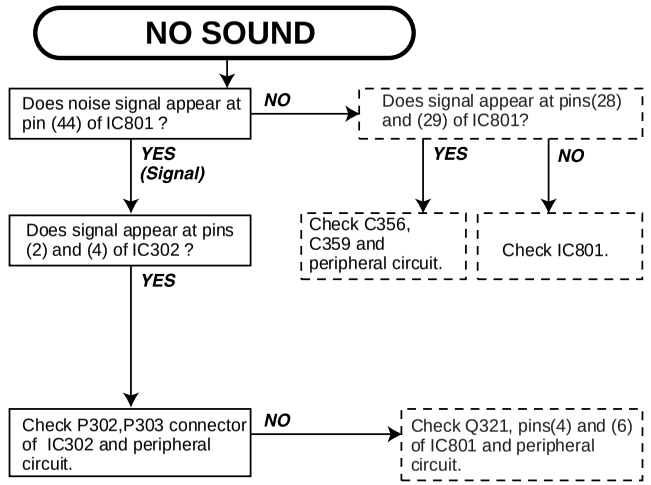
NO SOUND
Does noise signal appear at pin (44) of IC801 ?
NO
Does signal appear at pins(28) and (29) of IC801?
YES (Signal)
YES
NO
Does signal appear at pins (2) and (4) of IC302 ?
Check C356, C359 and peripheral circuit.
Check IC801.
YES
Check P302,P303 connector of IC302 and peripheral circuit.
NO
Check Q321, pins(4) and (6) of IC801 and peripheral circuit.

TROUBLE SHOOTING FLOWCHART (Continued)

NEITHER VERTICAL NOR HORIZONTAL SYNCHRONIZATION

CIRCUIT TO BE CHECKED:
- Sync. Separator Circuit.

Check pins(33) and (34) of IC801.

DEFECTIVE VERTICAL AMP. AND VERTICAL LINEARITY

Readjust vertical size. (Bas Data)

Vertical linearity and size is abnormal.

Check R501, R503, R512, R521, R533 and C533.

NO VERTICAL SCAN

Check IC501.

- ***Normal*** → Check C505 and C509.
- ***Abnormal*** → Check IC501.

TROUBLE SHOOTING FLOWCHART (Continued)

NO SPECIFIC COLOUR

Is some colour produced in B/W broadcast reception ?

- ***NO*** → Check IC801, R801, R802, R803, D804, D805, D806 and Q801.
- ***YES*** → Is the white balance properly adjusted ?
  - ***NO*** → Readjust the white balance.
  - ***YES*** →
    - The picture colour is cyan. → Check Q871, Q883 and their adjacent circuits.
    - The picture colour is magenta. → Check Q870, Q885 and their adjacent circuits.
    - The picture colour is yellow. → Check Q872, Q887 and their adjacent circuits.

NO SPECIFIC COLOUR "PAL"/"SECAM" (NO COLOUR SYNCHRONIZATION)

Check IC801 and bias control circuit.

Normal

Check X1001.(12MHz)

WAVEFORMS (14D1-SA/SF/GA/GF)

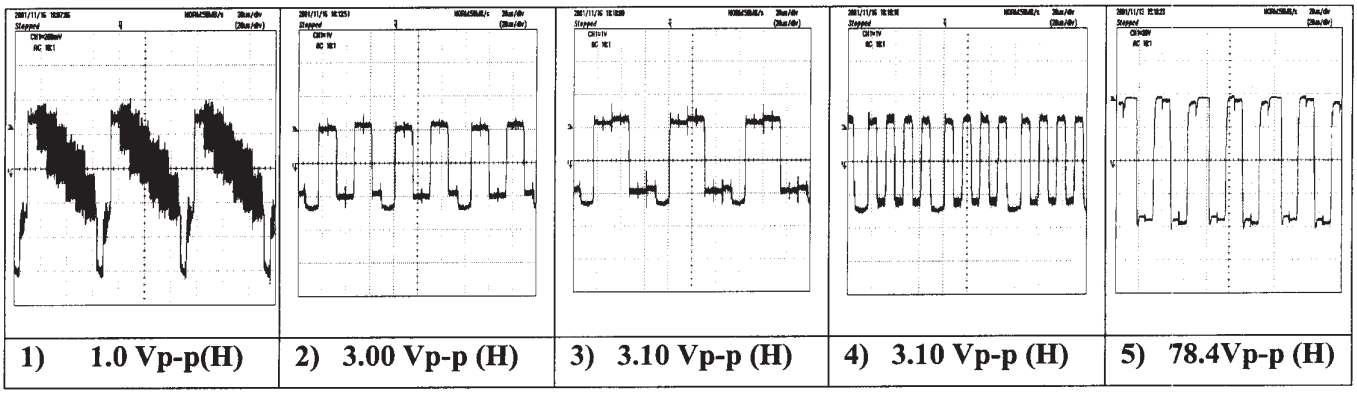

1) 1.0 Vp-p(H) | 2) 3.00 Vp-p (H) | 3) 3.10 Vp-p (H) | 4) 3.10 Vp-p (H) | 5) 78.4Vp-p (H)

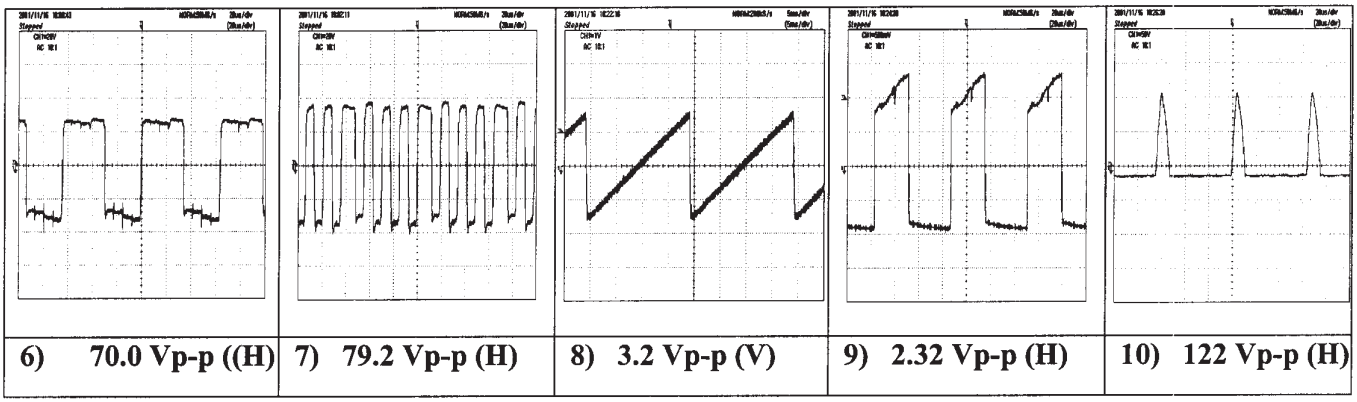

6) 70.0 Vp-p ((H) | 7) 79.2 Vp-p (H) | 8) 3.2 Vp-p (V) | 9) 2.32 Vp-p (H) | 10) 122 Vp-p (H)

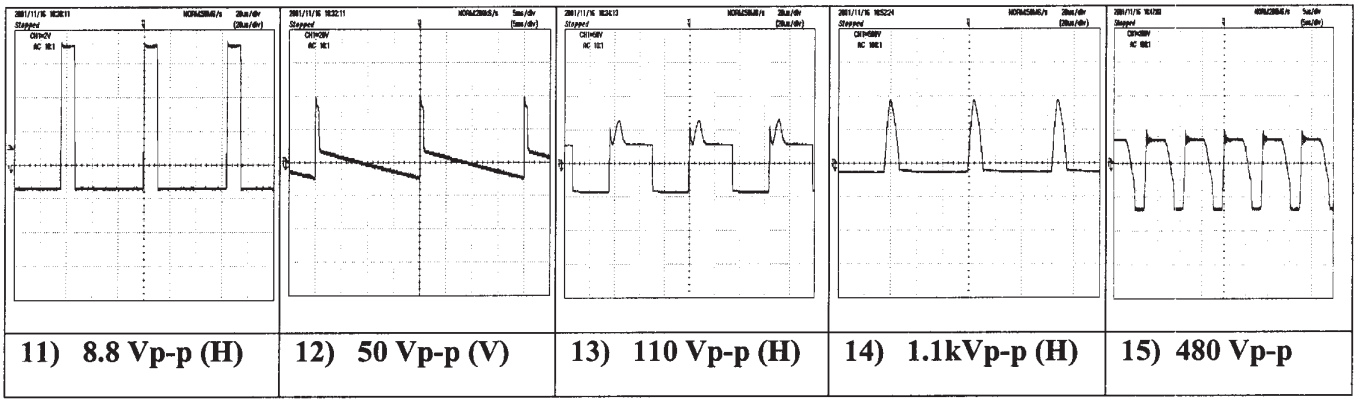

11) 8.8 Vp-p (H) | 12) 50 Vp-p (V) | 13) 110 Vp-p (H) | 14) 1.1kVp-p (H) | 15) 480 Vp-p

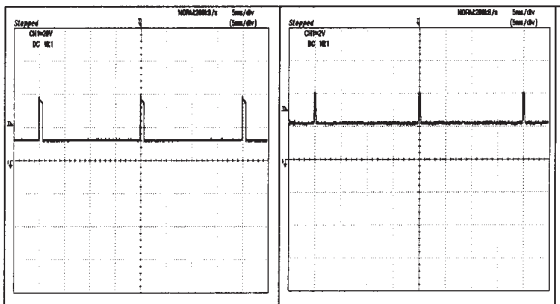

16) 28 Vp-p (V) | 17) 2.08 Vp-p (V)

WAVEFORMS (14D2-SA/SF/GA/GF)

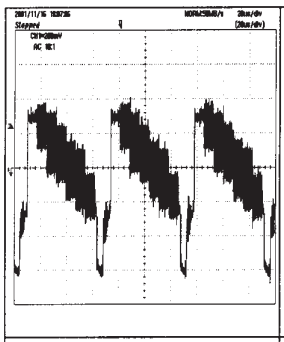	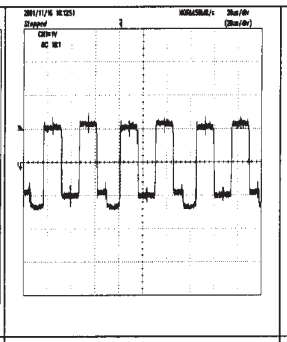	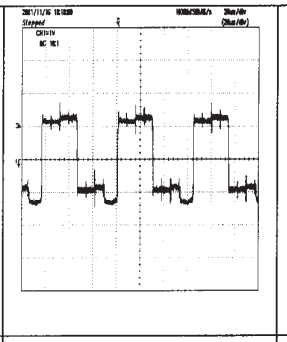	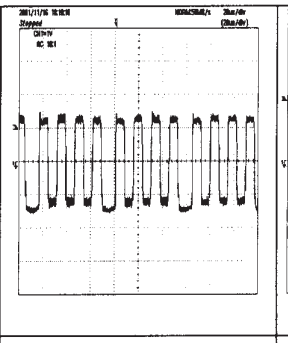	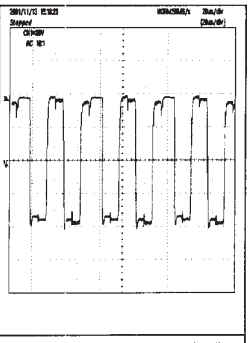
1) 1.0 Vp-p(H)	2) 3.00 Vp-p (H)	3) 3.10 Vp-p (H)	4) 3.10 Vp-p (H)	5) 78.4Vp-p (H)
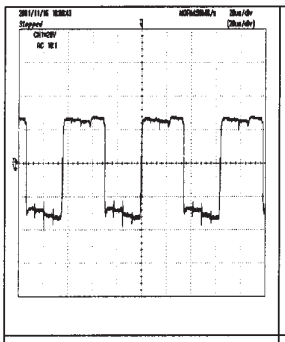	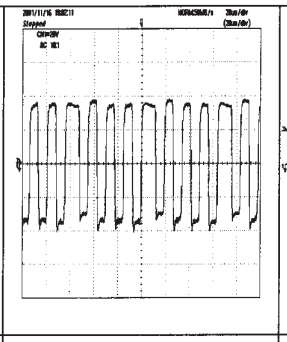	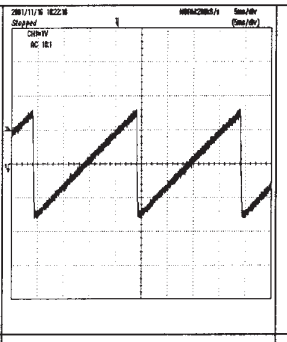	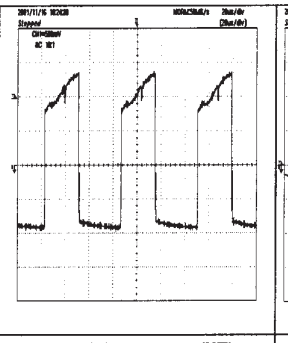	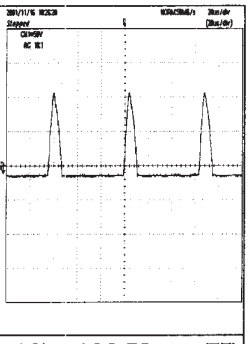
6) 70.0 Vp-p ((H)	7) 79.2 Vp-p (H)	8) 3.2 Vp-p (V)	9) 2.32 Vp-p (H)	10) 122 Vp-p (H)
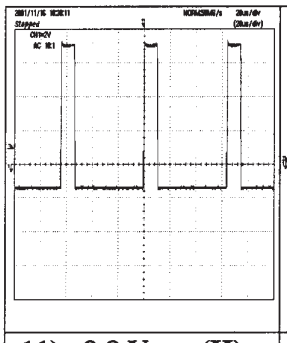	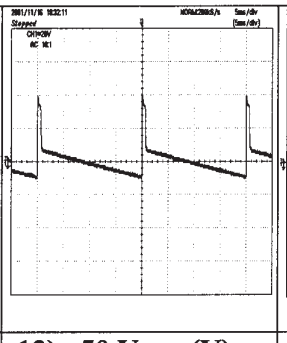	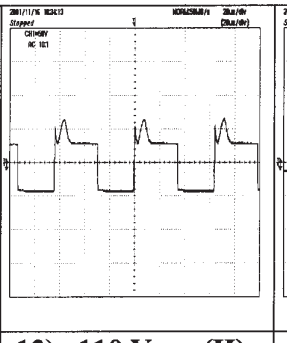	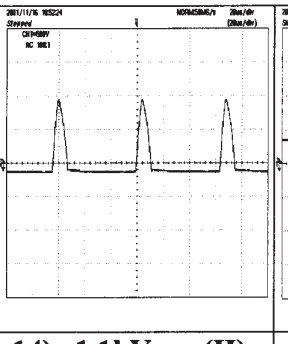	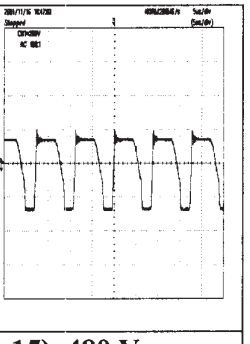
11) 8.8 Vp-p (H)	12) 50 Vp-p (V)	13) 110 Vp-p (H)	14) 1.1kVp-p (H)	15) 480 Vp-p
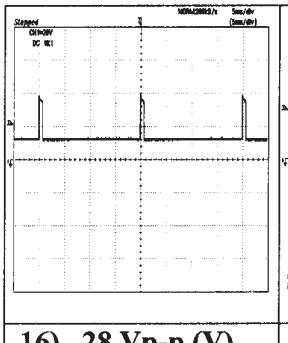	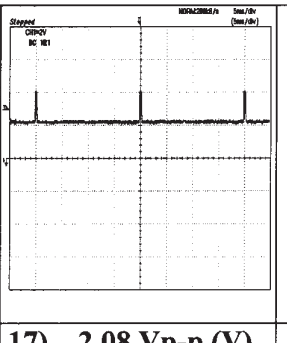			
16) 28 Vp-p (V)	17) 2.08 Vp-p (V)			

SOLID STATE DEVICE BASE DIAGRAM

TOP VIEW



CAT24W04
(BR24C04)
(M24C04W)



D601A

B709A



IX3368CE

SIDE VIEW

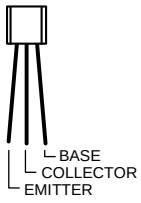

TX0110BM
TX0124BM
2SC3198

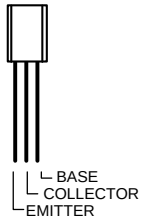

2SC3207

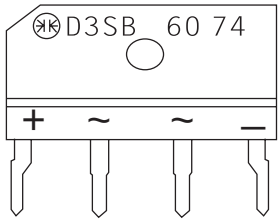

DX0476CE



2SD2586

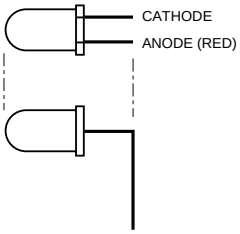

PX0013PE

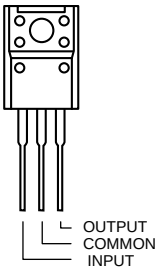

KA7808A

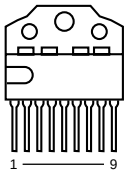

AN7523

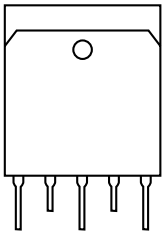

STRG5653

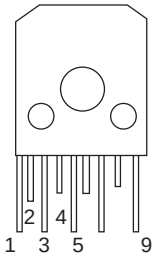

AN5522

- M E M O -

CHASSIS LAYOUT (14D1-SA/GA)

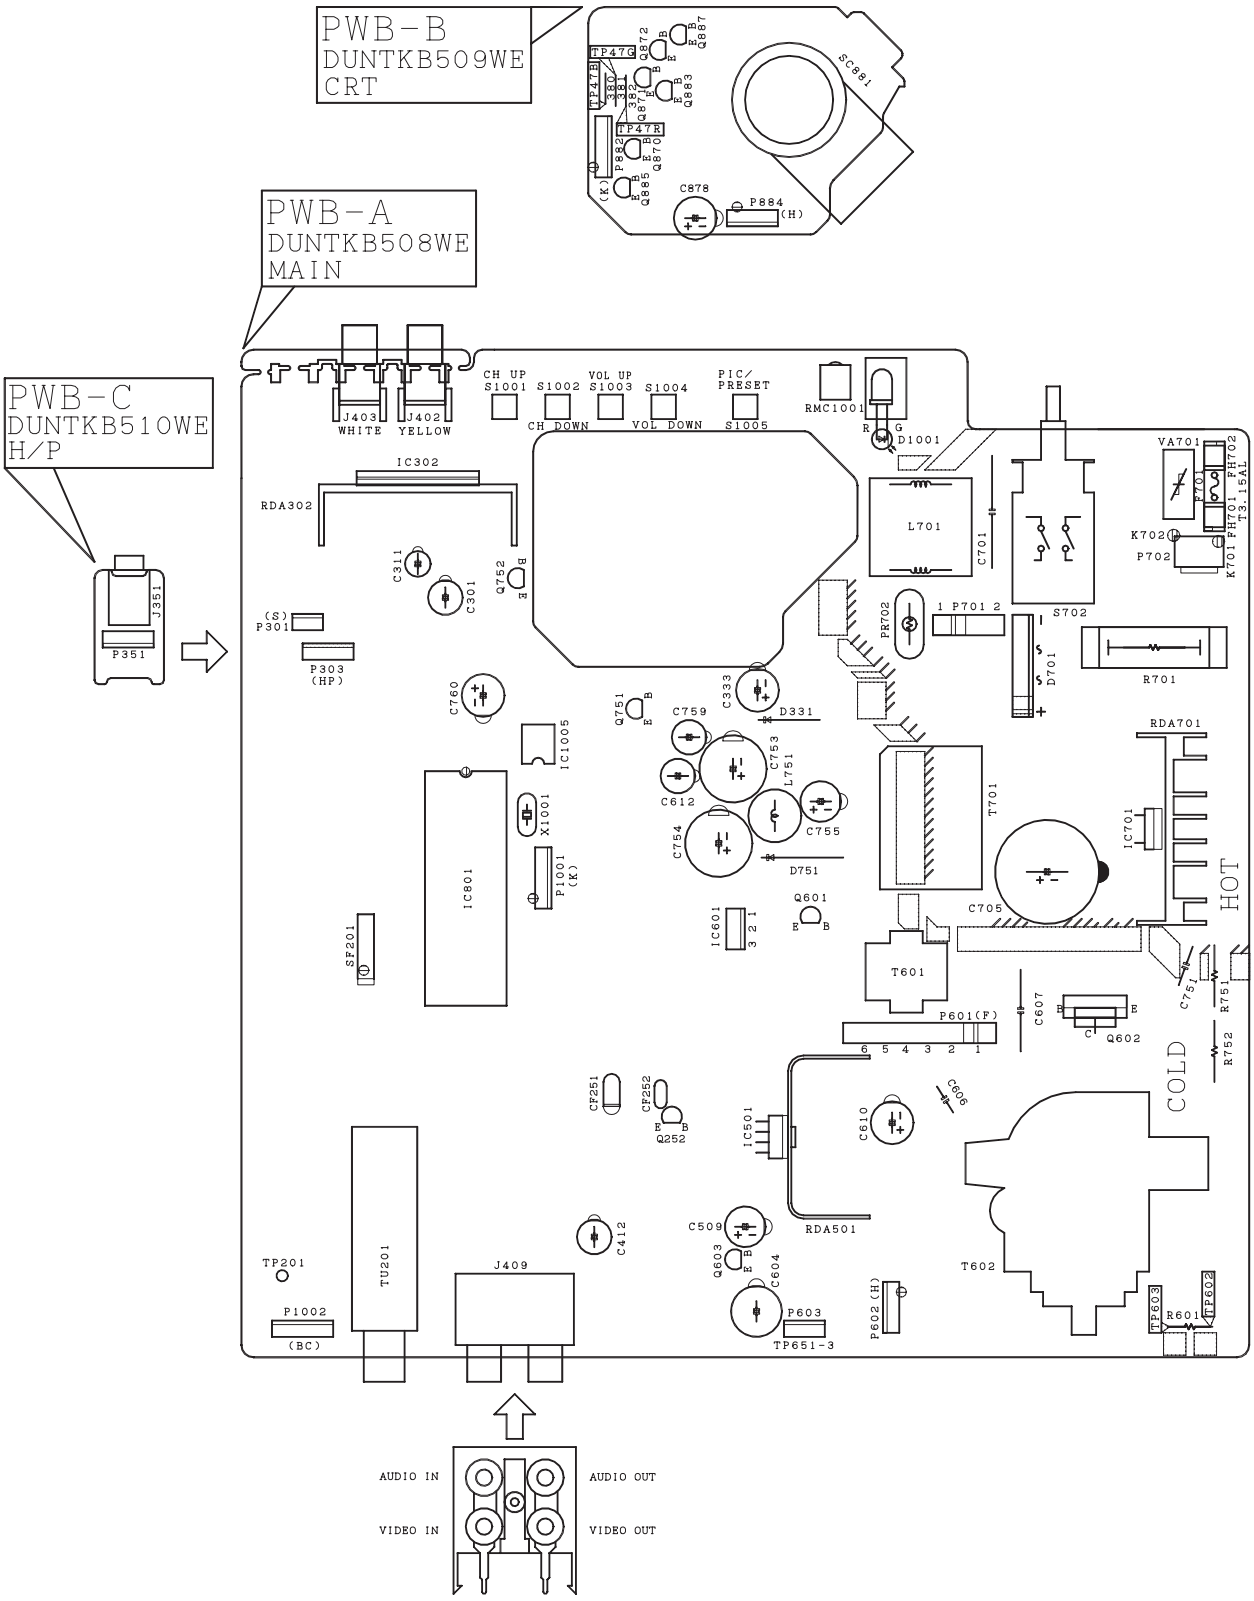

CHASSIS LAYOUT (14D1-SF/GF)

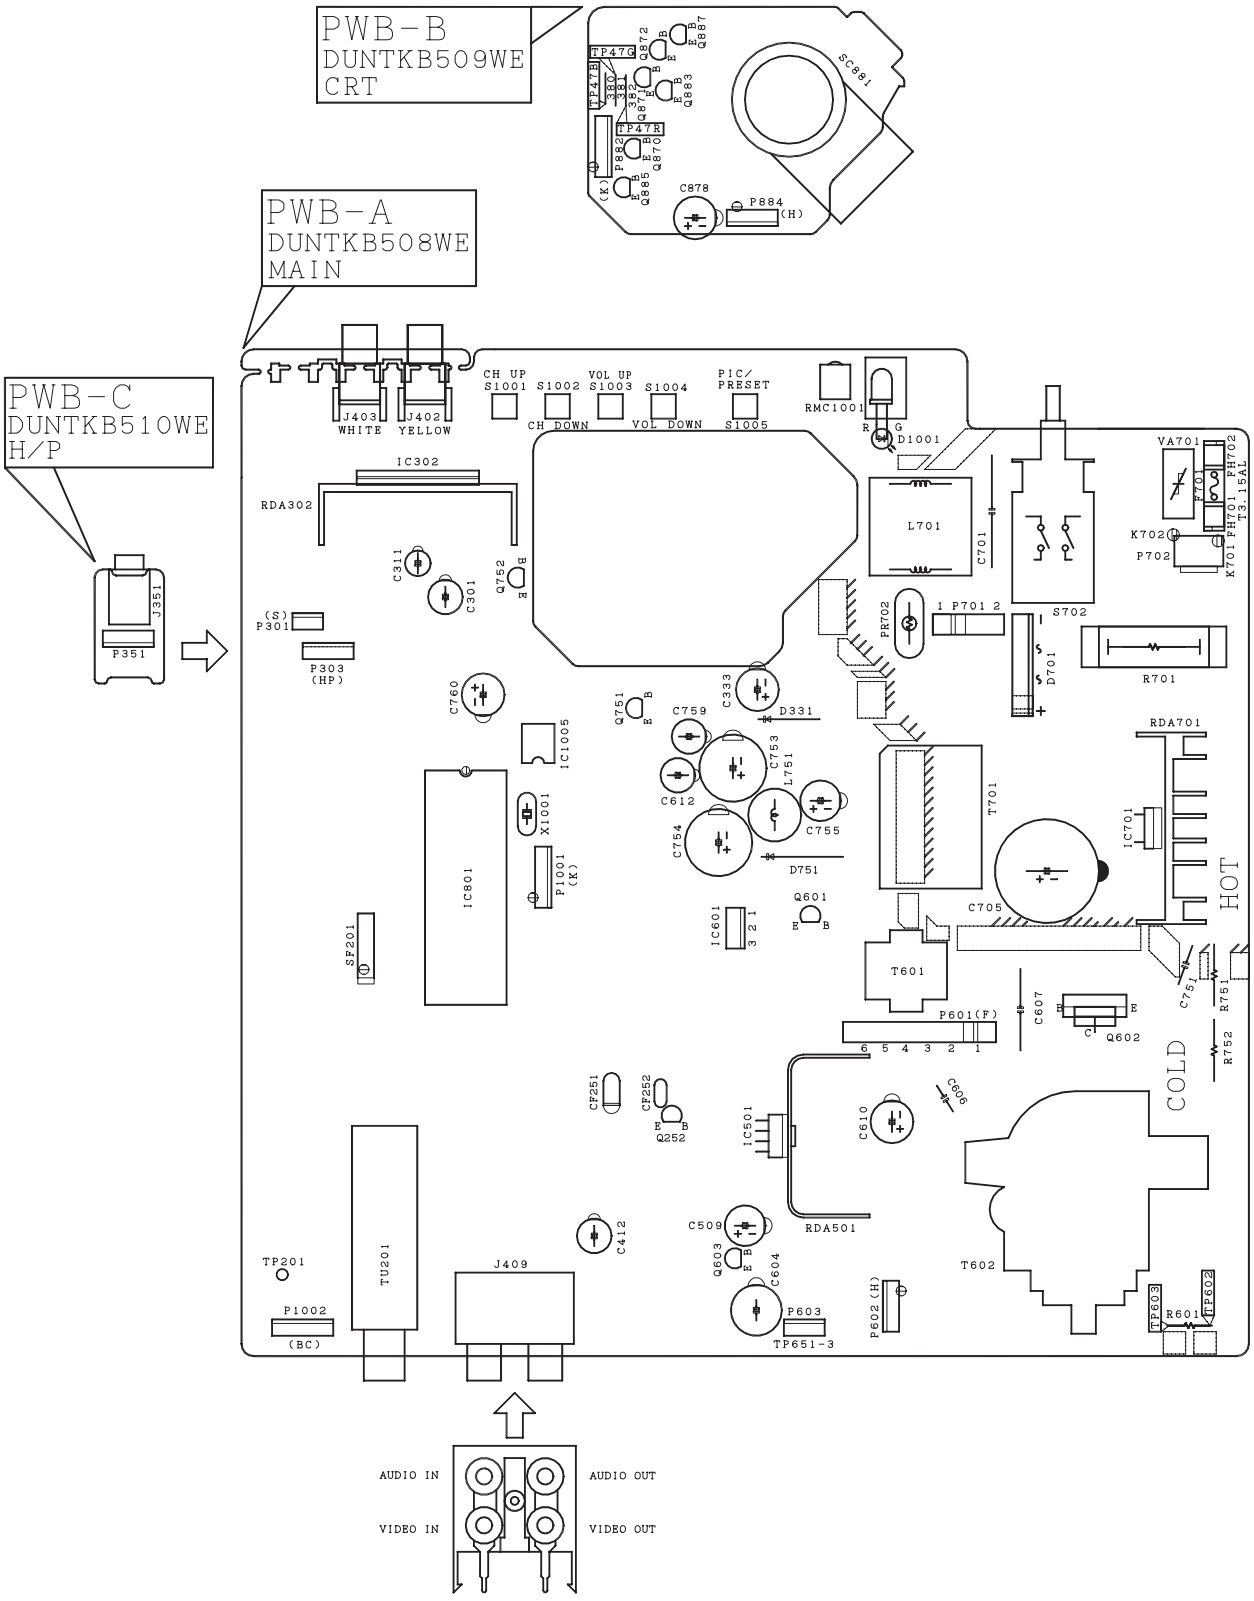

CHASSIS LAYOUT (14D2-SA/GA)

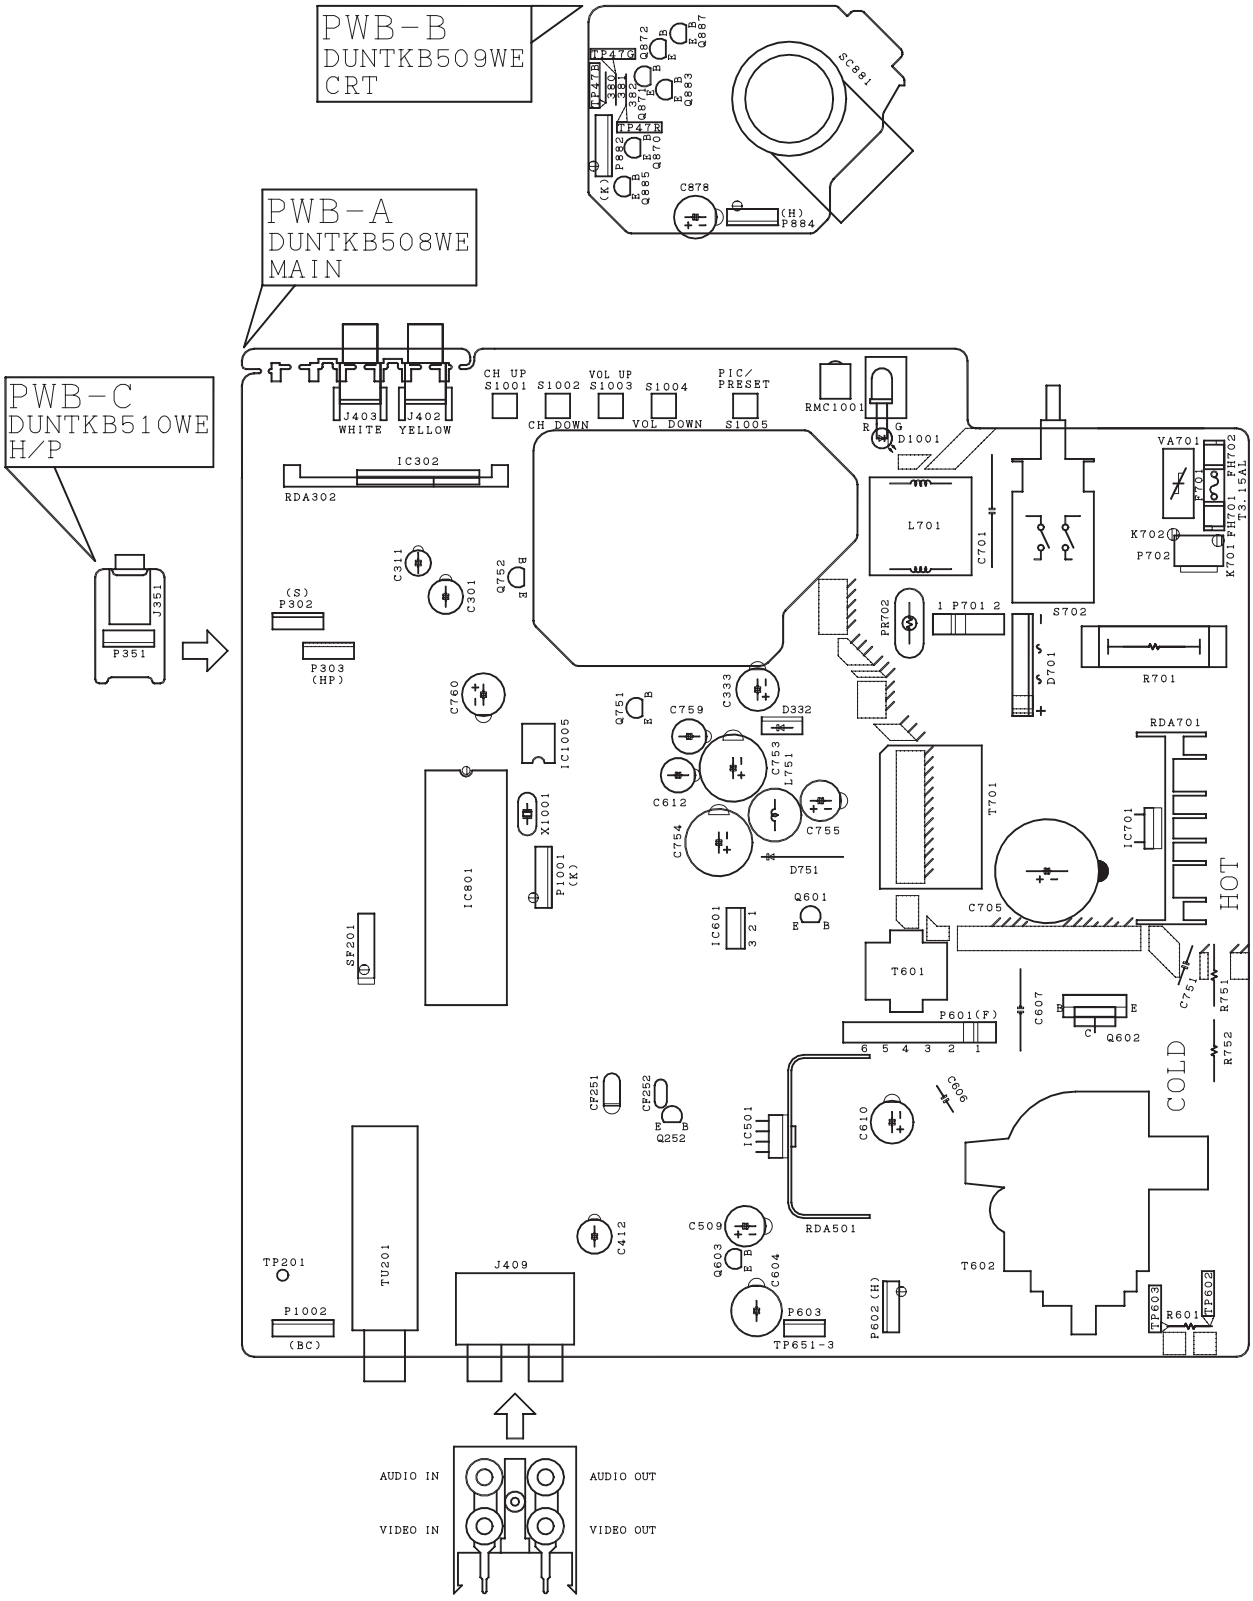

CHASSIS LAYOUT (14D2-SF/GF)

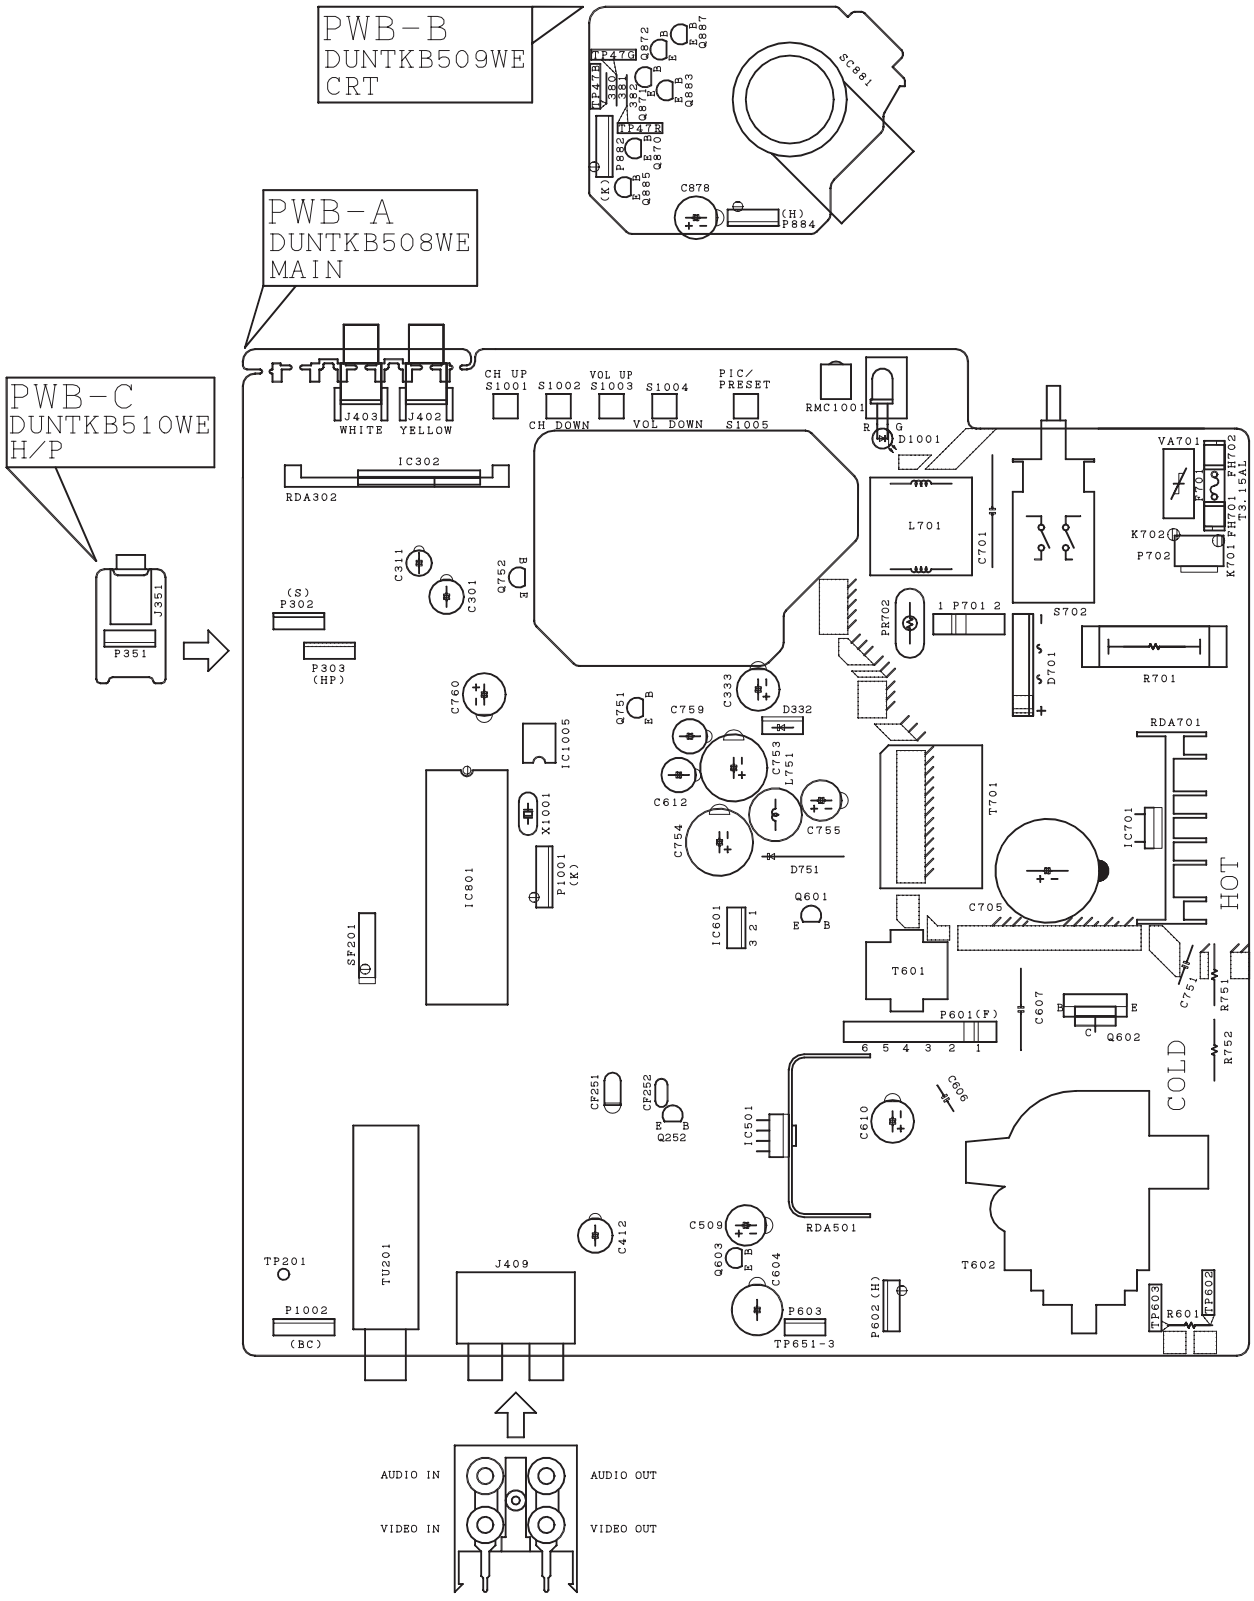

BLOCK DIAGRAM:CRT UNIT (14D1-SA/SF/GA/GF)

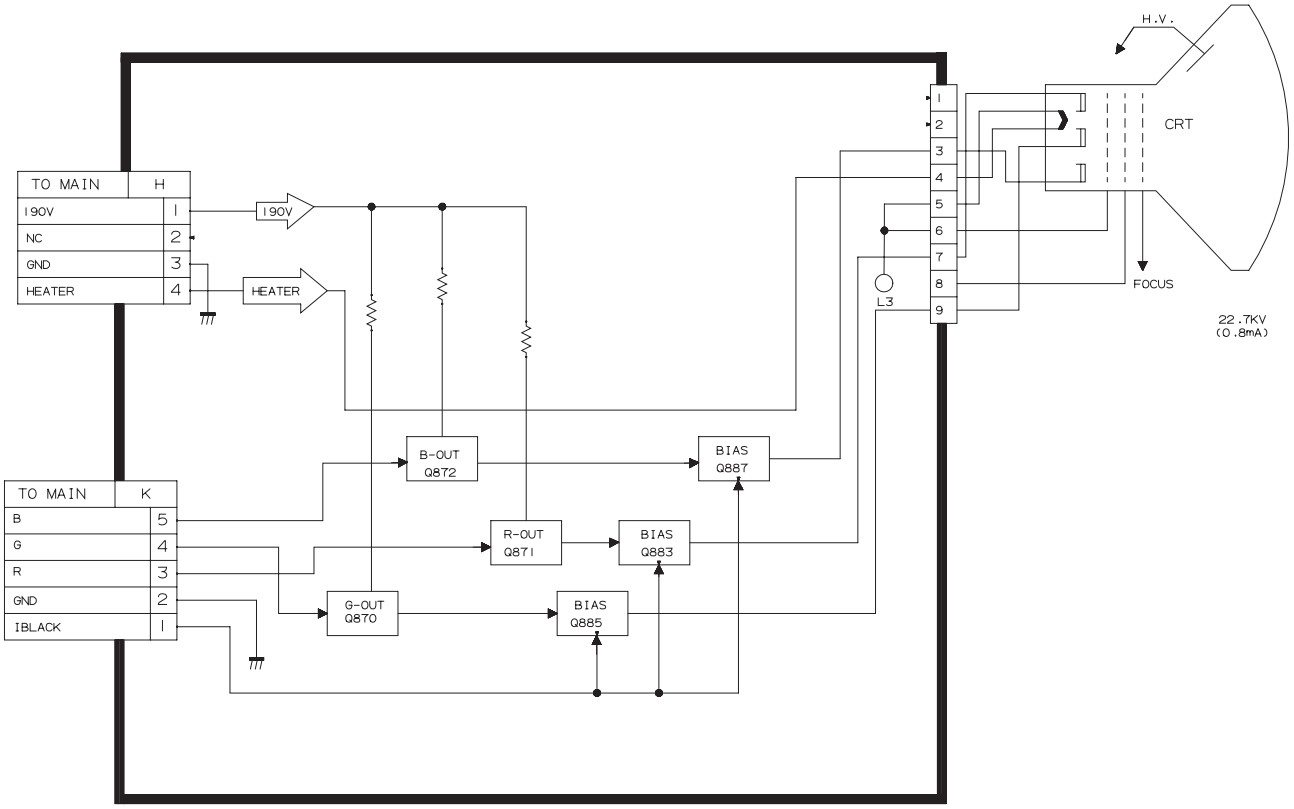

BLOCK DIAGRAM:CRT UNIT (14D2-SA/SF/GA/GF)

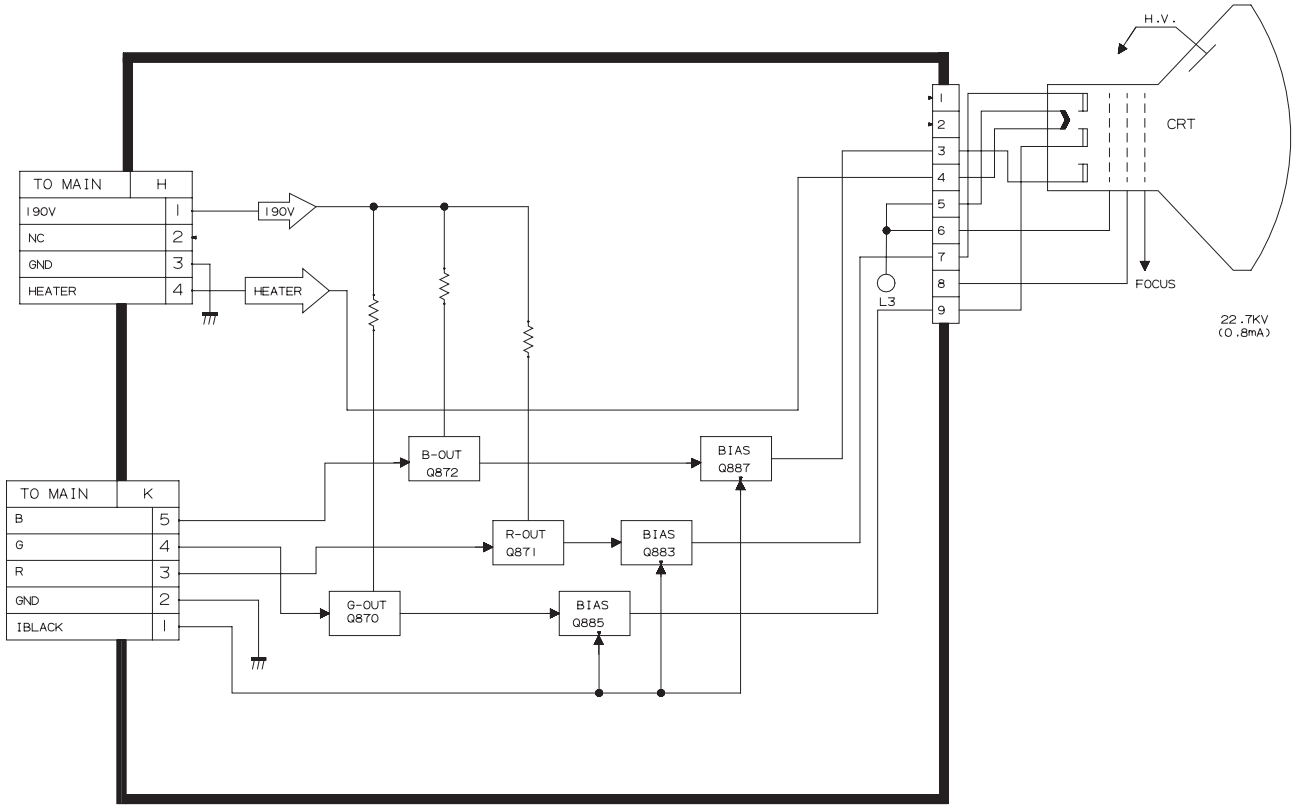

BLOCK DIAGRAM:MAIN UNIT (14D1-SA/SF/GA/GF)

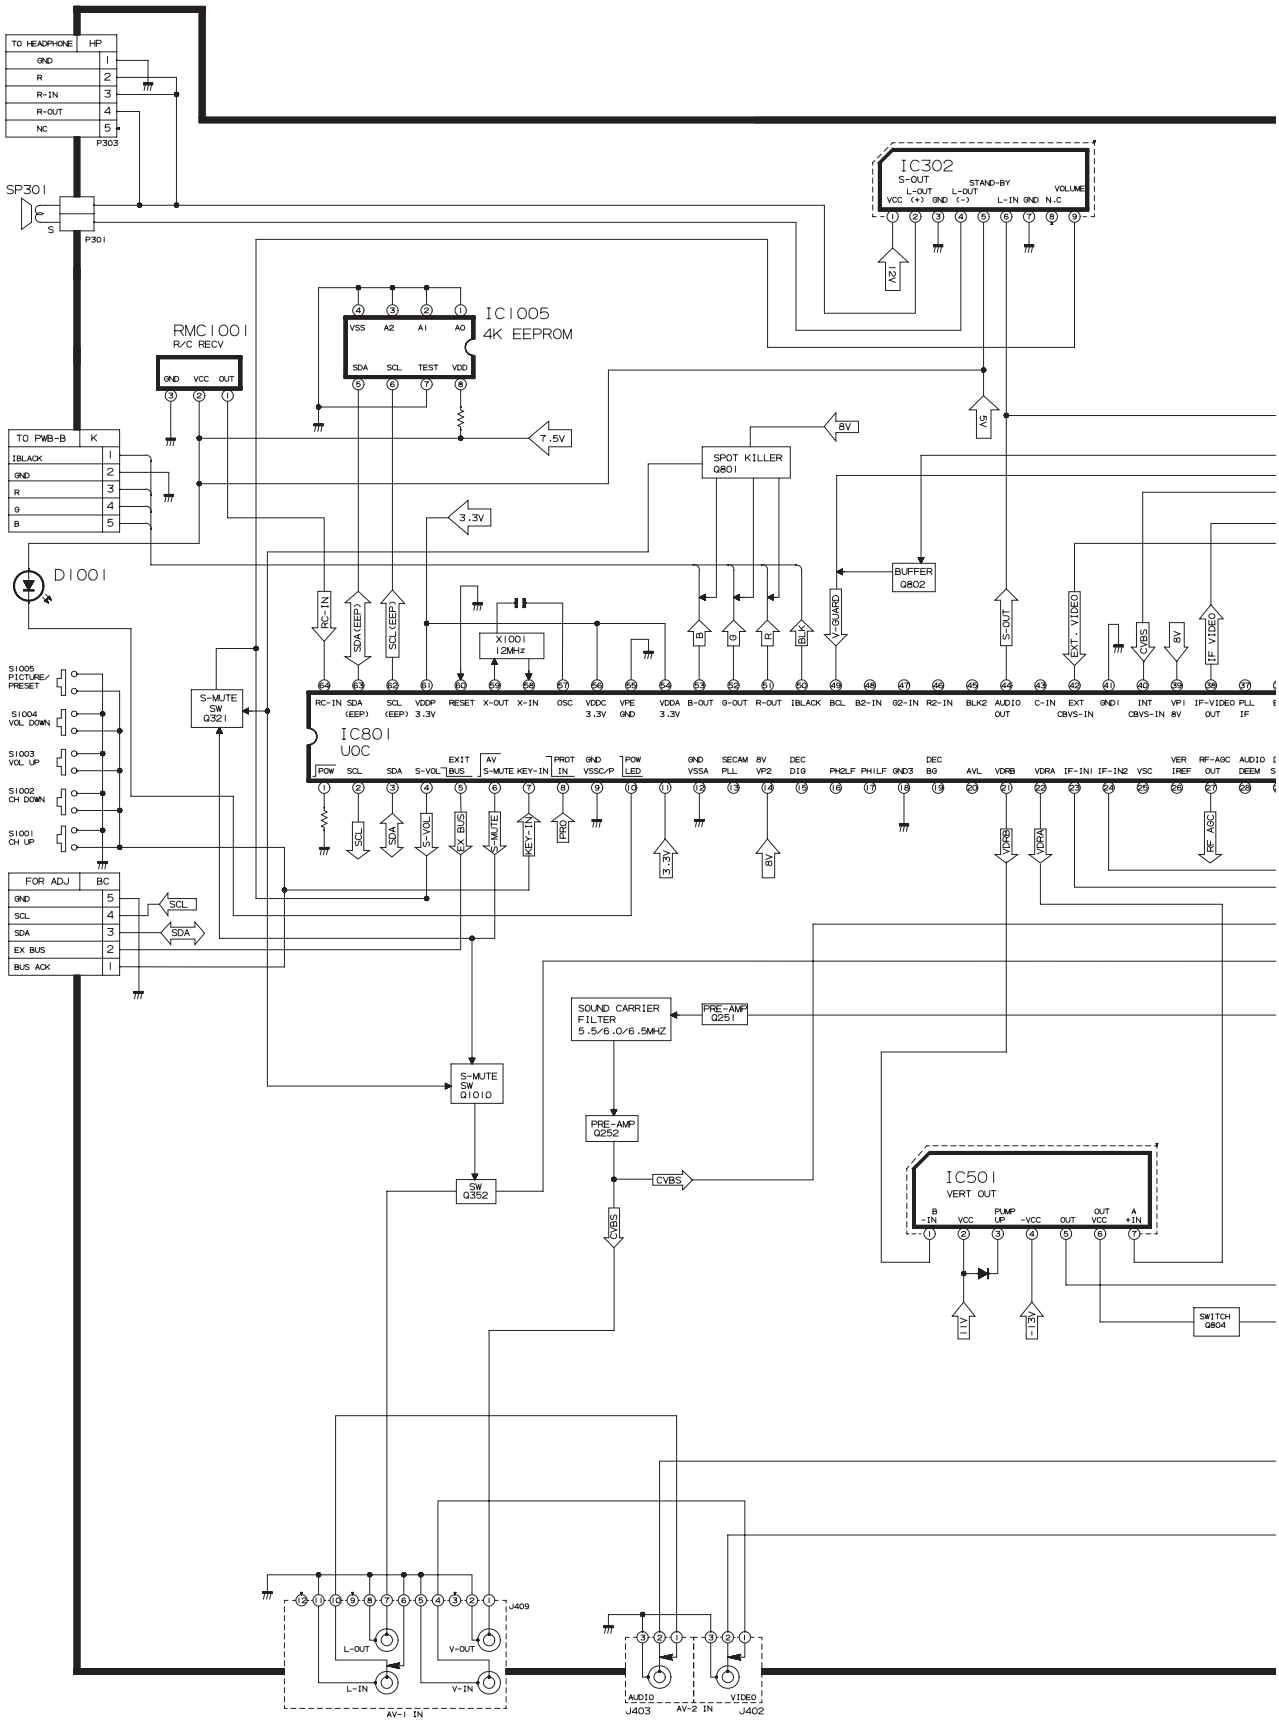

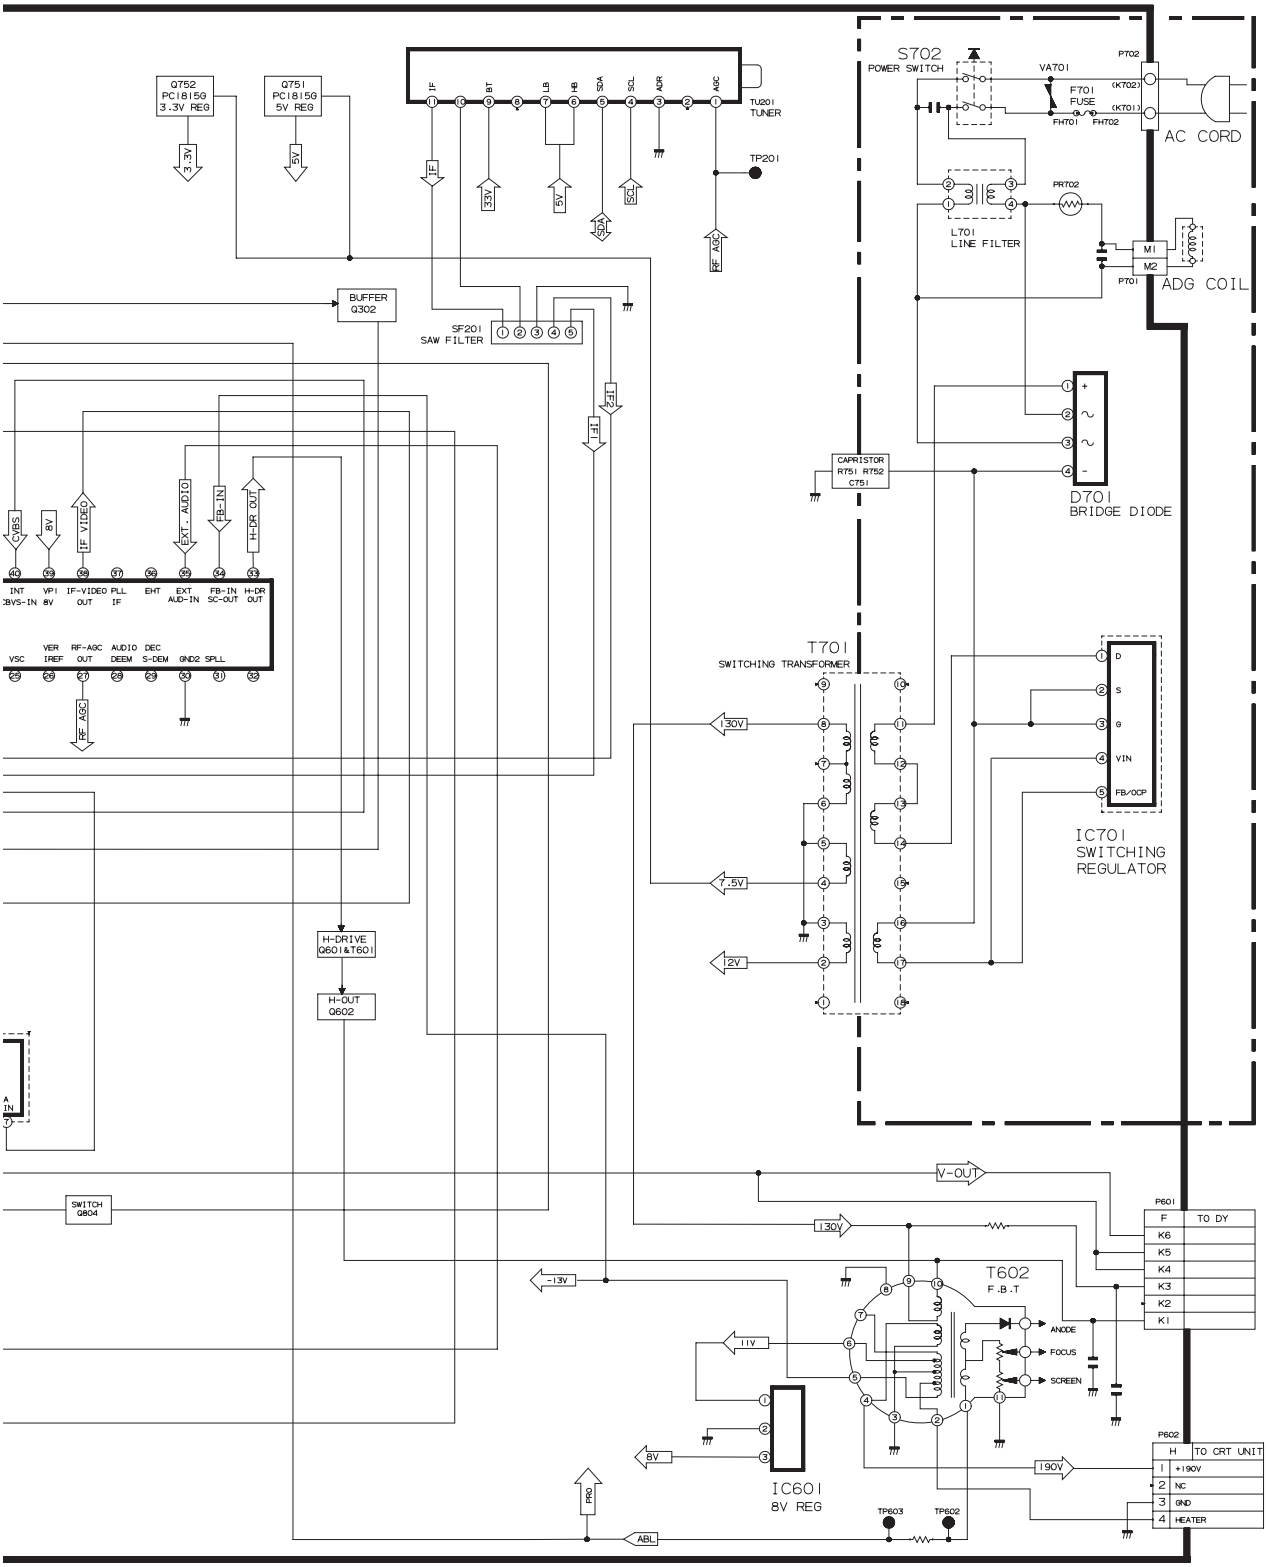
Q752
PC1815G
3.3V REG
Q751
PC1815G
5V REG
TU201
TUNER
TP201
S702
POWER SWITCH
VA701
F701
FUSE
FH701
FH702
PT02
(KT02)
(KT01)
AC CORD
PR702
L701
LINE FILTER
M1
M2
P701
ADG COIL
BUFFER
Q302
SF201
SAW FILTER
CAPRISTOR
R751 R752
C751
D701
BRIDGE DIODE
T701
SWITCHING TRANSFORMER
IC701
SWITCHING
REGULATOR
H-DRIVE
Q601&T601
H-OUT
Q602
SWITCH
Q804
V-OUT
T602
F.B.T
ANODE
FOCUS
SCREEN
P601
TO DY
P602
TO CRT UNIT
+190V
NC
GND
HEATER
IC601
8V REG
TP603
TP602
ABL
PRO

BLOCK DIAGRAM:MAIN UNIT (14D2-SA/SF/GA/GF)

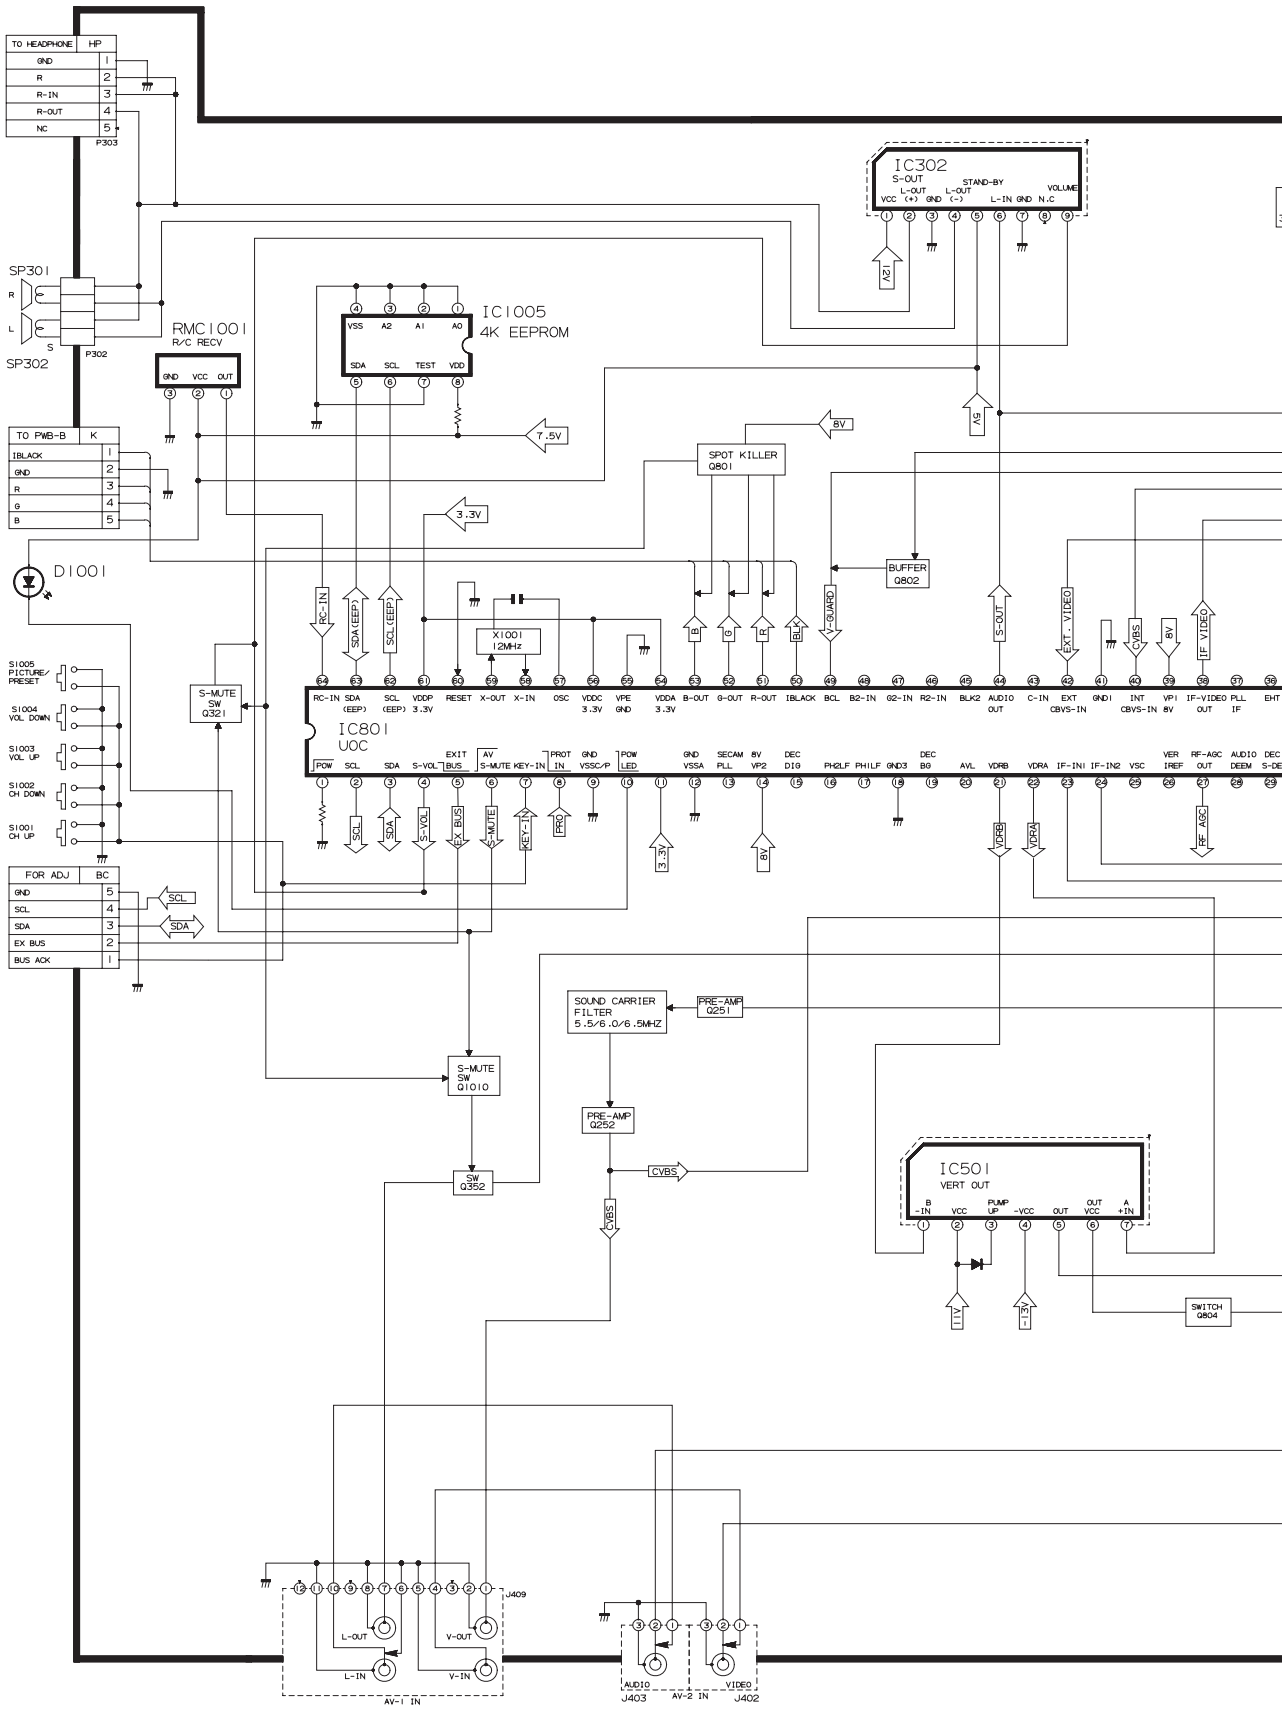

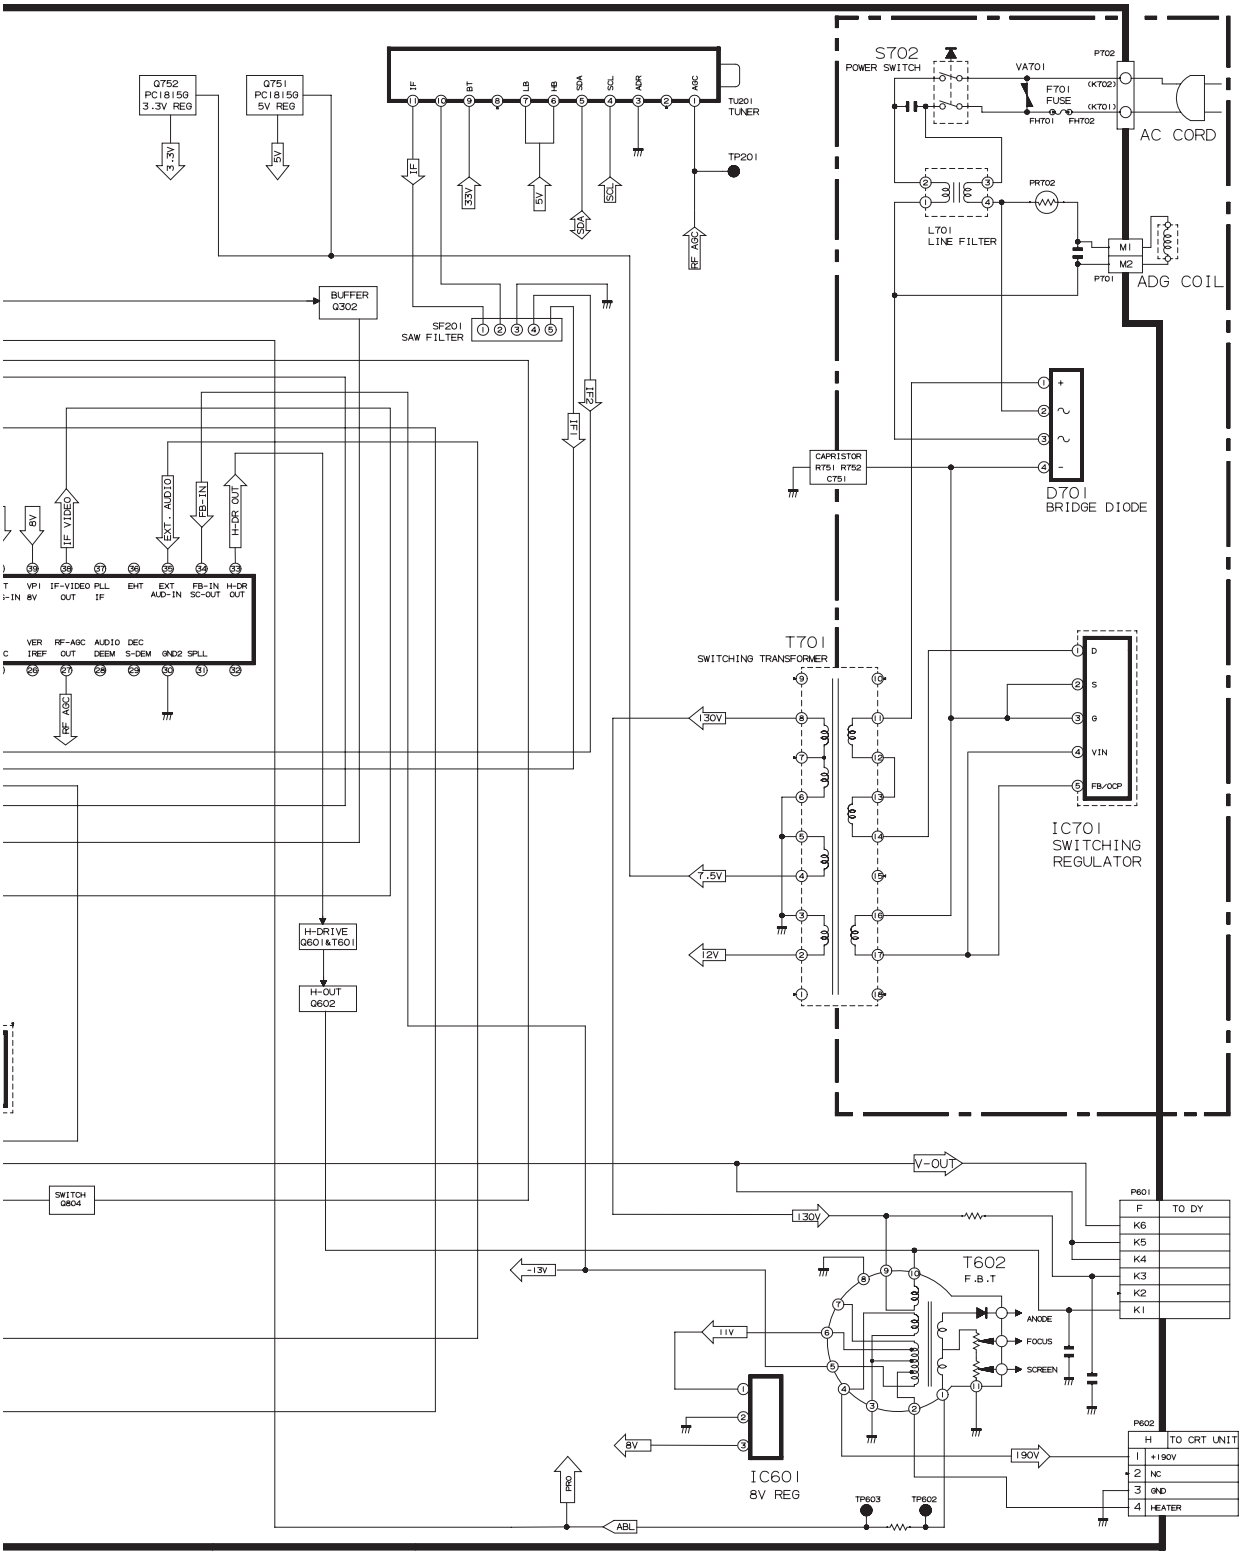
Q752
PC1815G
3.3V REG
Q751
PC1815G
5V REG
3.3V
5V
TU201
TUNER
IF
BT
LB
HB
SDA
SCL
ADR
AGC
TP201
RF AGC
33V
5V
SDA
SCL
IF
BUFFER
Q302
SF201
SAW FILTER
IF2
IF1
8V
IF VIDEO
EXT. AUDIO
FB-IN
H-DR OUT
VP1 8V
IF-VIDEO OUT
PLL IF
EHT
EXT AUD-IN
FB-IN SC-OUT
H-DR OUT
VER IREF
RF-AGC OUT
AUDIO DEEM
DEC S-DEM
GND2
SPLL
RF AGC
S702
POWER SWITCH
VA701
P702
F701
FUSE
(K702)
(K701)
FH701
FH702
AC CORD
PR702
L701
LINE FILTER
M1
M2
P701
ADG COIL
CAPRISTOR
R751 R752
C751
D701
BRIDGE DIODE
T701
SWITCHING TRANSFORMER
130V
7.5V
12V
D
S
G
VIN
FB/OCP
IC701
SWITCHING
REGULATOR
H-DRIVE
Q601&T601
H-OUT
Q602
SWITCH
Q804
V-OUT
130V
-13V
11V
8V
T602
F.B.T
ANODE
FOCUS
SCREEN
190V
IC601
8V REG
PRO
ABL
TP603
TP602
P601
F
TO DY
K6
K5
K4
K3
K2
K1
P602
H
TO CRT UNIT
1 +190V
2 NC
3 GND
4 HEATER

BLOCK DIAGRAM:HEADPHONE UNIT (14D1-SA/SF/GA/GF)

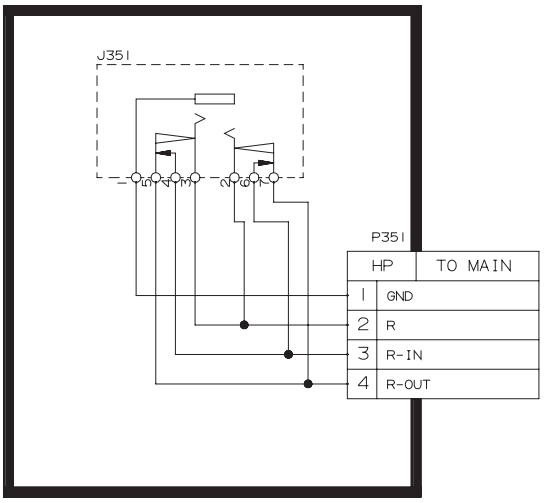

BLOCK DIAGRAM:HEADPHONE UNIT (14D2-SA/SF/GA/GF)

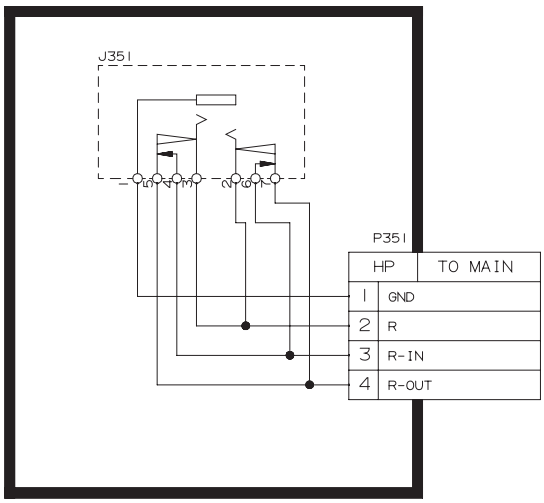

DESCRIPTION OF SCHEMATIC DIAGRAM

SAFETY NOTES:

1. *DISCONNECT THE AC PLUG FROM THE AC OUTLET BEFORE REPLACING PARTS.*
2. *SEMICONDUCTOR HEAT SINKS SHOULD BE REGARDED AS POTENTIAL SHOCK HAZARDS WHEN THE CHASSIS IS OPERATING.*

IMPORTANT SAFETY NOTICE:

PARTS MARKED WITH "⚠ " ( ) ARE IMPOTANT FOR MAINTAINING THE SAFETY OF THE SET. BE SURE TO REPLACE THESE PARTS WITH SPECIFIED ONES FOR MAINTAINING THE SAFETY AND PERFORMANCE OF THE SET.

SERVICE PRECAUTION:

THE AREA ENCLOSED BY THIS LINE (—– - —–) IS DIRECTLY CONNECTED WITH AC MAINS VOLTAGE.
WHEN SERVICING THE AREA, CONNECT AN ISOLATING TRANSFORMER BETWEEN TV RECEIVER AND AC LINE TO ELIMINATE HAZARD OF ELECTRIC SHOCK.

NOTES:

1. *The unit of resistance "ohm" is omitted. (K = 1000 ohms, M = Mega ohm).*
2. *All resistors are 1/10 watt, unless otherwise noted.*
3. *All capacitors are μF, unless otherwise noted. (P = μμF).*

VOLTAGE MEASUREMENT CONDITIONS:

1. *Voltages in parenthesis measured with no signal.*
2. *Voltages without parenthesis measured with 3mV B & W or Colour signal.*
3. *All the voltages in each point are measured with VTVM.*

WAVEFORM MEASUREMENT CONDITIONS:

1. *The colour bar generator signal of 2.0V peak applied at of Base Video Buffer Amp. Q252.*
2. *Approximately 4V AGC bias .*

SCHEMATIC DIAGRAM:MAIN UNIT (14D1-SA/GA)

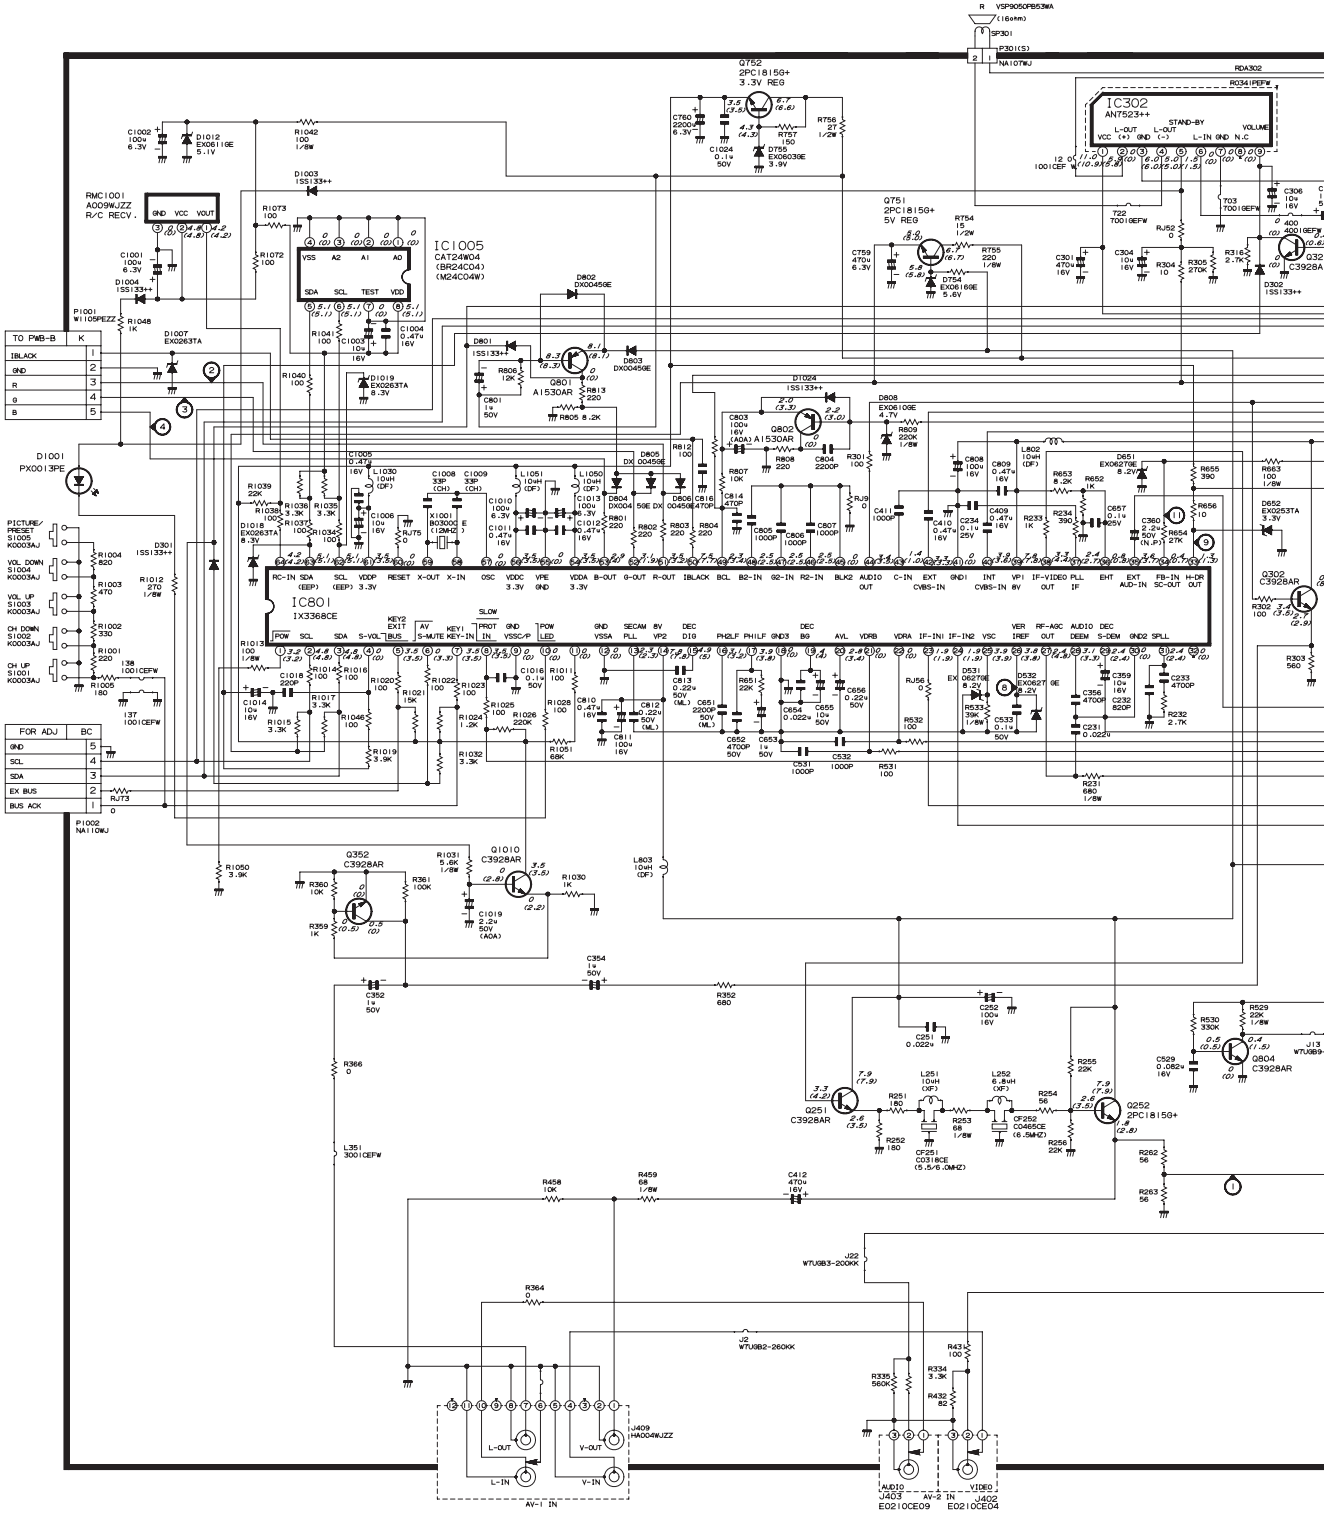

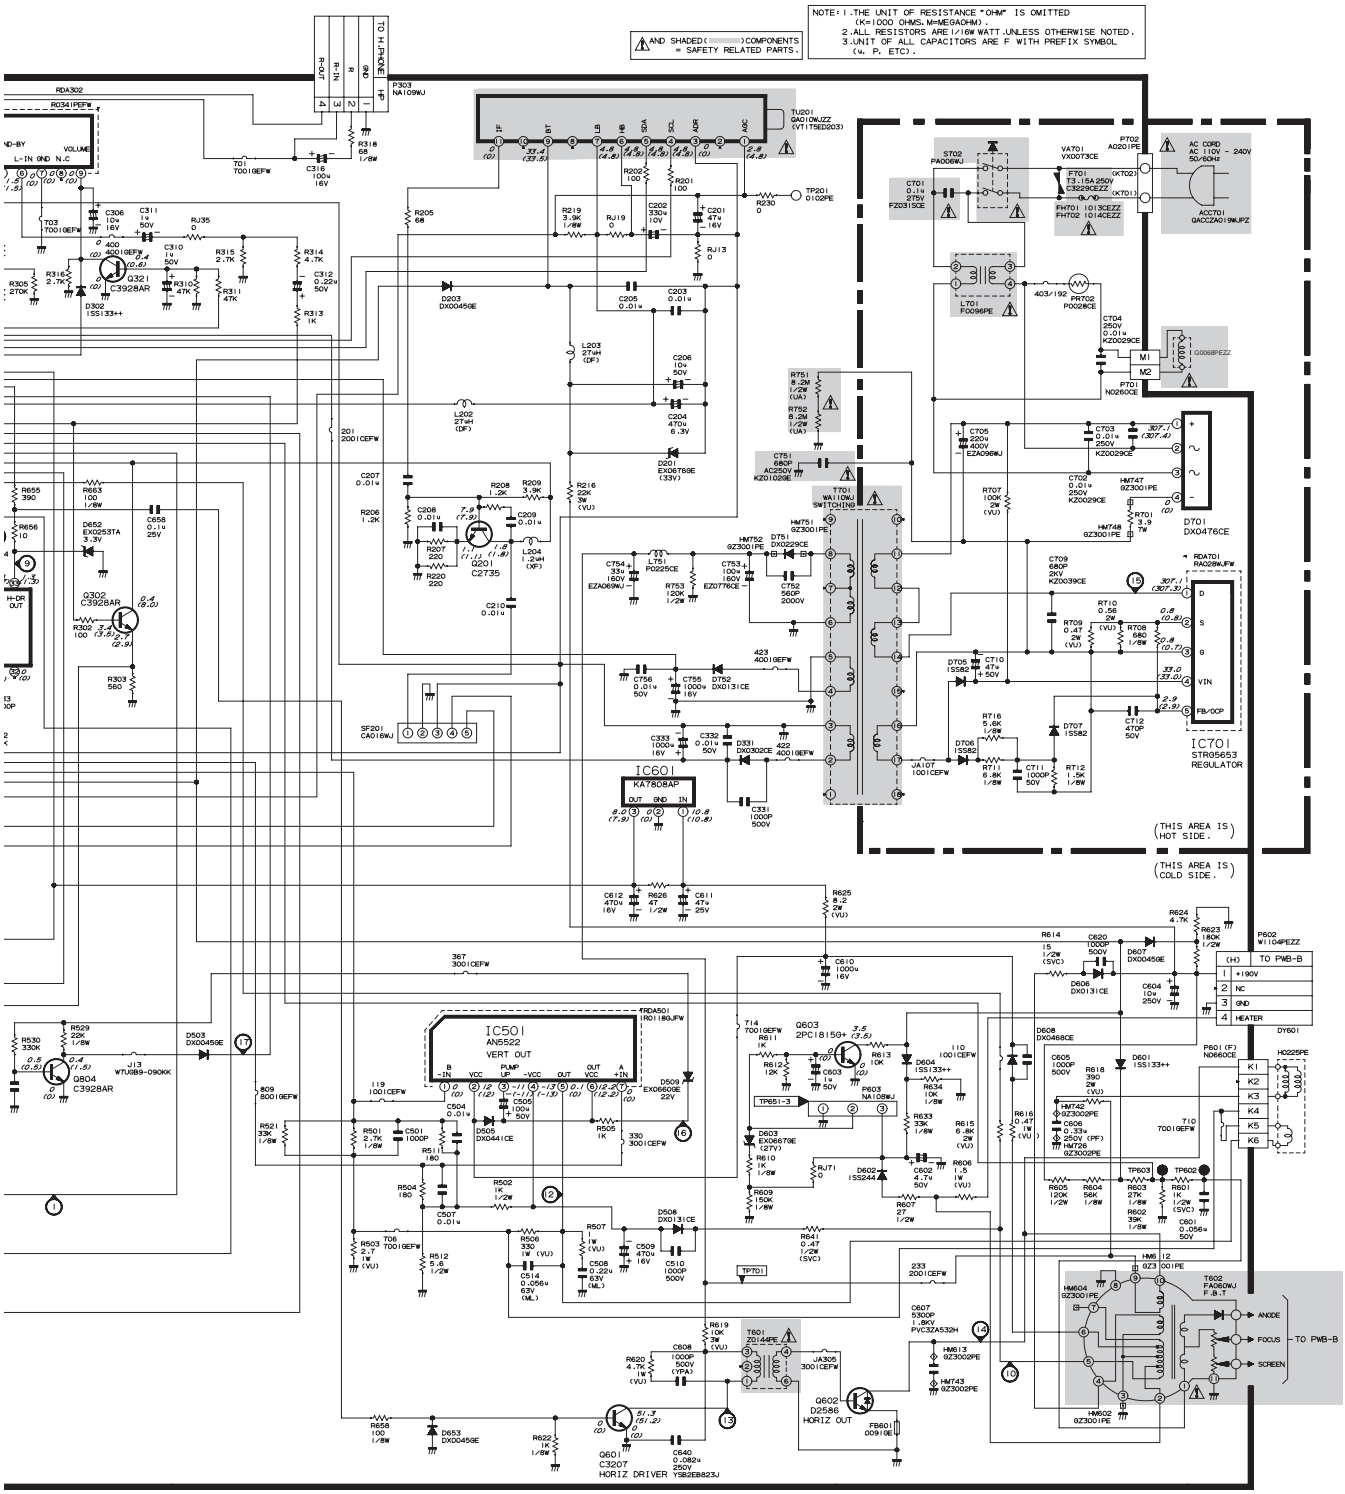
NOTE: 1.THE UNIT OF RESISTANCE "OHM" IS OMITTED (K=1000 OHMS, M=MEGAOHM).
2.ALL RESISTORS ARE 1/16W WATT.UNLESS OTHERWISE NOTED.
3.UNIT OF ALL CAPACITORS ARE F WITH PREFIX SYMBOL (u, P, ETC).
AND SHADED( ) COMPONENTS = SAFETY RELATED PARTS.
(THIS AREA IS HOT SIDE.)
(THIS AREA IS COLD SIDE.)
IC701 STR95653 REGULATOR
IC601 KA7808AP
IC501 AN5522 VERT OUT
Q602 D2586 HORIZ OUT
Q601 C3207 HORIZ DRIVER
TO H-PHONE
TO PWB-B
(H) TO PWB-B
1 +190V
2 NC
3 GND
4 HEATER
ANODE
FOCUS
SCREEN

10	11	12	13	14	15	16	17	18	19

SCHEMATIC DIAGRAM:MAIN UNIT (14D1-SF/GF)

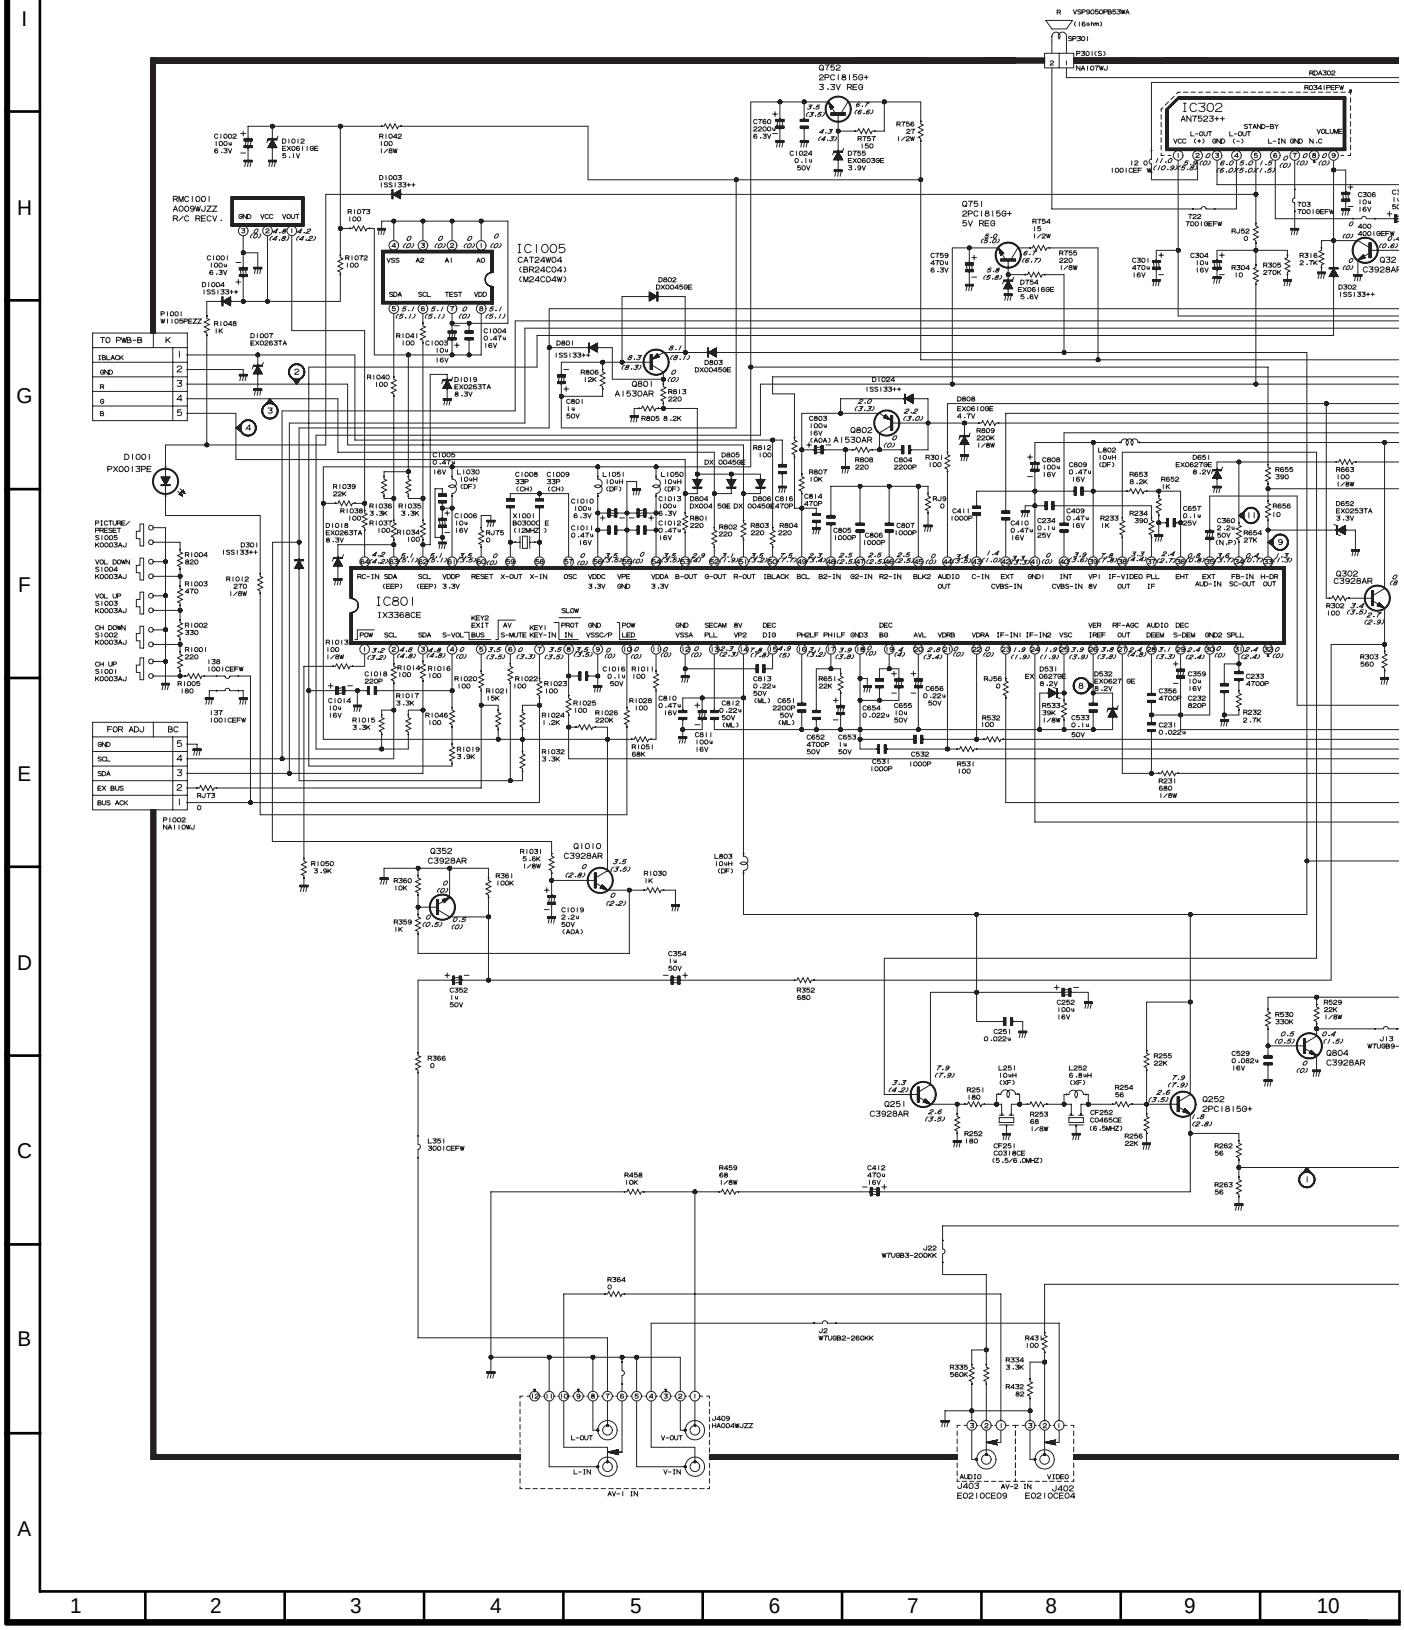

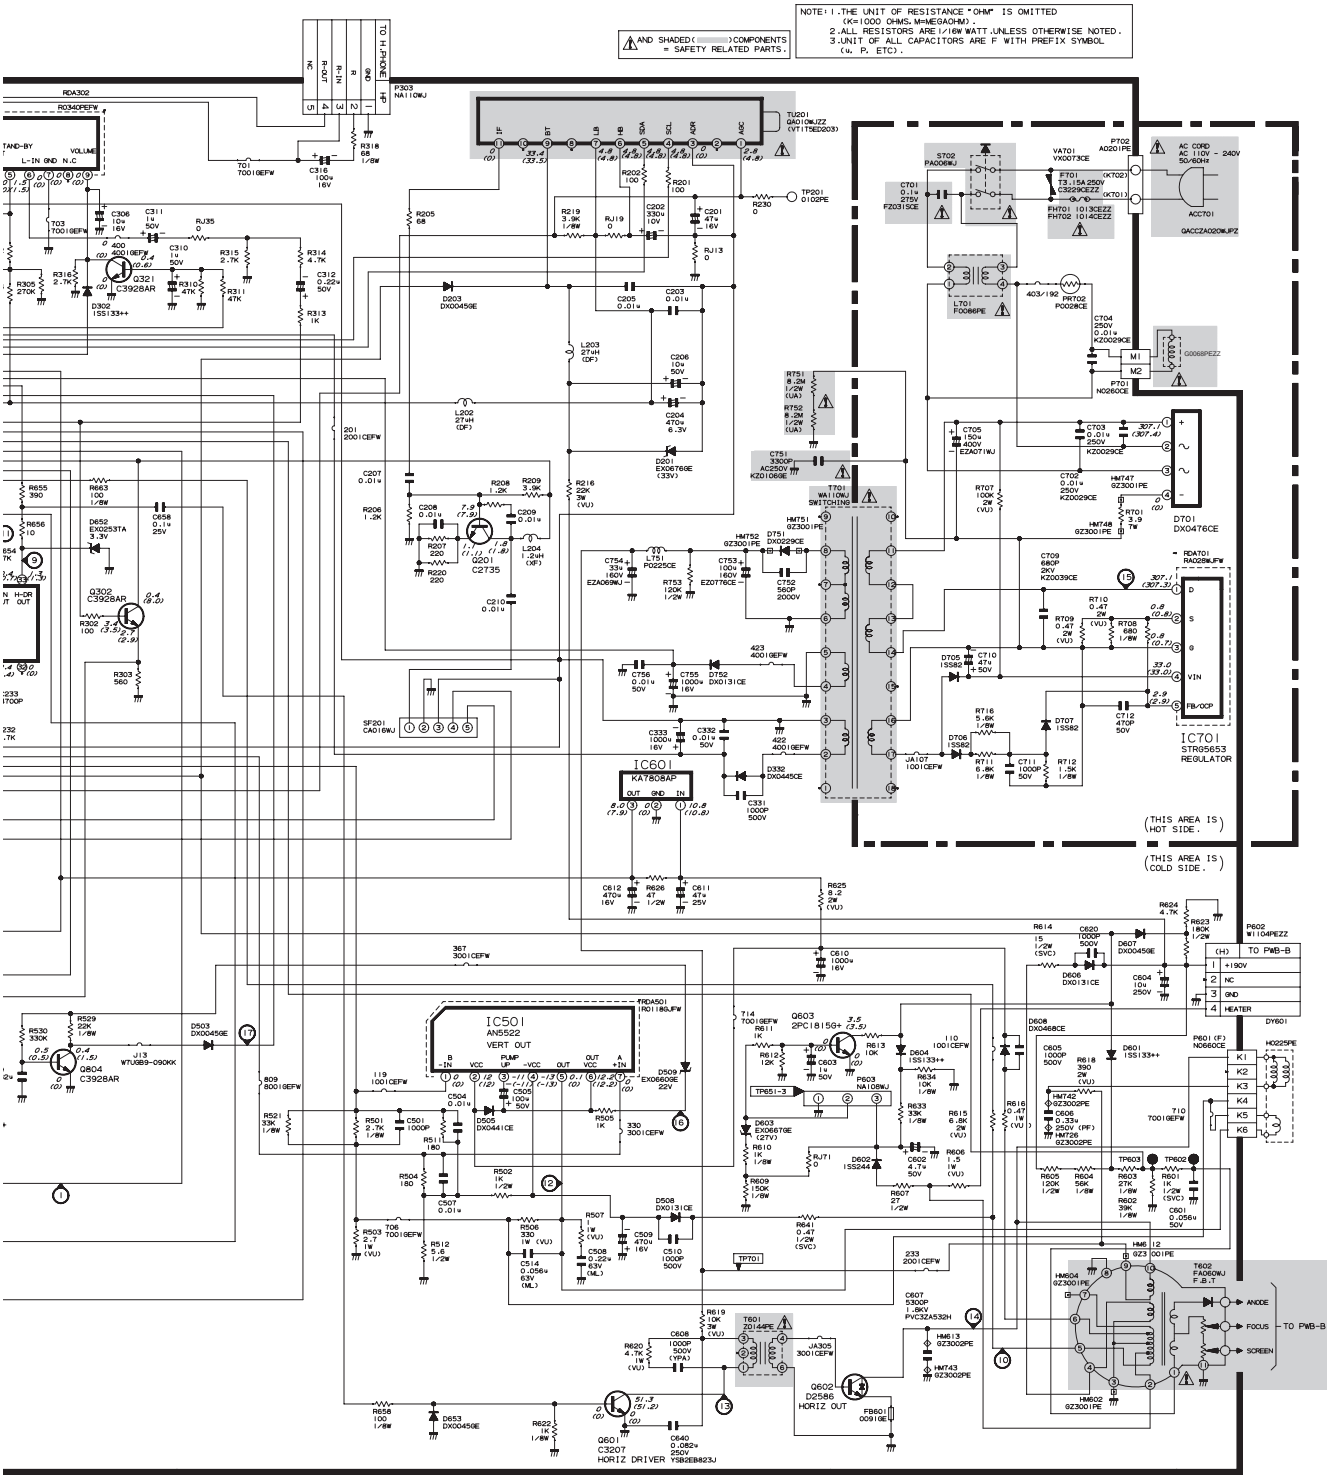

10	11	12	13	14	15	16	17	18	19

SCHEMATIC DIAGRAM:MAIN UNIT (14D2-SA/GA)

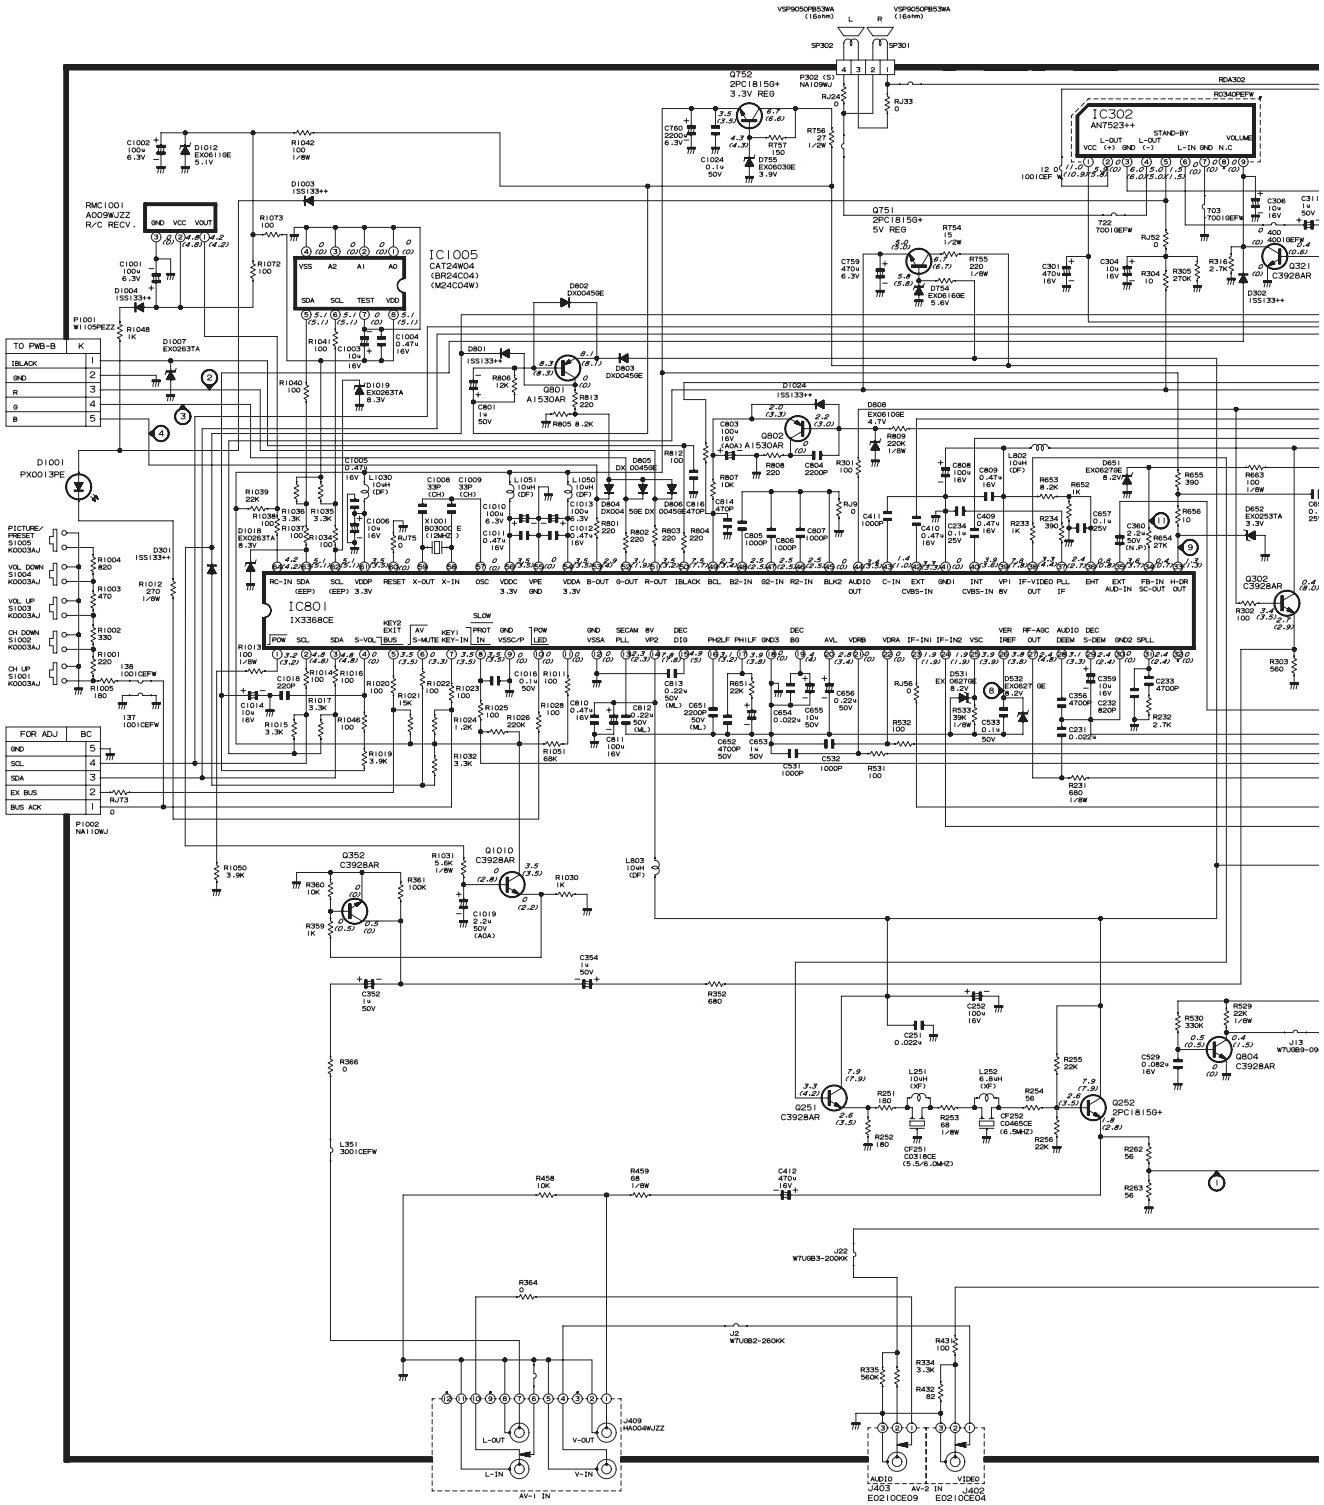

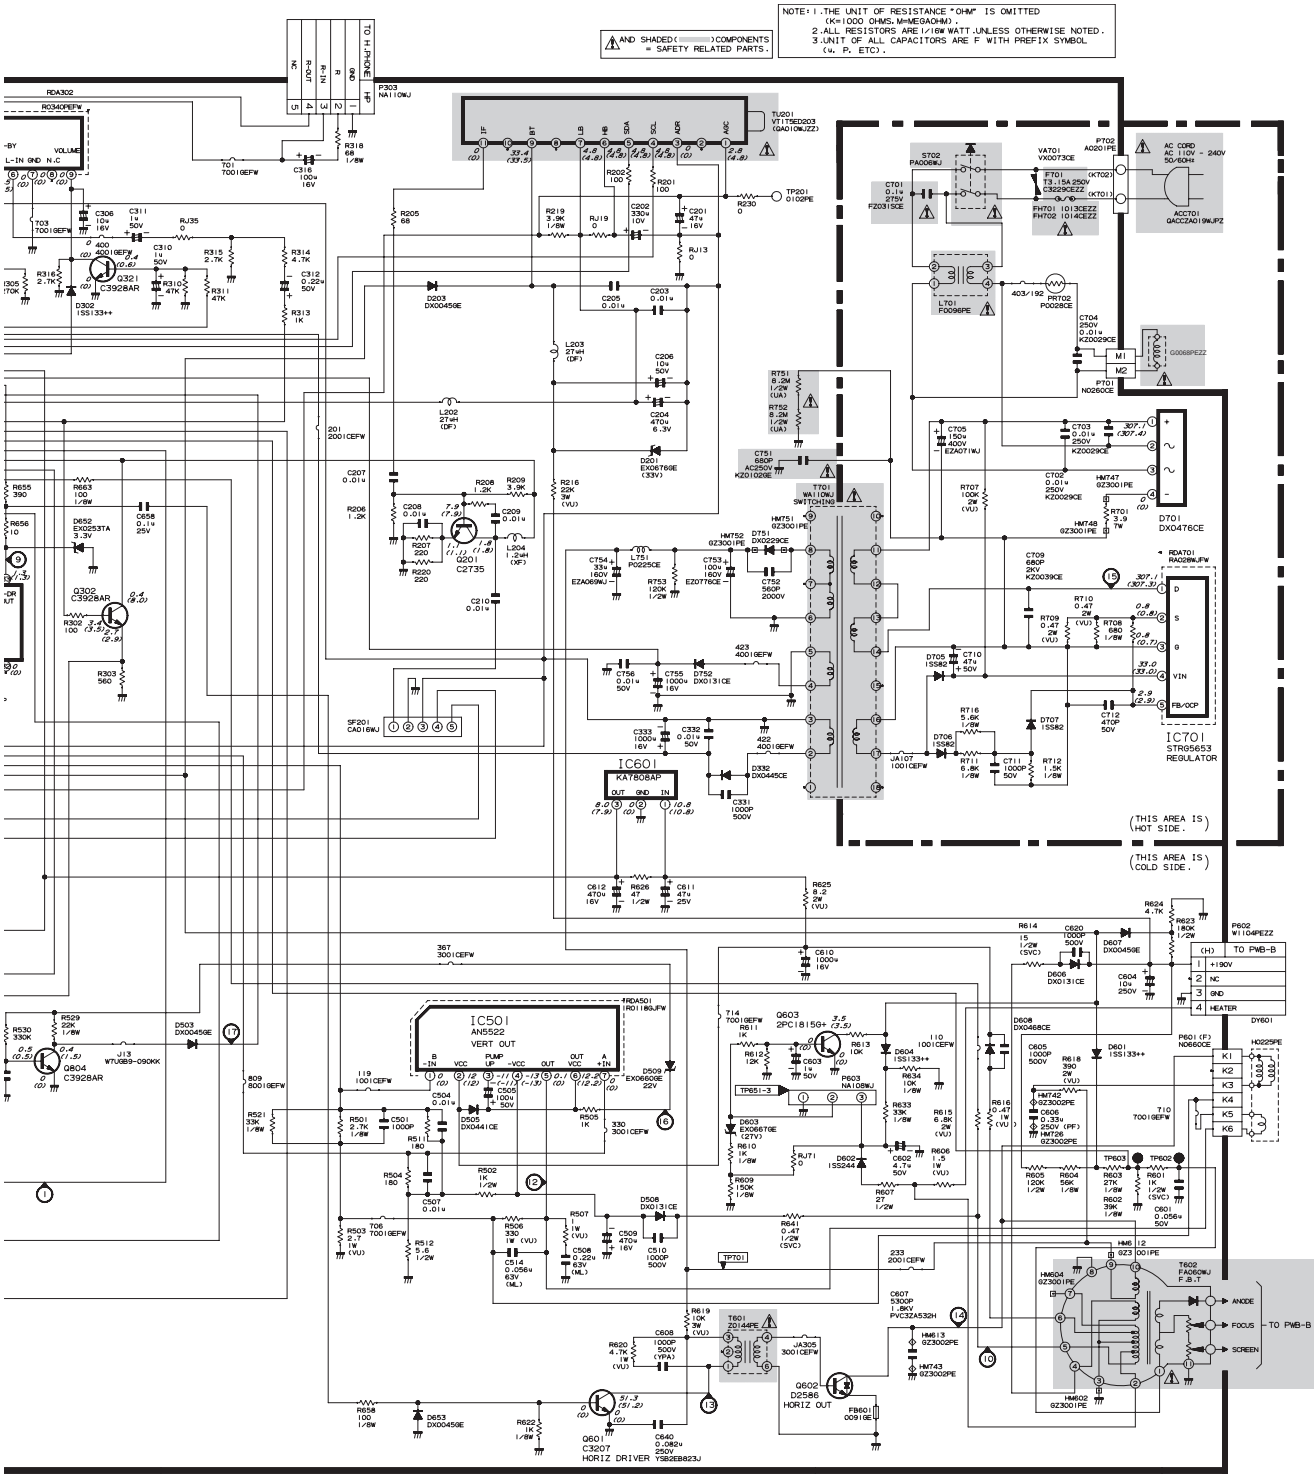

10	11	12	13	14	15	16	17	18	19

SCHEMATIC DIAGRAM:MAIN UNIT (14D2-SF/GF)

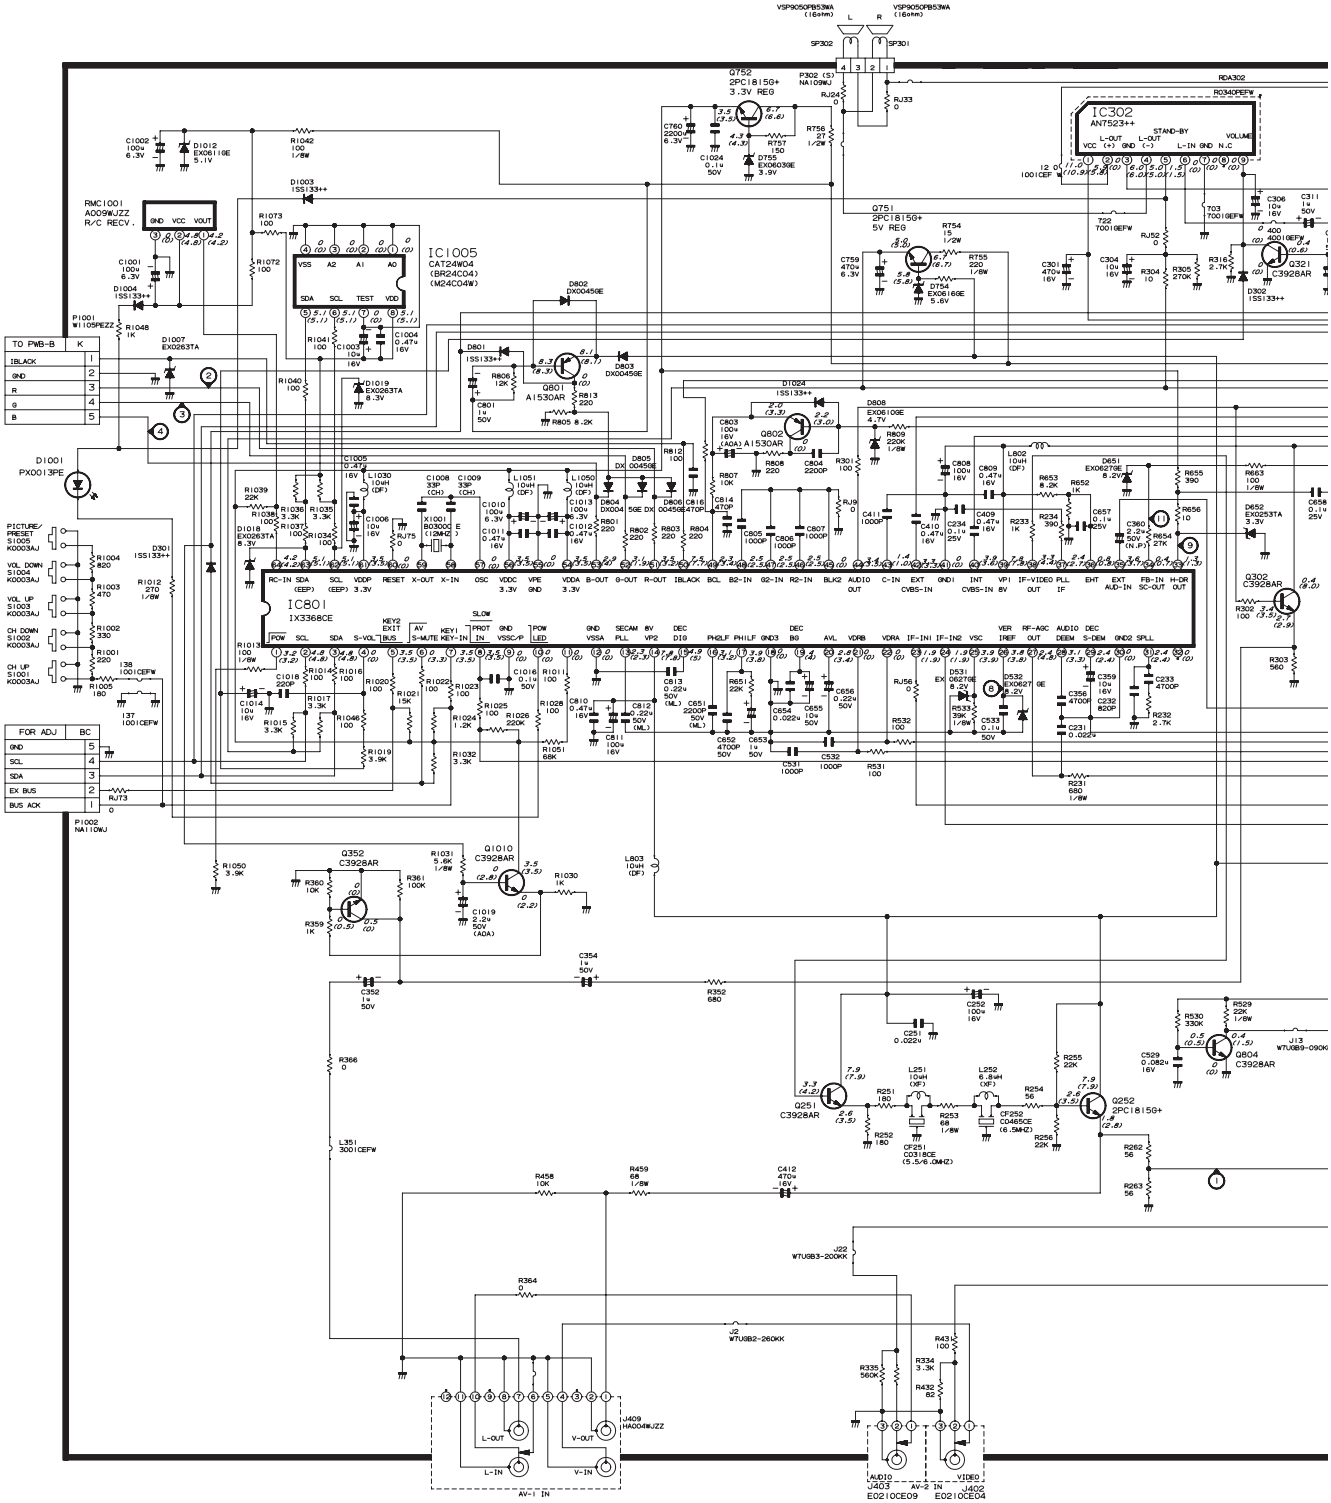

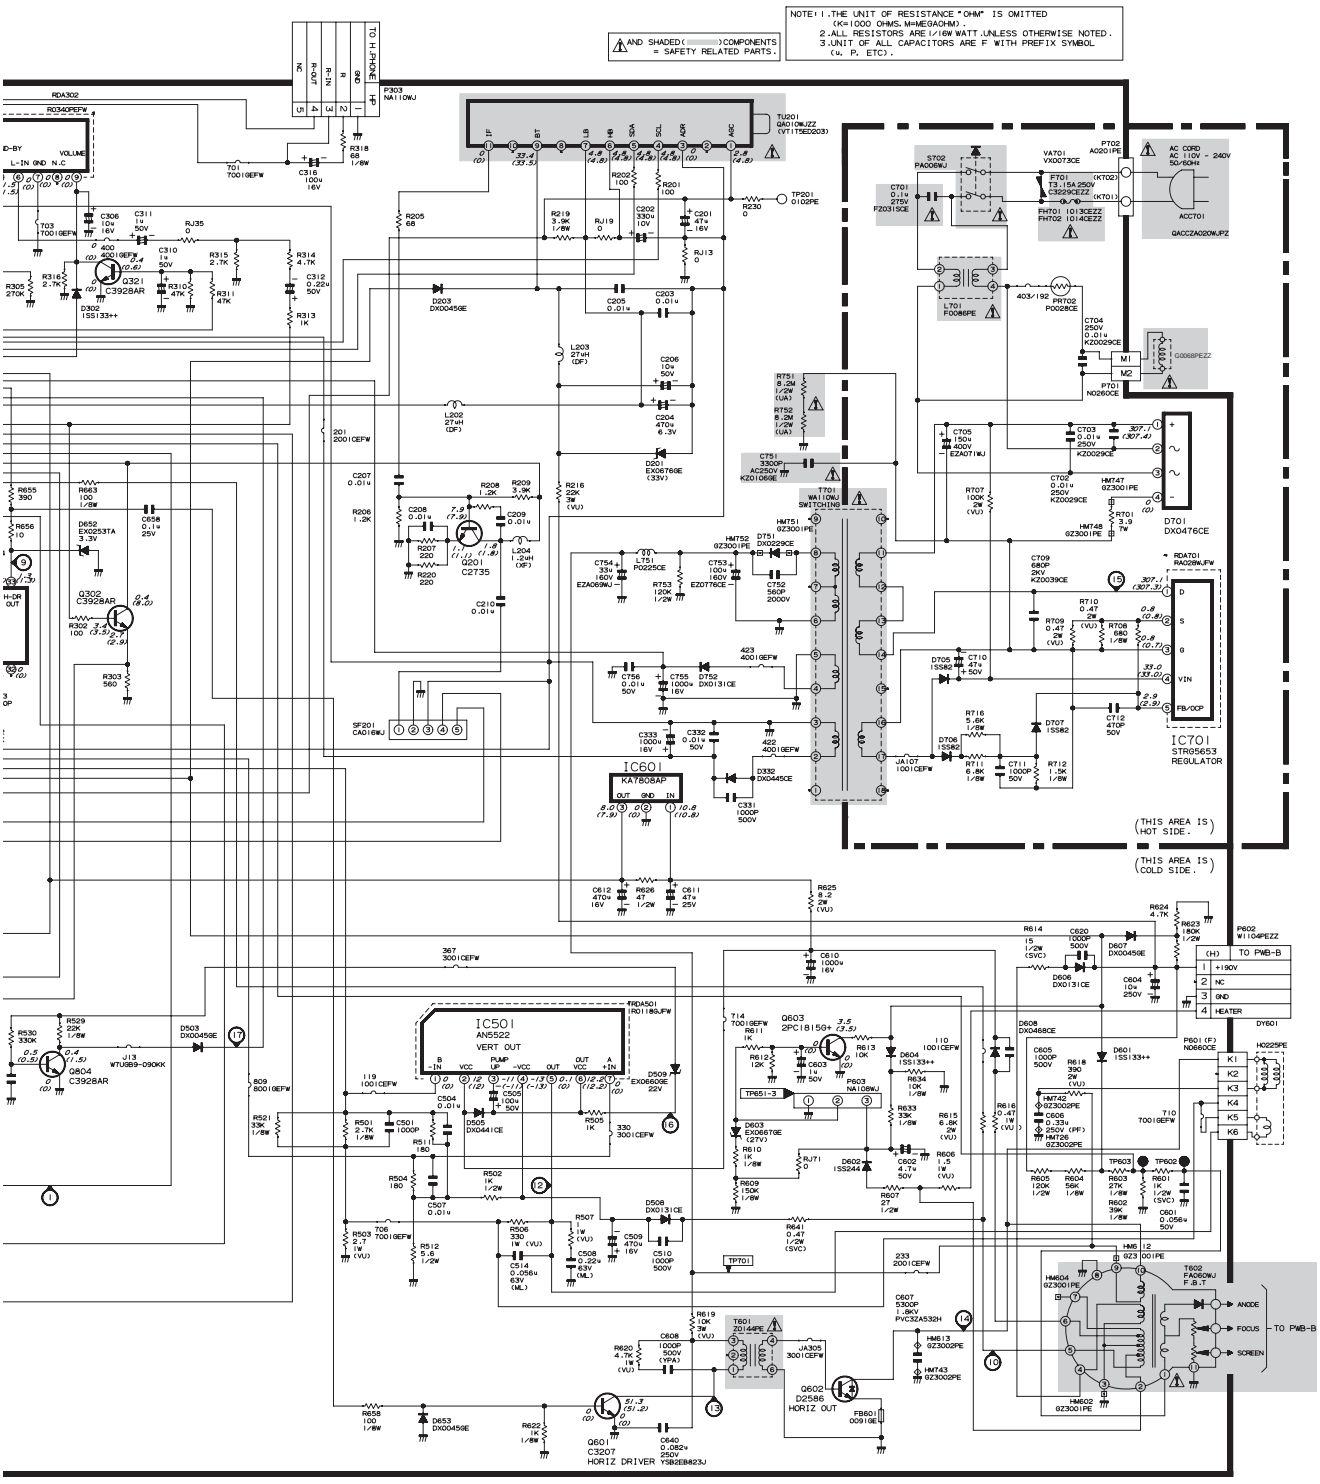
NOTE!!.THE UNIT OF RESISTANCE "OHM" IS OMITTED (K=1000 OHMS, M=MEGAOHM).
2.ALL RESISTORS ARE 1/6W WATT.UNLESS OTHERWISE NOTED.
3.UNIT OF ALL CAPACITORS ARE F WITH PREFIX SYMBOL (u, P, ETC).
AND SHADED( ) COMPONENTS = SAFETY RELATED PARTS.
IC601 KA7808AP
IC501 AN5522 VERT OUT
IC701 STR05653 REGULATOR
(THIS AREA IS HOT SIDE.)
(THIS AREA IS COLD SIDE.)
HORIZ DRIVER
HORIZ OUT
TO PWB-B
ANODE
FOCUS
SCREEN

10	11	12	13	14	15	16	17	18	19

SCHEMATIC DIAGRAM:CRT UNIT (14D1-SA/GA)

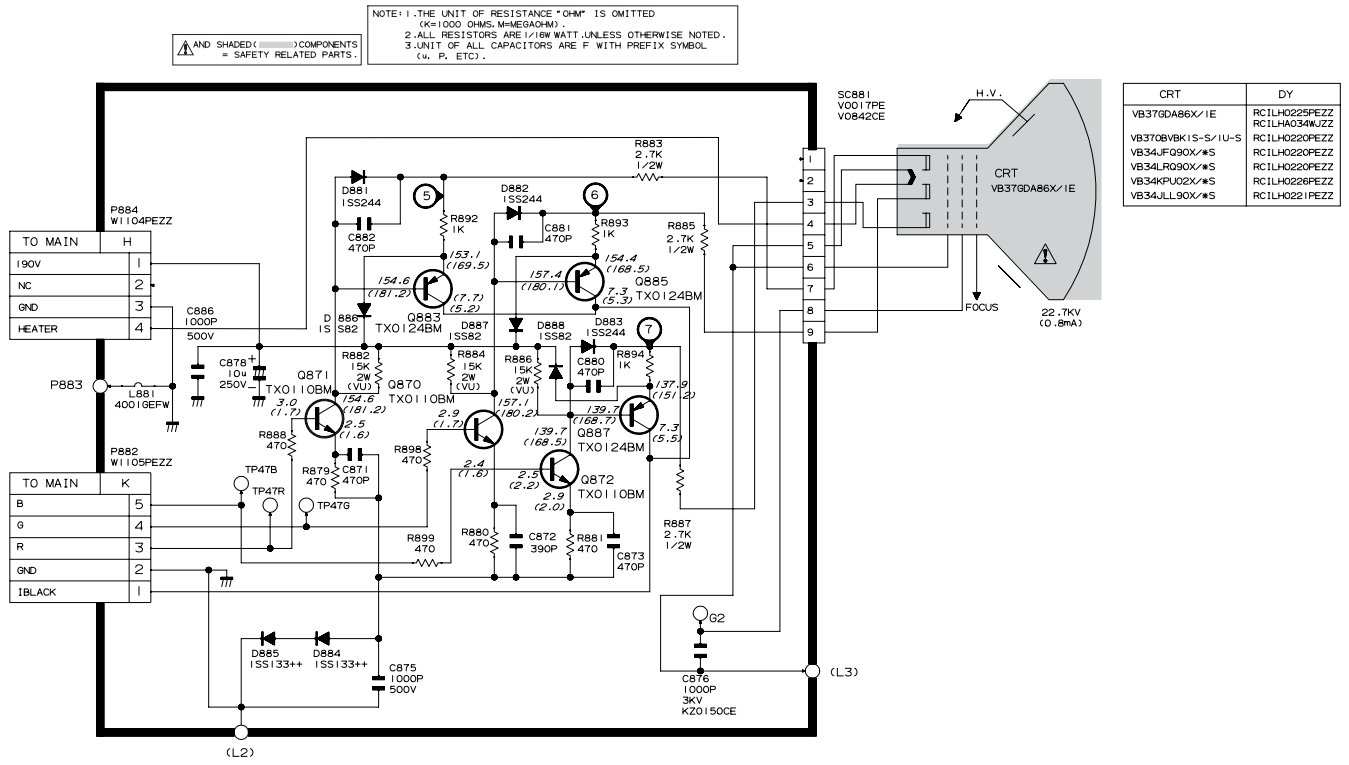

CRT	DY
VB37GDA86X/1E	RCILH0225PEZZ RCILHA034WJZZ
VB370BVBK1S-S/1U-S	RCILH0220PEZZ
VB34JFQ90X/*S	RCILH0220PEZZ
VB34LRQ90X/*S	RCILH0220PEZZ
VB34KPU02X/*S	RCILH0226PEZZ
VB34JLL90X/*S	RCILH0221PEZZ

(14D1-SF/GF)

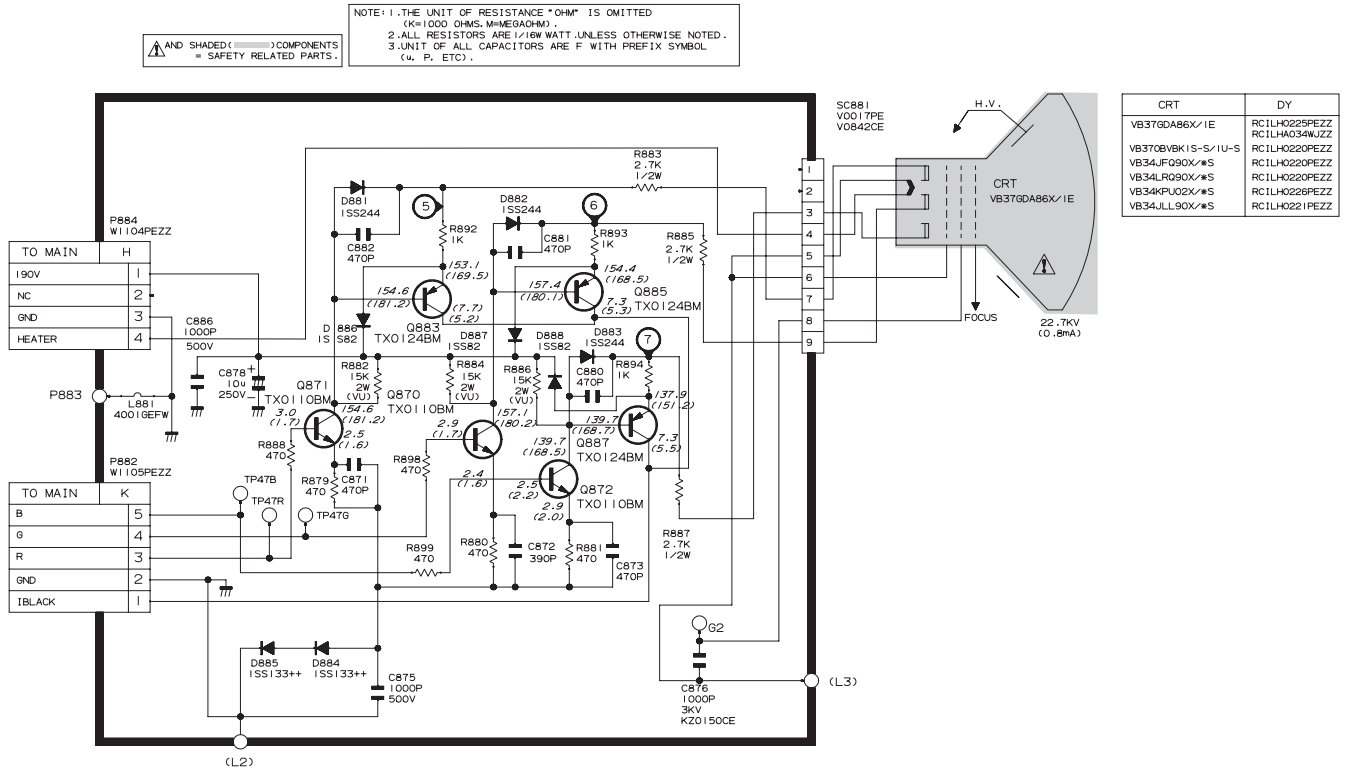

CRT	DY
VB37GDA86X/1E	RCILH0225PEZZ RCILHA034WJZZ
VB370BVBK1S-S/1U-S	RCILH0220PEZZ
VB34JFQ90X/*S	RCILH0220PEZZ
VB34LRQ90X/*S	RCILH0220PEZZ
VB34KPU02X/*S	RCILH0226PEZZ
VB34JLL90X/*S	RCILH0221PEZZ

SCHEMATIC DIAGRAM:CRT UNIT (14D2-SA/GA)

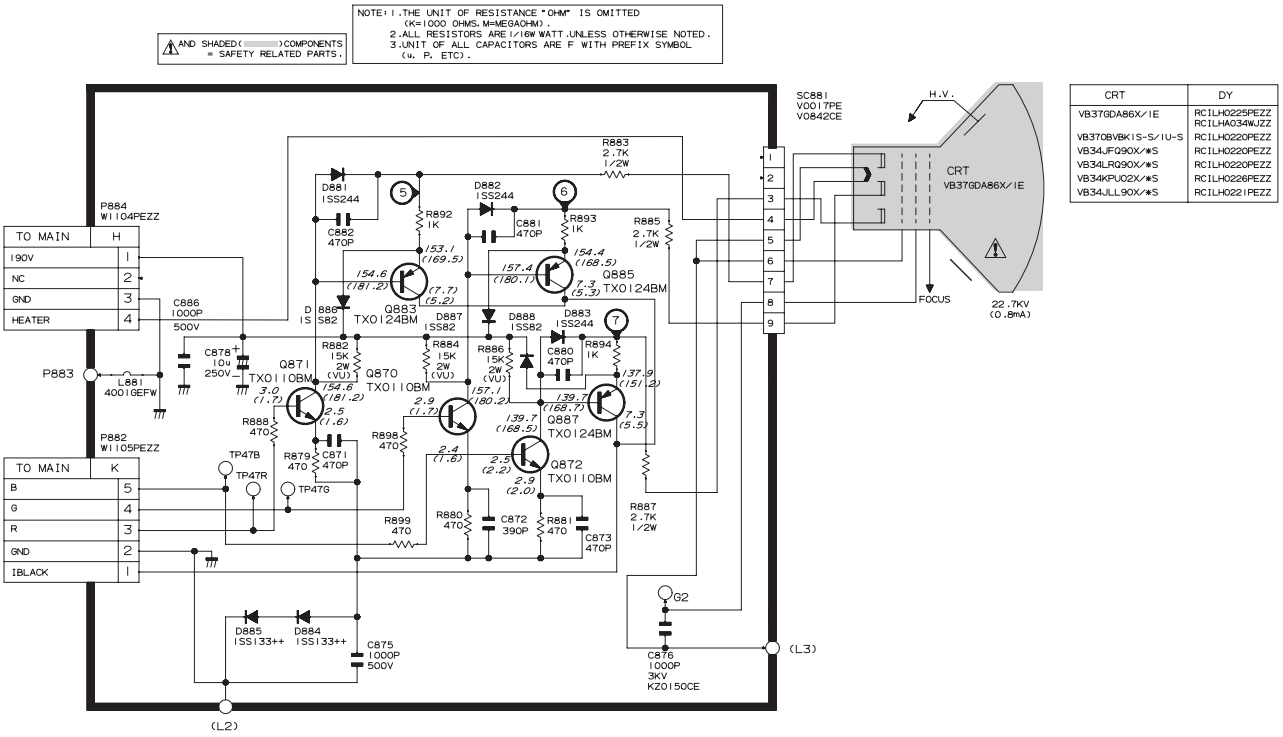

CRT	DY
VB37GDA86X/1E	RC1LH0225PEZZ RC1LHA034WJZZ
VB370BVBK1S-S/1U-S	RC1LH0220PEZZ
VB34JFG90X/*S	RC1LH0220PEZZ
VB34LRG90X/*S	RC1LH0220PEZZ
VB34KPU02X/*S	RC1LH0226PEZZ
VB34JLL90X/*S	RC1LH022!PEZZ

(14D2-SF/GF)

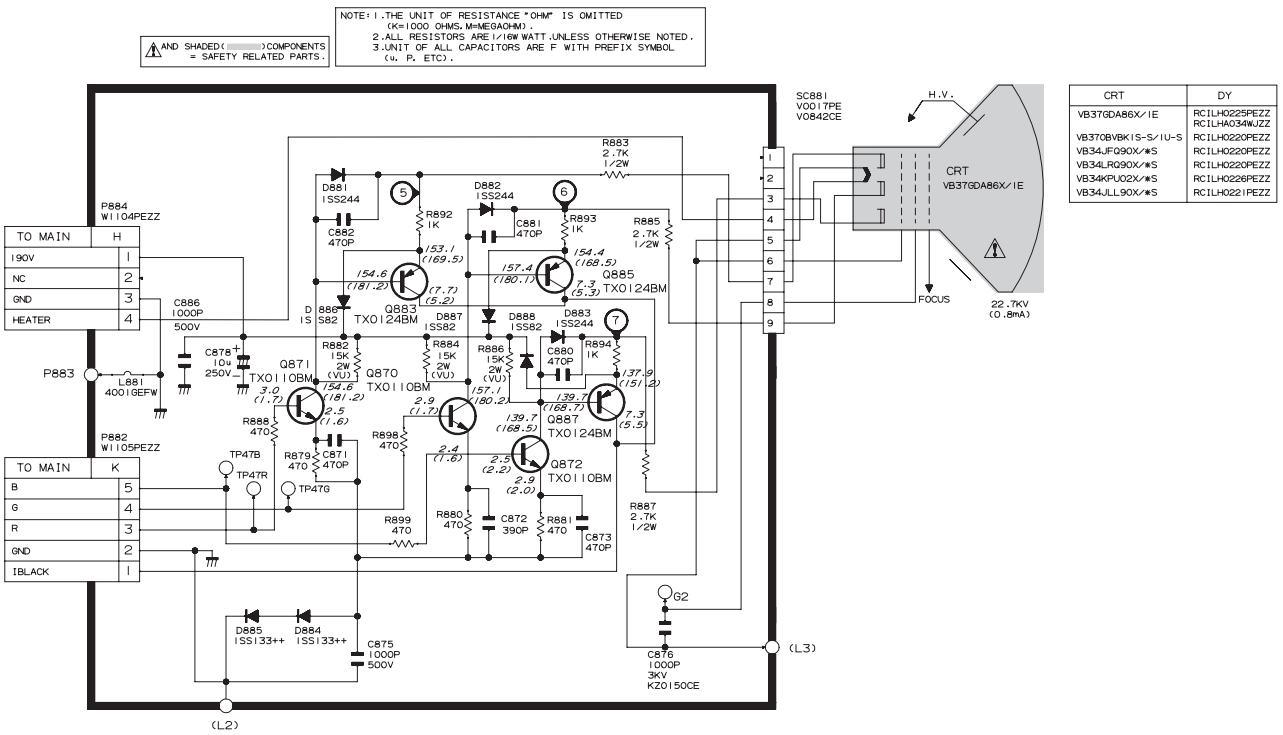

CRT	DY
VB37GDA86X/1E	RC1LH0225PEZZ RC1LHA034WJZZ
VB370BVBK1S-S/1U-S	RC1LH0220PEZZ
VB34JFG90X/*S	RC1LH0220PEZZ
VB34LRG90X/*S	RC1LH0220PEZZ
VB34KPU02X/*S	RC1LH0226PEZZ
VB34JLL90X/*S	RC1LH022!PEZZ

SCHEMATIC DIAGRAM:HEADPHONE UNIT (14D1-SA/GA)

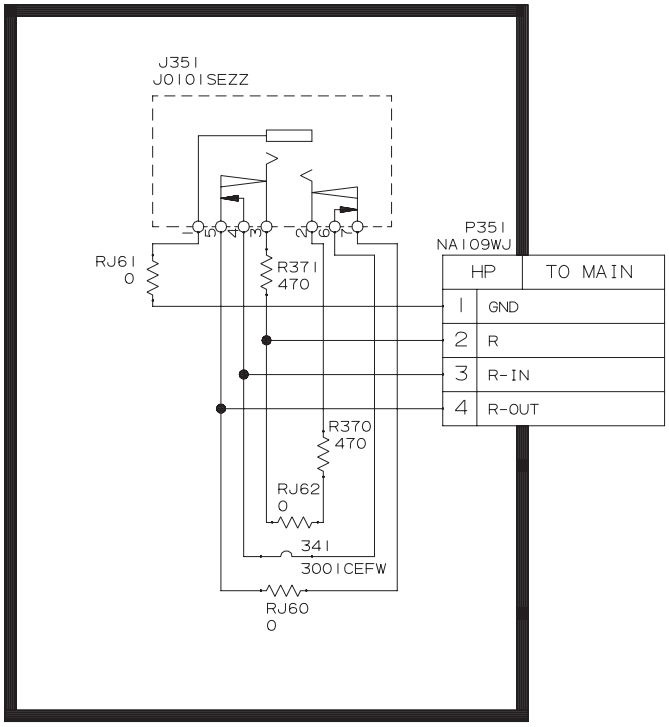

(14D1-SF/GF)

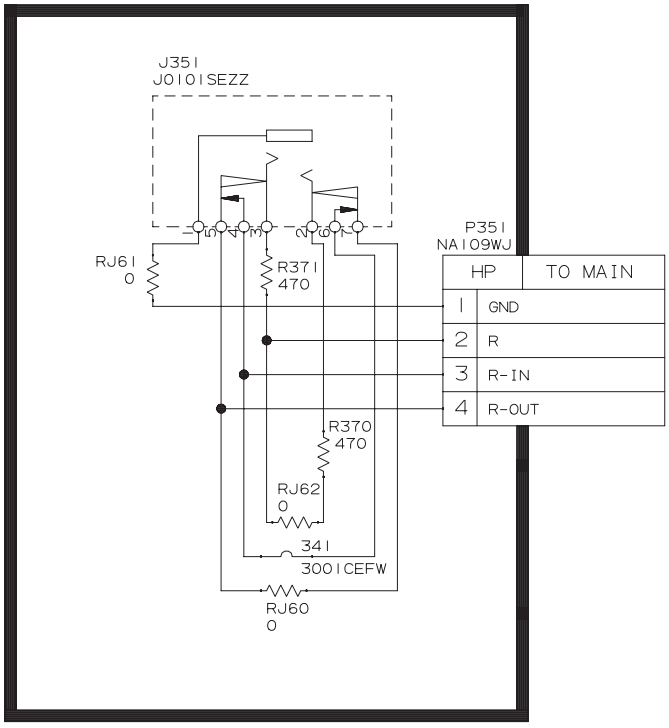

SCHEMATIC DIAGRAM:HEADPHONE UNIT (14D2-SA/GA)

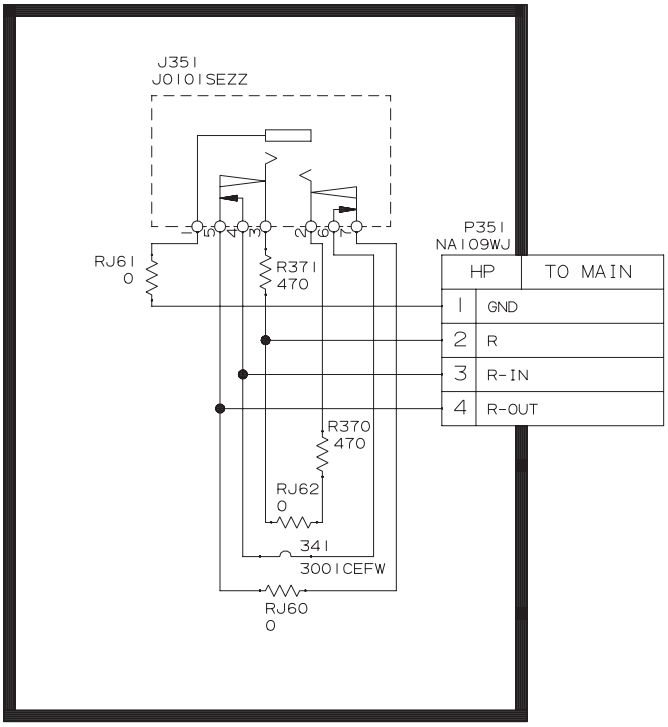

(14D2-SF/GF)

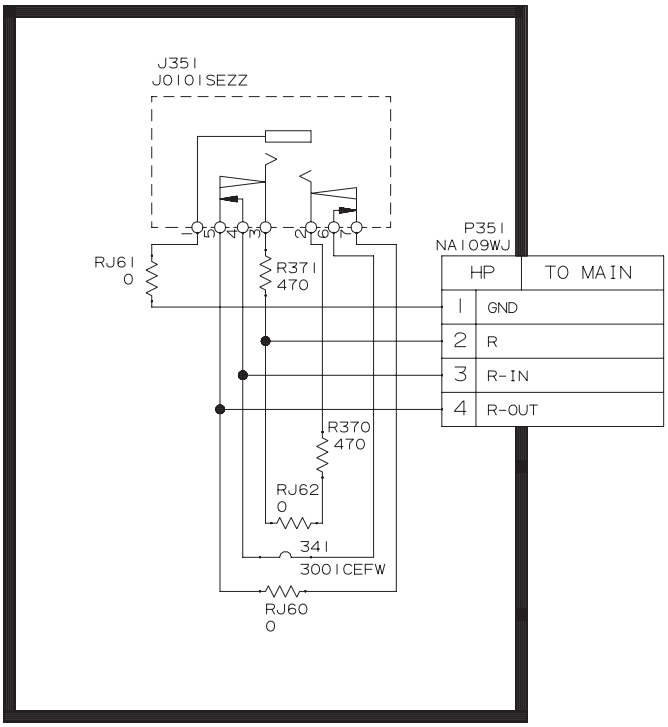

PRINTED WIRING BOARD ASSEMBLIES

PWB-A: MAIN UNIT (Wiring side)

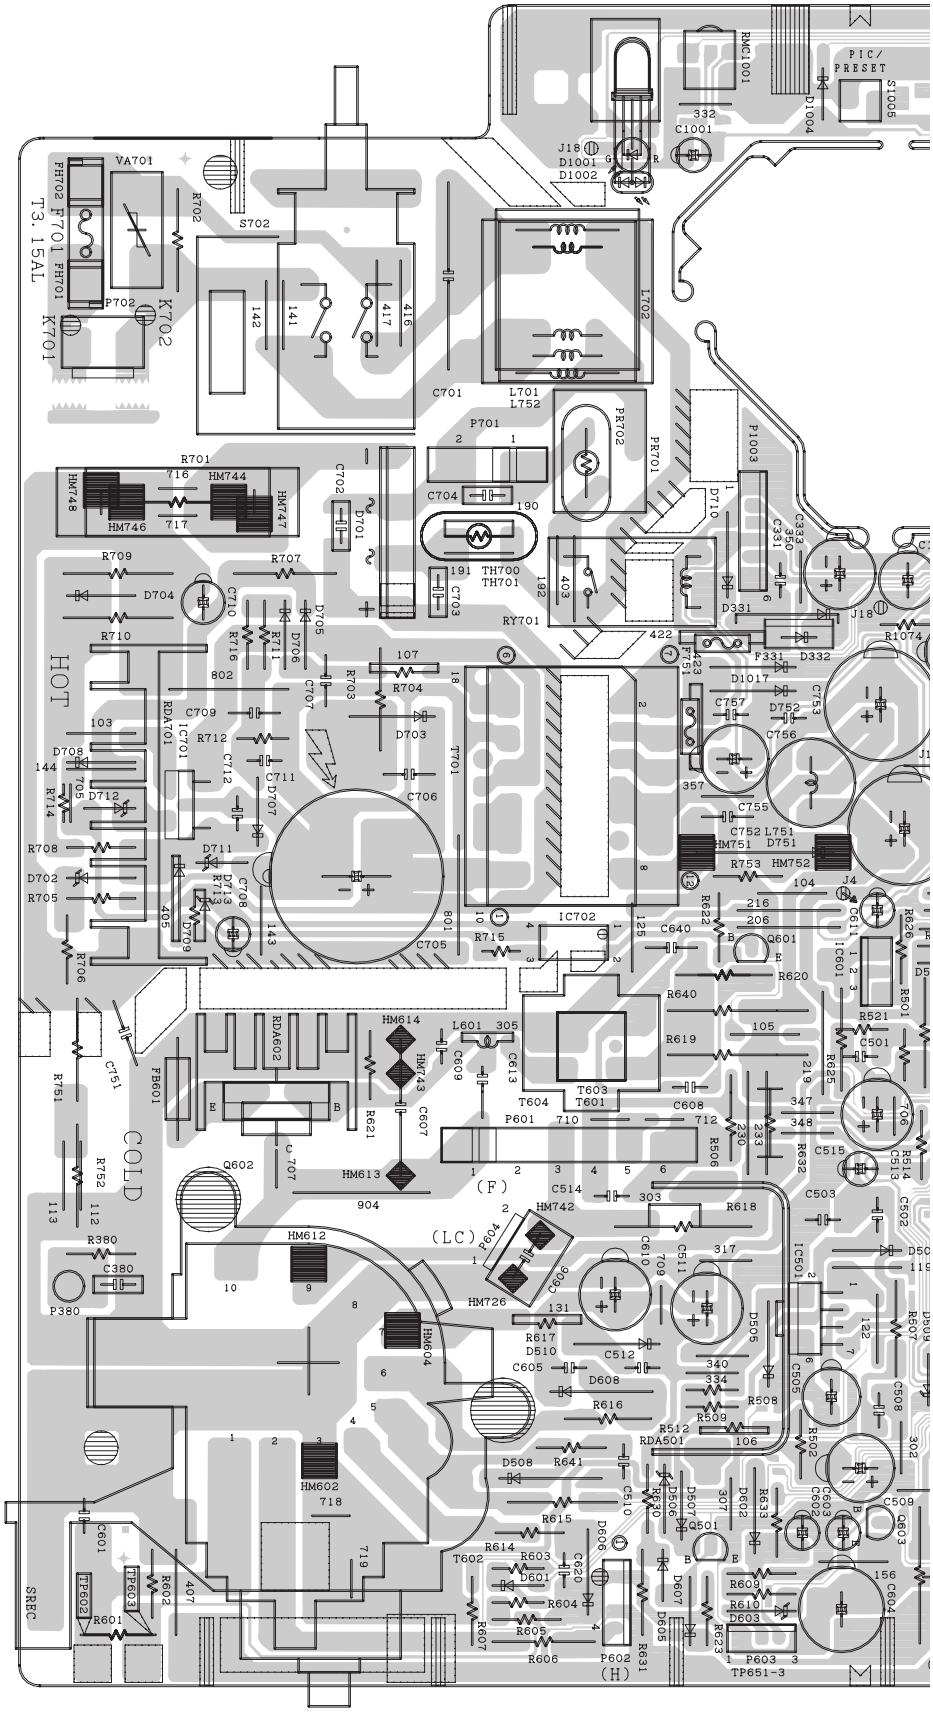
HOT
COLD
SREC
T3.15AL
K701
K702
VA701
S702
P702
P701
L701
L752
L702
C701
RMC1001
PIC/
PRESET
S1005
D1004
C1001
J18
D1001
D1002
TH700
TH701
RY701
D331
D332
F331
R1074
D1017
D752
C757
C756
C755
C753
C752
L751
D751
HM751
HM752
R753
J4
IC702
Q601
R620
R640
R619
R521
C501
R625
C608
C515
R506
R632
C514
C503
C502
R618
HM742
HM743
HM614
HM613
HM612
HM604
HM602
HM726
HM746
HM747
HM748
HM744
R701
R709
R707
D704
D705
D706
R710
R716
R711
C710
C707
R703
R704
D703
C706
C705
T701
IC701
RDA701
C709
R712
C712
C711
D707
D708
R714
D712
R708
D711
D713
C708
D709
D702
R705
R706
C751
R751
FB601
RDA602
C609
C613
L601
C607
R621
T603
T601
T604
P601
C608
Q602
C707
R752
R380
C380
P380
C606
R617
D510
C605
C512
D608
R616
R512
RDA501
R641
D508
C510
R615
R614
R603
C620
D601
R604
R605
R606
R607
T602
D606
D605
R631
P602
(H)
(F)
(LC)
R601
R602
TP602
TP603
C601
D506
D507
R630
D502
R633
C602
C603
C509
C508
C505
R502
R508
R509
C504
R609
R610
D603
R623
P603
TP651-3
R622
C640
R626
R501
C611
IC601
D501
C610
C511
IC501
R607
D509
C502
C513
R514
D506
C506
C603
C604
C803
Q803
Q501
D602
D607

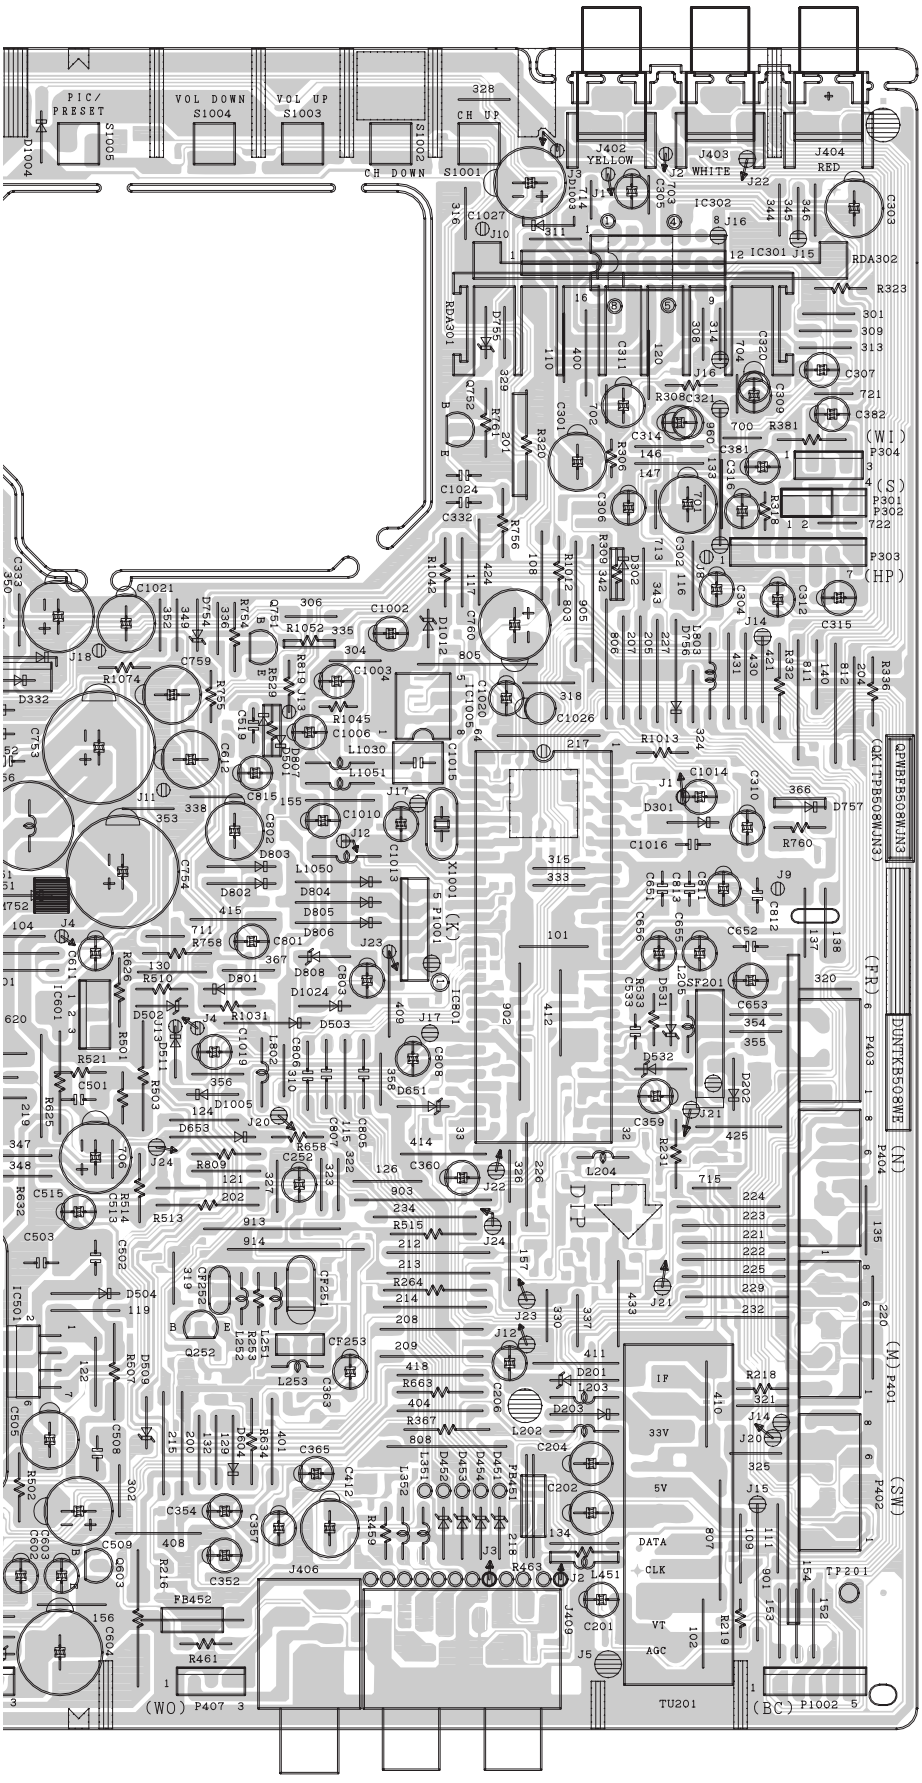

10	11	12	13	14	15	16	17	18	19

PWB-A: MAIN UNIT (Chip Parts Side)

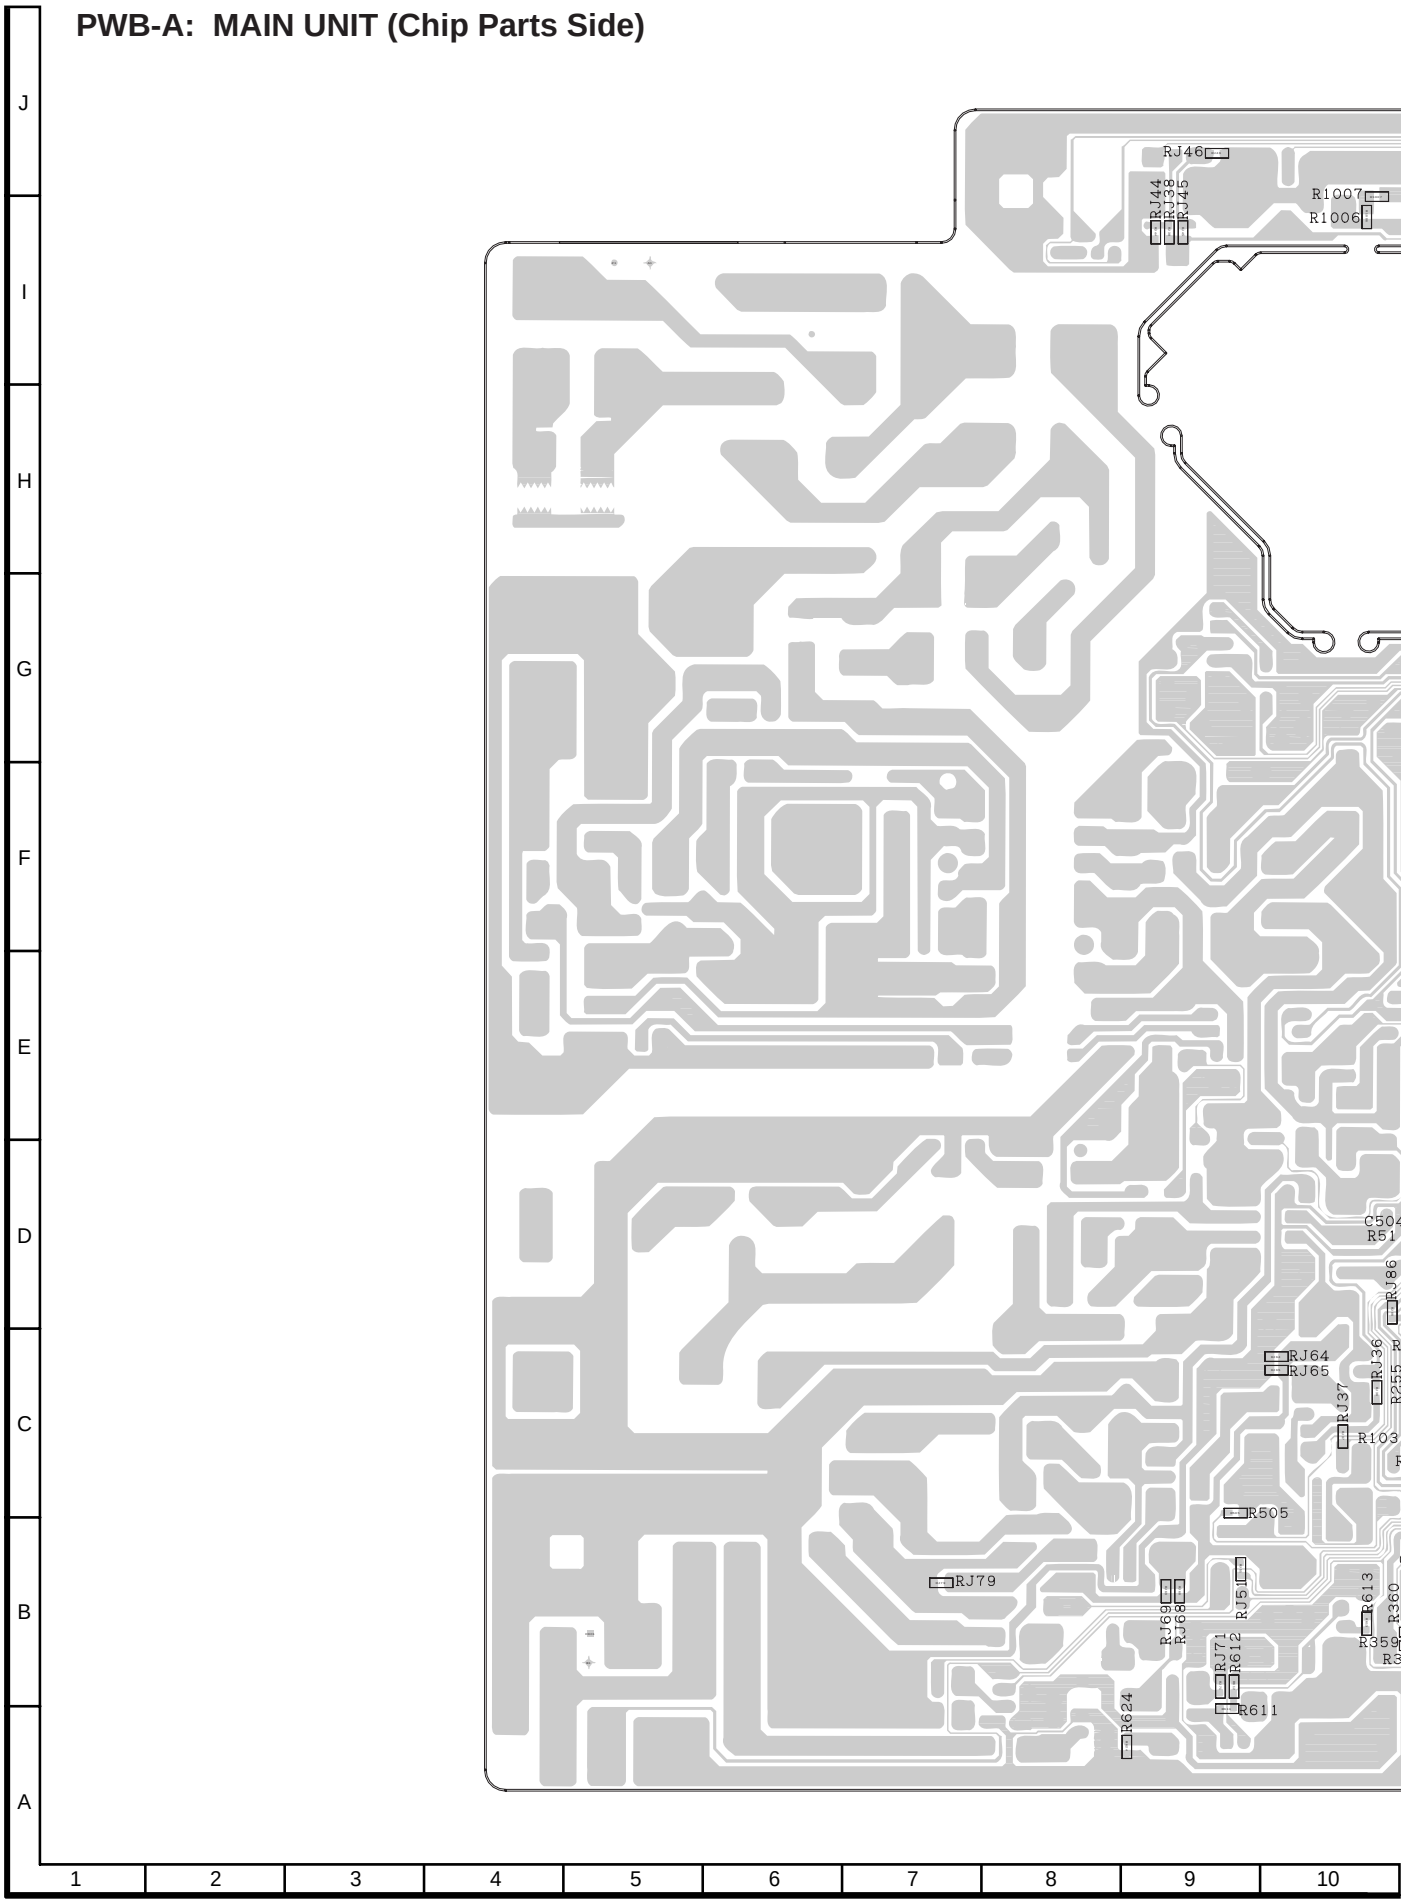

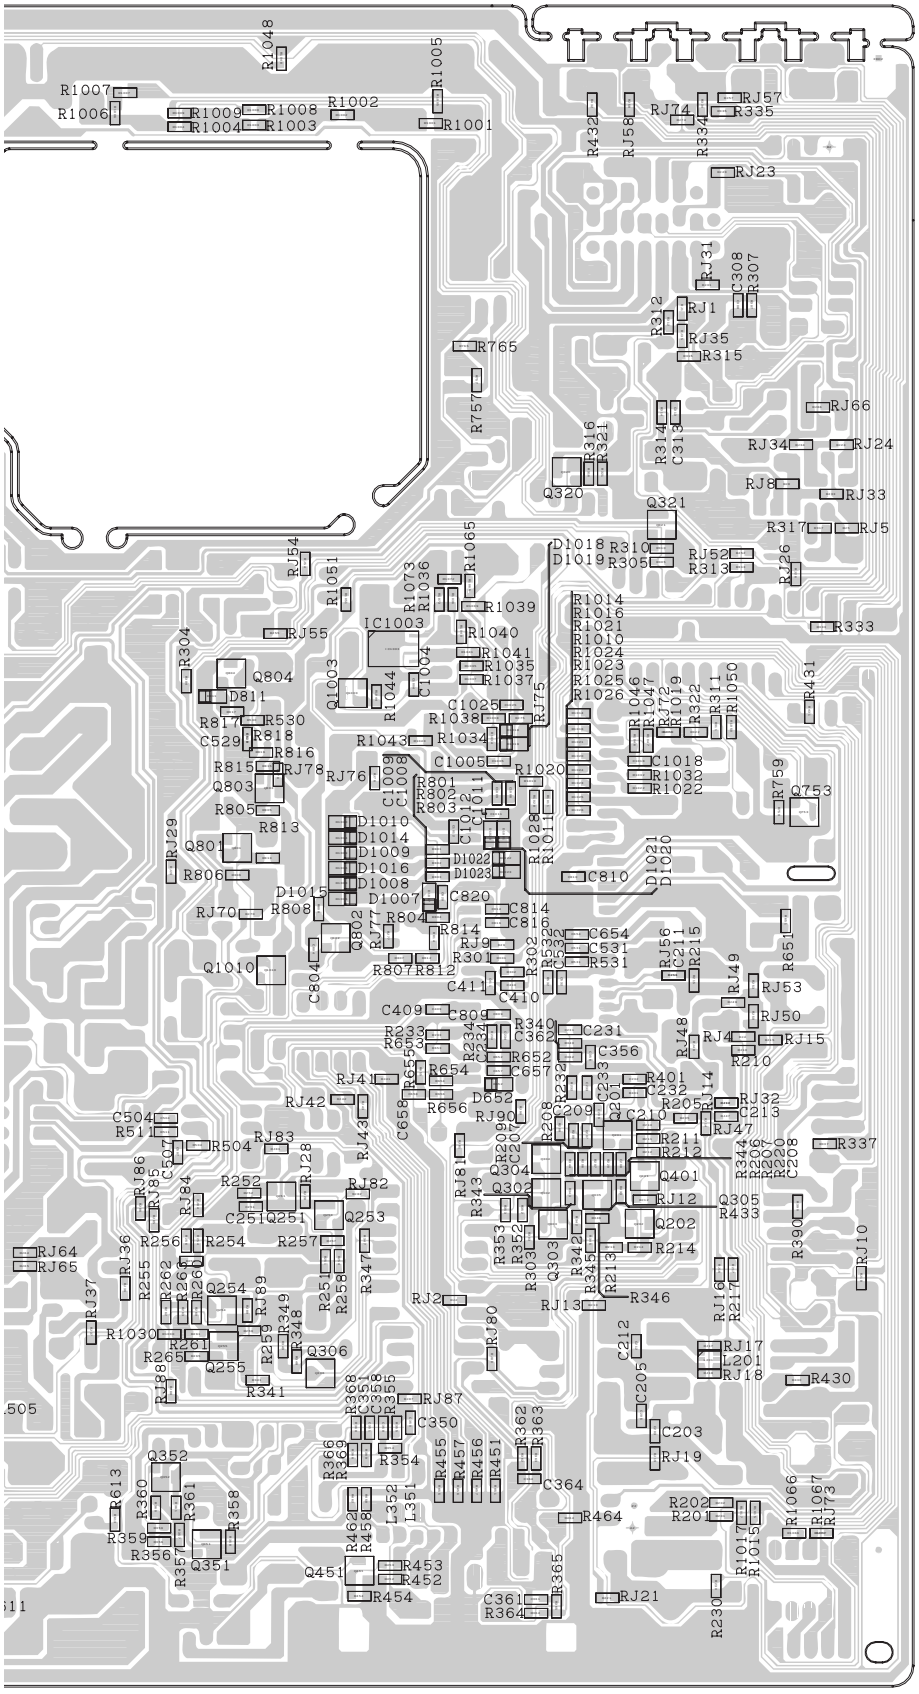

10	11	12	13	14	15	16	17	18	19

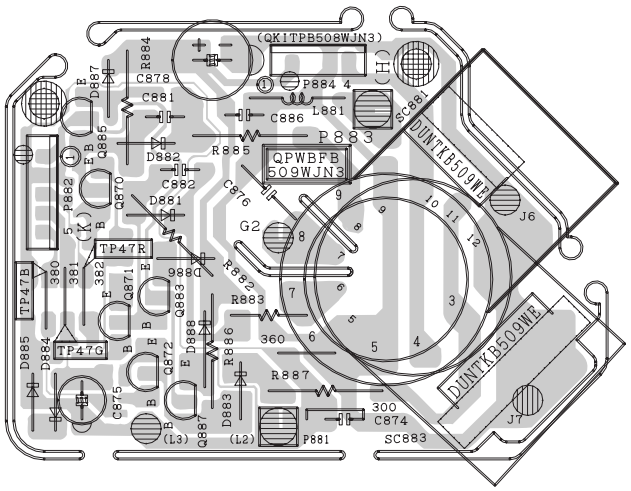

PWB-B: CRT UNIT (Wiring side)

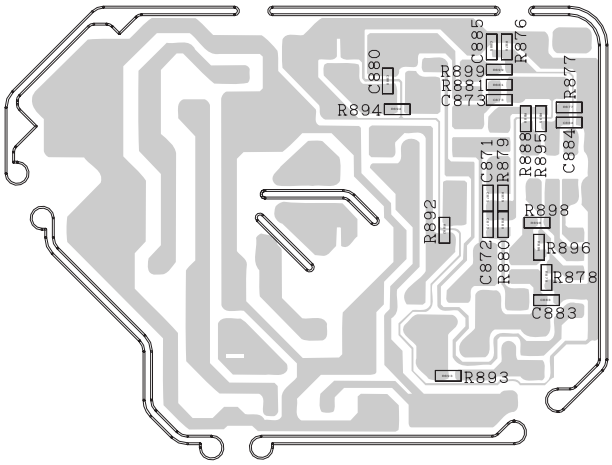

PWB-B: CRT UNIT (Chip Parts Side)

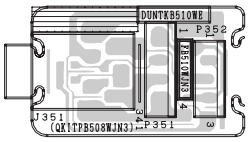

PWB-C: HEADPHONE UNIT (Wiring side)

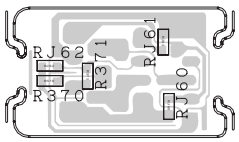

PWB-C HEADPHONE UNIT (Chip Parts Side)

REPLACEMENT PARTS LIST

PARTS REPLACEMENT

Replacement parts which have these special safety characteristics are identified in this manual; electrical components having such features are identified by "⚠" in the Replacement Parts Lists.
The use of a substitute replacement part which does not have the same safety characteristics as the factory recommended replacement parts shown in this service manual may create shock, fire or other hazards.

"HOW TO ORDER REPLACEMENT PARTS"

To have your order filled promptly and correctly, please furnish the following informations.

1. **MODEL NUMBER**
2. **REF. NO.**
3. **PART NO.**
4. **DESCRIPTION**

MARK ★ : SPARE PARTS-DELIVERY SECTION.

Ref. No.	Part No.	★	Description	Code

PICTURE TUBE

⚠	VB37GDA86X/1E	R	Picture Tube	CB
⚠	RCiLG0068PEZZ	R	Degaussing Coil	AH
DY601	RCiLH0225PEZZ	R	Deflection Yoke	AX
	PMAGF3045CEZZ	R	Magnet	AG
	QEARC1422PEZZ	R	Ground-Part	AD

PRINTED WIRING BOARD ASSEMBLY

PWB-A	DUNTKB508WED6	–	Main Unit (14D1-SA/14D1-GA)	—
PWB-A	DUNTKB508WED7	–	Main Unit (14D1-SF/14D1-GF)	—
PWB-A	DUNTKB508WED4	–	Main Unit (14D2-SA/14D2-GA)	—
PWB-A	DUNTKB508WED5	–	Main Unit (14D2-SF/14D2-GF)	—
PWB-B	DUNTKB509WED3	–	CRT Unit (14D1-SA/14D1-GA)	—
PWB-B	DUNTKB509WED4	–	CRT Unit (14D1-SF/14D1-GF)	—
PWB-B	DUNTKB509WED1	–	CRT Unit (14D2-SA/14D2-GA)	—
PWB-B	DUNTKB509WED2	–	CRT Unit (14D2-SF/14D2-GF)	—
PWB-C	DUNTKB510WEB4	–	Headphone Unit	—

Ref. No.	Part No.	★	Description	Code

DUNTKB508WED6 (14D1-SA/14D1-GA)
DUNTKB508WED7 (14D1-SF/14D1-GF)
DUNTKB508WED4 (14D2-SA/14D2-GA)
DUNTKB508WED5 (14D2-SF/14D2-GF)
PWB-A MAIN UNIT

BSTUNERS

⚠ TU201	RTUNQA010WJZZ	R	Tuner (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF/14D2-SF/14D2-GF)	AW
⚠ TU201	VTUVT1T5ED203	R	VHF Tuner (14D2-SA/14D2-GA)	AX

INTEGRATED CIRCUITS

IC302	VHiAN7523++-1	R	AN7523	AH
IC501	VHiAN5522++-1	R	AN5522	AH
IC601	VHiKA7808AP-1	R	KIA7808API	AE
IC701	VHiSTRG5653-1	R	STR-G5653	AQ
IC801	RH-iX3368CEN7	R	I.C.	BB
IC1005	VHiCAT24W04-1	R	CAT24WC04PI	AE

TRANSISTORS

Q201	VS2SC2735//1EY	R	2SC2735	AC
Q251	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q252	VS2PC1815G+-1+	R	2PC1815G	AC
Q302	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q321	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q352	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q601	VS2SC3207//-1+	R	2SC3207	AC
Q602	VS2SD2586//1E	R	2SD2586	AM
Q603	VS2PC1815G+-1+	R	2PC1815G	AC
Q751	VS2PC1815G+-1+	R	2PC1815G	AC
Q752	VS2PC1815G+-1+	R	2PC1815G	AC
Q801	VS2SA1530AR-1Y	R	2SA1530AR	AB
Q802	VS2SA1530AR-1Y	R	2SA1530AR	AB
Q804	VS2SC3928AR-1Y	R	2SC3928AR	AB
Q1010	VS2SC3928AR-1Y	R	2SC3928AR	AB

DIODES AND LED'S

D201	RH-EX0676GEZZY	R	"Zener Diode, 33V"	AA
D203	RH-DX0045GEZZY	R	DX0045GE	AA
D301	VHD1SS133++-1Y	R	1SS133++	AA
D302	VHD1SS133++-1Y	R	1SS133++	AA
D331	RH-DX0302CEZZY	R	DX0302CE (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AC
D332	RH-DX0445CEZZ	R	DX0445CE (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AL
D503	RH-DX0045GEZZY	R	DX0045GE	AA
D505	RH-DX0441CEZZY	R	DX0441CE	AC
D508	RH-DX0131CEZZY	R	DX0131CE	AC
D509	RH-EX0660GEZZY	R	Zener Diode, 22V	AB
D531	RH-EX0627GEZZY	R	Zener Diode, 8.2V	AA
D532	RH-EX0627GEZZY	R	Zener Diode, 8.2V	AA
D601	VHD1SS133++-1Y	R	1SS133++	AA
D602	VHD1SS244//-1Y	R	1SS244	AB
D603	RH-EX0667GEZZY	R	Zener Diode, 27V	AA
D604	VHD1SS133++-1Y	R	1SS133++	AA
D606	RH-DX0131CEZZY	R	DX0131CE	AC
D607	RH-DX0045GEZZY	R	DX0045GE	AA
D608	RH-DX0468CEZZ	R	DX0468CE	AE
D651	RH-EX0627GEZZY	R	Zener Diode, 8.2V	AA
D652	RH-EX0253TAZZY	R	Zener Diode, 3.3V	AC
D653	RH-DX0045GEZZY	R	DX0045GE	AA
D701	RH-DX0476CEZZ	R	DX0476CE	AG
D705	VHD1SS82///1AY	R	1SS82	AC
D706	VHD1SS82///1AY	R	1SS82	AC
D707	VHD1SS82///1AY	R	1SS82	AC
D751	RH-DX0229CEZZ	R	DX0229CE	AF
D752	RH-DX0131CEZZY	R	DX0131CE	AC
D754	RH-EX0616GEZZY	R	Zener Diode, 5.6V	AA
D755	RH-EX0603GEZZY	R	Zener Diode, 3.9V	AA
D801	VHD1SS133++-1Y	R	1SS133++	AA

Ref. No.	Part No.	★	Description	Code
D802	RH-DX0045GEZZY	R	DX0045GE	AA
D803	RH-DX0045GEZZY	R	DX0045GE	AA
D804	RH-DX0045GEZZY	R	DX0045GE	AA
D805	RH-DX0045GEZZY	R	DX0045GE	AA
D806	RH-DX0045GEZZY	R	DX0045GE	AA
D808	RH-EX0610GEZZY	R	Zener Diode, 4.7V	AA
D1001	RH-PX0013PEZZ	R	PhotoDiode	AC
D1003	VHD1SS133++-1Y	R	1SS133++	AA
D1004	VHD1SS133++-1Y	R	1SS133++	AA
D1007	RH-EX0263TAZZY	R	Zener Diode	AC
D1012	RH-EX0611GEZZY	R	Zener Diode, 5.1V	AA
D1018	RH-EX0263TAZZY	R	Zener Diode, 8.3V	AC
D1019	RH-EX0263TAZZY	R	Zener Diode, 8.3V	AC
D1024	VHD1SS133++-1Y	R	1SS133++	AA
VA701	RH-VX0073CEZZ	R	Varistor	AD
			PACKAGED CIRCUITS	
PR702	RMPTP0028CEZZ	R	Packaged Circuit	AG
X1001	RCRSB0300CEZZ	R	Crystal	AF
			COILS	
L202	VP-DF270K0000Y	R	Peaking, 27µH	AB
L203	VP-DF270K0000Y	R	Peaking, 27µH	AB
L204	VP-XF1R2K0000Y	R	Peaking, 1.2µH	AB
L251	VP-XF100K0000Y	R	Peaking, 10µH	AB
L252	VP-XF6R8K0000Y	R	Peaking, 6.8µH	AB
⚠ L701	RCiLF0086PEN1	R	Coil (14D1-SF/14D1-GF/14D2-SF/14D2-GF)	AF
⚠ L701	RCiLF0096PEZZ	R	Coil (14D1-SA/14D1-GA/14D2-SA/14D2-GA)	AF
L751	RCiLP0225CEZZ	R	Coil	AF
L802	VP-DF100K0000Y	R	Peaking, 10µH	AB
L803	VP-DF100K0000Y	R	Peaking, 10µH	AB
L1030	VP-DF100K0000Y	R	Peaking, 10µH	AB
L1050	VP-DF100K0000Y	R	Peaking, 10µH	AB
L1051	VP-DF100K0000Y	R	Peaking, 10µH	AB
			FILTERS	
CF251	RFiLC0318CEZZ	R	Filter	AG
CF252	RFiLC0465CEZZ	R	Filter	AD
SF201	RFiLCA016WJZZ	R	Filter	AH
			TRANSFORMERS	
⚠ T601	RTRNZ0144PEZZ	R	Transformer	AE
⚠ T602	RTRNFA060WJZZ	R	H-Volt Transformer	AV
⚠ T701	RTRNWA110WJZZ	R	Transformer	AH
			CAPACITORS	
C201	VCEA0A1CW476M+R		47 16V Electrolytic	AB
C202	VCEA0A1AW337M+R		330 10V Electrolytic	AC
C203	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA
C204	VCEA0A0JW477M+	R	470 6.3V Electrolytic	AC
C205	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA
C206	VCEA0A1HW106M+R		10 50V Electrolytic	AB
C207	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA
C208	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA
C209	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA
C210	VCKYCY1HF103ZY	R	0.01 50V Ceramic	AA
C231	VCKYCY1HF223ZY	R	0.022 50V Ceramic	AB
C232	VCKYCY1HB821KY	R	820p 50V Ceramic	AA
C233	VCKYCY1HB472KY	R	4700p 50V Ceramic	AA
C234	VCKYCY1EF104ZY	R	0.1 25V Ceramic	AA
C251	VCKYCY1HF223ZY	R	0.022 50V Ceramic	AB
C252	VCEA0A1CW107M+R		100 16V Electrolytic	AC
C301	VCEA0A1CW477M+R		470 16V Electrolytic	AC
C304	VCEA0A1CW106M+R		10 16V Electrolytic	AB
C306	VCEA0A1CW106M+R		10 16V Electrolytic	AB
C310	VCEA0A1HW105M+R		1 50V Electrolytic	AB
C311	VCEA0A1HW105M+R		1 50V Electrolytic	AB
C312	VCEA0A1HW224M+R		0.22 50V Electrolytic	AB
C316	VCEA0A1CW107M+R		100 16V Electrolytic	AC
C331	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA

Ref. No.	Part No.	★	Description	Code
C332	VCQYTA1HM103J+	R	0.01 50V Mylar	AB
C333	VCEA0A1CW108M	R	1000 16V Electrolytic	AD
C352	VCEA0A1HW105M+R		1 50V Electrolytic	AB
C354	VCEA0A1HW105M+R		1 50V Electrolytic	AB
C356	VCKYCY1HB472KY	R	4700p 50V Ceramic	AA
C359	VCEA0A1CW106M+R		10 16V Electrolytic	AB
C360	VCE9GA1HW225M+R		2.2 50V Electrolytic	AB
C409	VCKYCY1CF474ZY	R	0.47 16V Ceramic	AB
C410	VCKYCY1CF474ZY	R	0.47 16V Ceramic	AB
C411	VCKYCY1HB102KY	R	1000p 50V Ceramic	AA
C412	VCEA0A1CW477M+R		470 16V Electrolytic	AC
C501	VCKYPA1HB102K+	R	1000p 50V Ceramic	AA
C504	VCKYCY1HB103KY	R	0.01 50V Ceramic	AA
C505	VCEA0A1HW107M+R		100 50V Electrolytic	AB
C507	VCKYCY1HB103KY	R	0.01 50V Ceramic	AA
C508	VCFYSA1JB224J+	R	0.22 63V Mylar	AD
C509	VCEA0A1CW477M+R		470 16V Electrolytic	AC
C510	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
C514	VCFYSA1JB563J+	R	0.056 63V Mylar	AD
C529	VCKYCY1CB823KY	R	0.082 16V Ceramic	AH
C531	VCKYCY1HB102KY	R	1000p 50V Ceramic	AA
C532	VCKYCY1HB102KY	R	1000p 50V Ceramic	AA
C533	VCQYTA1HM104J+	R	0.1 50V Mylar	AB
C601	VCQYTA1HM563J+	R	0.056 50V Mylar	AB
C602	VCEA0A1HW475M+R		4.7 50V Electrolytic	AB
C603	VCEA0A1HW105M+R		1 50V Electrolytic	AB
C604	VCEA0A2EW106M	R	10 250V Electrolytic	AD
C605	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
C606	VCFPFA2EB334J	R	0.33 250V MetalIzed Polypro Film	AD
C607	VCFPVC3ZA532H	R	5300p 1800V MetalIzed Polypro Film	AD
C608	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
C610	VCEA0A1CW108M	R	1000 16V Electrolytic	AD
C611	VCEA0A1EW476M+R		47 25V Electrolytic	AB
C612	VCEA0A1CW477M+R		470 16V Electrolytic	AC
C620	VCKYPA2HB102K+	R	1000p 500V Ceramic	AA
C640	VCFYSB2EB823J	R	0.082 250V M.Polyester Film	AD
C651	VCQYTA1HM222J+	R	2200p 50V Mylar	AA
C652	VCQYTA1HM472J+	R	4700p 50V Mylar	AB
C653	VCEA0A1HW105M+R		1 50V Electrolytic	AB
C654	VCKYCY1HF223ZY	R	0.022 50V Ceramic	AB
C655	VCEA0A1HW106M+R		10 50V Electrolytic	AB
C656	VCEA0A1HW224M+R		0.22 50V Electrolytic	AB
C657	VCKYCY1EF104ZY	R	0.1 25V Ceramic	AA
C658	VCKYCY1EF104ZY	R	0.1 25V Ceramic	AA
⚠ C701	RC-FZ031SCEZZ	R	0.1 275V	AD
C702	RC-KZ0029CEZZ+	R	0.01 250V Ceramic	AC
C703	RC-KZ0029CEZZ+	R	0.01 250V Ceramic	AC
C704	RC-KZ0029CEZZ+	R	0.01 250V Ceramic	AC
C705	RC-EZA071WJZZ	R	150 400V Electrolytic (14D2-SA/14D2-SF/14D2-GA/14D2-GF)	AL
C705	RC-EZA096WJZZ	R	220 400V Electrolytic (14D1-SA/14D1-SF/14D1-GA/14D1-GF)	AL
C709	RC-KZ0039CEZZ	R	680p 2kV Ceramic	AB
C710	VCEA0A1HW476M+R		47 50V Electrolytic	AB
C711	VCKYPA1HB102K+	R	1000p 50V Ceramic	AA
C712	VCKYPA1HB471K+	R	470p 50V Ceramic	AA
⚠ C751	RC-KZ0102GEZZ	R	680p AC250V Ceramic (14D1-SA/14D1-GA/14D2-SA/14D2-GA)	AE
⚠ C751	RC-KZ0106GEZZ	R	3300p AC250V Ceramic (14D1-SF/14D1-GF/14D2-SF/14D2-GF)	AG
C752	VCKYPH3DB561K	R	560p 2000V Ceramic	AC
C753	RC-EZ0776CEZZ	R	100 160V Electrolytic	AF
C754	RC-EZA069WJZZ	R	33 160V Electrolytic	AE
C755	VCEA0A1CW108M	R	1000 16V Electrolytic	AD
C756	VCQYTA1HM103J+	R	0.01 50V Mylar	AB
C759	VCEA0A0JW477M+	R	470 6.3V Electrolytic	AC
C760	VCEA0A0JW228M	R	2200 6.3V Electrolytic	AD
C801	VCEA0A1HW105M+R		1 50V Electrolytic	AB
C803	VCEA0A1CW107M+R		100 16V Electrolytic	AC

Ref. No.	Part No.	★	Description	Code
C804	VCKYCY1HB222KY	R	2200p 50V Ceramic	AA
C805	VCKYD41HB102KY	R	1000p 50V Ceramic	AA
C806	VCKYD41HB102KY	R	1000p 50V Ceramic	AA
C807	VCKYD41HB102KY	R	1000p 50V Ceramic	AA
C808	VCEA0A1CW107M+	R	100 16V Electrolytic	AC
C809	VCKYCY1CF474ZY	R	0.47 16V Ceramic	AB
C810	VCKYCY1CF474ZY	R	0.47 16V Ceramic	AB
C811	VCEA0A1CW107M+	R	100 16V Electrolytic	AC
C812	VCFYFA1HA224J+	R	0.22 50V M.Polyester Film	AB
C813	VCFYFA1HA224J+	R	0.22 50V M.Polyester Film	AB
C814	VCKYCY1HB471KY	R	470p 50V Ceramic	AA
C816	VCKYCY1HB471KY	R	470p 50V Ceramic	AA
C1001	VCEA0A0JW107M+	R	100 6.3V Electrolytic	AB
C1002	VCEA0A0JW107M+	R	100 6.3V Electrolytic	AB
C1003	VCEA0A1CW106M+	R	10 16V Electrolytic	AB
C1004	VCKYCY1CF474ZY	R	0.47 16V Ceramic	AB
C1005	VCKYCY1CF474ZY	R	0.47 16V Ceramic	AB
C1006	VCEA0A1CW106M+	R	10 16V Electrolytic	AB
C1008	VCCCCY1HH330JY	R	33p 50V Ceramic	AA
C1009	VCCCCY1HH330JY	R	33p 50V Ceramic	AA
C1010	VCEA0A0JW107M+	R	100 6.3V Electrolytic	AB
C1011	VCKYCY1CF474ZY	R	0.47 16V Ceramic	AB
C1012	VCKYCY1CF474ZY	R	0.47 16V Ceramic	AB
C1013	VCEA0A0JW107M+	R	100 6.3V Electrolytic	AB
C1014	VCEA0A1CW106M+	R	10 16V Electrolytic	AB
C1016	VCQYTA1HM104J+	R	0.1 50V Mylar	AB
C1018	VCKYCY1HB221KY	R	220p 50V Ceramic	AA
C1019	VCEA0A1HW225M+	R	2.2 50V Electrolytic	AB
C1024	VCQYTA1HM104J+	R	0.1 50V Mylar	AB

RESISTORS

RJ2	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ4	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ9	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ10	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ13	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ14	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ15	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ16	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ17	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ19	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ21	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ24	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide (14D2-SA/14D2-SF/14D2-GA/14D2-GF)	AA
RJ26	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ28	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ32	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ33	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide (14D2-SA/14D2-SF/14D2-GA/14D2-GF)	AA
RJ35	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ37	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ41	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ42	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ43	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ44	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ45	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ48	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ49	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ51	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ52	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ53	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ56	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ71	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ73	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ75	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ76	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ77	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ78	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ83	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ88	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
R201	VRS-CY1JF101JY	R	100	1/16W	Metal Oxide	AA
R202	VRS-CY1JF101JY	R	100	1/16W	Metal Oxide	AA
R205	VRS-CY1JF680JY	R	68	1/16W	Metal Oxide	AA
R206	VRS-CY1JF122JY	R	1.2k	1/16W	Metal Oxide	AA
R207	VRS-CY1JF221JY	R	220	1/16W	Metal Oxide	AA
R208	VRS-CY1JF122JY	R	1.2k	1/16W	Metal Oxide	AA
R209	VRS-CY1JF392JY	R	3.9k	1/16W	Metal Oxide	AA
R216	VRS-VU3LE223J	R	22k	3W	Metal Oxide	AC
R219	VRD-RA2BE392JY	R	3.9k	1/8W	Carbon	AA
R220	VRS-CY1JF221JY	R	220	1/16W	Metal Oxide	AA
R230	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
R231	VRD-RA2BE681JY	R	680	1/8W	Carbon	AA
R232	VRS-CY1JF272JY	R	2.7k	1/16W	Metal Oxide	AA
R233	VRS-CY1JF102JY	R	1k	1/16W	Metal Oxide	AA
R234	VRS-CY1JF391JY	R	390	1/16W	Metal Oxide	AA
R251	VRS-CY1JF181JY	R	180	1/16W	Metal Oxide	AA
R252	VRS-CY1JF181JY	R	180	1/16W	Metal Oxide	AA
R253	VRD-RA2BE680JY	R	68	1/8W	Carbon	AA
R254	VRS-CY1JF560JY	R	56	1/16W	Metal Oxide	AA
R255	VRS-CY1JF223JY	R	22k	1/16W	Metal Oxide	AA
R256	VRS-CY1JF223JY	R	22k	1/16W	Metal Oxide	AA
R262	VRS-CY1JF560JY	R	56	1/16W	Metal Oxide	AA
R263	VRS-CY1JF560JY	R	56	1/16W	Metal Oxide	AA
R301	VRS-CY1JF101JY	R	100	1/16W	Metal Oxide	AA
R302	VRS-CY1JF101JY	R	100	1/16W	Metal Oxide	AA
R303	VRS-CY1JF561JY	R	560	1/16W	Metal Oxide	AA
R304	VRS-CY1JF100JY	R	10	1/16W	Metal Oxide	AA
R305	VRS-CY1JF274JY	R	270k	1/16W	Metal Oxide	AA
R310	VRS-CY1JF473JY	R	47k	1/16W	Metal Oxide	AA
R311	VRS-CY1JF473JY	R	47k	1/16W	Metal Oxide	AA
R313	VRS-CY1JF102JY	R	1k	1/16W	Metal Oxide	AA
R314	VRS-CY1JF472JY	R	4.7k	1/16W	Metal Oxide	AA
R315	VRS-CY1JF272JY	R	2.7k	1/16W	Metal Oxide	AA
R316	VRS-CY1JF272JY	R	2.7k	1/16W	Metal Oxide	AA
R318	VRD-RA2BE680JY	R	68	1/8W	Carbon	AA
R334	VRS-CY1JF332JY	R	3.3k	1/16W	Metal Oxide	AA
R335	VRS-CY1JF564JY	R	560k	1/16W	Metal Oxide	AA
R352	VRS-CY1JF681JY	R	680	1/16W	Metal Oxide	AA
R359	VRS-CY1JF102JY	R	1k	1/16W	Metal Oxide	AA
R360	VRS-CY1JF103JY	R	10k	1/16W	Metal Oxide	AA
R361	VRS-CY1JF104JY	R	100k	1/16W	Metal Oxide	AA
R364	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
R366	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
R431	VRS-CY1JF101JY	R	100	1/16W	Metal Oxide	AA
R432	VRS-CY1JF820JY	R	82	1/16W	Metal Oxide	AA
R458	VRS-CY1JF103JY	R	10k	1/16W	Metal Oxide	AA
R459	VRD-RA2BE680JY	R	68	1/8W	Carbon	AA
R501	VRD-RA2BE272JY	R	2.7k	1/8W	Carbon	AA
R502	VRD-RM2HD102JY	R	1k	1/2W	Carbon	AA
R503	VRS-VU3AE2R7J	R	2.7	1W	Metal Oxide	AB
R504	VRS-CY1JF181JY	R	180	1/16W	Metal Oxide	AA
R505	VRS-CY1JF102JY	R	1k	1/16W	Metal Oxide	AA
R506	VRS-VU3AE331J	R	330	1W	Metal Oxide	AB
R507	VRS-VU3AE1R0J	R	1	1W	Metal Oxide	AB
R511	VRS-CY1JF181JY	R	180	1/16W	Metal Oxide	AA
R512	VRD-RM2HD5R6JY	R	5.6	1/2W	Carbon	AA
R521	VRD-RA2BE333JY	R	33k	1/8W	Carbon	AA
R529	VRD-RA2BE223JY	R	22k	1/8W	Carbon	AA
R530	VRS-CY1JF334JY	R	330k	1/16W	Metal Oxide	AA
R531	VRS-CY1JF101JY	R	100	1/16W	Metal Oxide	AA
R532	VRS-CY1JF101JY	R	100	1/16W	Metal Oxide	AA
R533	VRD-RA2BE393JY	R	39k	1/8W	Carbon	AA
R601	VRS-SV2HC102J	R	1k	1/2W	Metal Oxide	AA
R602	VRD-RA2BE393JY	R	39k	1/8W	Carbon	AA
R603	VRD-RA2BE273JY	R	27k	1/8W	Carbon	AA
R604	VRD-RA2BE563JY	R	56k	1/8W	Carbon	AA
R605	VRD-RM2HD124JY	R	120k	1/2W	Carbon	AA
R606	VRS-VU3AE1R5J	R	1.5	1W	Metal Oxide	AB
R607	VRD-RM2HD270JY	R	27	1/2W	Carbon	AA
R609	VRD-RA2BE154JY	R	150k	1/8W	Carbon	AA
R610	VRD-RA2BE102GY	R	1k	1/8W	Carbon	AB
R611	VRS-CY1JF102JY	R	1k	1/16W	Metal Oxide	AA
R612	VRS-CY1JF123JY	R	12k	1/16W	Metal Oxide	AA
R613	VRS-CY1JF103JY	R	10k	1/16W	Metal Oxide	AA
R614	VRS-SV2HC150J	R	15	1/2W	Metal Oxide	AA
R615	VRS-VU3DE682J	R	6.8k	2W	Metal Oxide	AB
R616	VRS-VU3AER47J	R	0.47	1W	Metal Oxide	AB
R618	VRS-VU3DE391J	R	390	2W	Metal Oxide	AB

Ref. No.	Part No.	★	Description	Code
R619	VRS-VU3LE103J	R	10k 3W Metal Oxide	AB
R620	VRS-VU3AE472J	R	4.7k 1W Metal Oxide	AB
R622	VRD-RA2BE102JY	R	1k 1/8W Carbon	AA
R623	VRD-RM2HD184JY	R	180k 1/2W Carbon	AA
R624	VRS-CY1JF472JY	R	4.7k 1/16W Metal Oxide	AA
R625	VRS-VU3DE8R2J	R	8.2 2W Metal Oxide	AB
R626	VRD-RM2HD470JY	R	47 1/2W Carbon	AA
R633	VRD-RA2BE333JY	R	33k 1/8W Carbon	AA
R634	VRD-RA2BE103JY	R	10k 1/8W Carbon	AA
R641	VRN-SV2HCR47J	R	0.47 1/2W Metal Film	AA
R651	VRS-CY1JF223JY	R	22k 1/16W Metal Oxide	AA
R652	VRS-CY1JF102JY	R	1k 1/16W Metal Oxide	AA
R653	VRS-CY1JF822JY	R	8.2k 1/16W Metal Oxide	AA
R654	VRS-CY1JF273JY	R	27k 1/16W Metal Oxide	AA
R655	VRS-CY1JF391JY	R	390 1/16W Metal Oxide	AA
R656	VRS-CY1JF100JY	R	10 1/16W Metal Oxide	AA
R658	VRD-RA2BE101JY	R	100 1/8W Carbon	AA
R663	VRD-RA2BE101JY	R	100 1/8W Carbon	AA
R701	VRW-KQ3NC3R9K	R	3.9 7W Cement	AE
R707	VRS-VU3DE104J	R	100k 2W Metal Oxide	AB
R708	VRD-RA2BE681JY	R	680 1/8W Carbon	AA
R709	VRS-VU3DER47J	R	0.47 2W Metal Oxide	AB
R710	VRS-VU3DER47J	R	0.47 2W Metal Oxide (14D2-SA/14D2-SF/14D2-GA/14D2-GF)	AB
R710	VRS-VU3DER56J	R	0.56 2W Metal Oxide (14D1-SA/14D1-SF/14D1-GA/14D1-GF)	AB
R711	VRD-RA2BE682JY	R	6.8k 1/8W Carbon	AA
R712	VRD-RA2BE152JY	R	1.5k 1/8W Carbon	AA
R716	VRD-RA2BE562JY	R	5.6k 1/8W Carbon	AA
⚠ R751	VRC-UA2HG825KY	R	8.2M 1/2W Solid	AA
⚠ R752	VRC-UA2HG825KY	R	8.2M 1/2W Solid	AA
R753	VRD-RM2HD124JY	R	120k 1/2W Carbon	AA
R754	VRD-RM2HD150JY	R	15 1/2W Carbon	AA
R755	VRD-RA2BE221JY	R	220 1/8W Carbon	AA
R756	VRD-RM2HD270JY	R	27 1/2W Carbon	AA
R757	VRS-CY1JF151JY	R	150 1/16W Metal Oxide	AA
R801	VRS-CY1JF221JY	R	220 1/16W Metal Oxide	AA
R802	VRS-CY1JF221JY	R	220 1/16W Metal Oxide	AA
R803	VRS-CY1JF221JY	R	220 1/16W Metal Oxide	AA
R804	VRS-CY1JF221JY	R	220 1/16W Metal Oxide	AA
R805	VRS-CY1JF822JY	R	8.2k 1/16W Metal Oxide	AA
R806	VRS-CY1JF123JY	R	12k 1/16W Metal Oxide	AA
R807	VRS-CY1JF103JY	R	10k 1/16W Metal Oxide	AA
R808	VRS-CY1JF221JY	R	220 1/16W Metal Oxide	AA
R809	VRD-RA2BE224JY	R	220k 1/8W Carbon	AA
R812	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R813	VRS-CY1JF221JY	R	220 1/16W Metal Oxide	AA
R1001	VRS-CY1JF221JY	R	220 1/16W Metal Oxide	AA
R1002	VRS-CY1JF331JY	R	330 1/16W Metal Oxide	AA
R1003	VRS-CY1JF471JY	R	470 1/16W Metal Oxide	AA
R1004	VRS-CY1JF821JY	R	820 1/16W Metal Oxide	AA
R1005	VRS-CY1JF181JY	R	180 1/16W Metal Oxide	AA
R1011	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1012	VRD-RA2BE271JY	R	270 1/8W Carbon	AA
R1013	VRD-RA2BE101JY	R	100 1/8W Carbon	AA
R1014	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1015	VRS-CY1JF332JY	R	3.3k 1/16W Metal Oxide	AA
R1016	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1017	VRS-CY1JF332JY	R	3.3k 1/16W Metal Oxide	AA
R1019	VRS-CY1JF392JY	R	3.9k 1/16W Metal Oxide	AA
R1020	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1021	VRS-CY1JF153JY	R	15k 1/16W Metal Oxide	AA
R1022	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1023	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1024	VRS-CY1JF122JY	R	1.2k 1/16W Metal Oxide	AA
R1025	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1026	VRS-CY1JF224JY	R	220k 1/16W Metal Oxide	AA
R1028	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1030	VRS-CY1JF102JY	R	1k 1/16W Metal Oxide	AA
R1031	VRD-RA2BE562JY	R	5.6k 1/8W Carbon	AA
R1032	VRS-CY1JF332JY	R	3.3k 1/16W Metal Oxide	AA
R1034	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1035	VRS-CY1JF332JY	R	3.3k 1/16W Metal Oxide	AA
R1036	VRS-CY1JF332JY	R	3.3k 1/16W Metal Oxide	AA
R1037	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1038	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1039	VRS-CY1JF223JY	R	22k 1/16W Metal Oxide	AA
R1040	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1041	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1042	VRD-RA2BE101JY	R	100 1/8W Carbon	AA
R1046	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1048	VRS-CY1JF102JY	R	1k 1/16W Metal Oxide	AA
R1050	VRS-CY1JF392JY	R	3.9k 1/16W Metal Oxide	AA
R1051	VRS-CY1JF683JY	R	68k 1/16W Metal Oxide	AA
R1072	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA
R1073	VRS-CY1JF101JY	R	100 1/16W Metal Oxide	AA

BALUNE

FB601	RBLN-0091GEZZY	R	Balun	AB

SWITCHES

⚠ S702	QSW-PA006WJZZ	R	Switch	AG
S1001	QSW-K0003AJZZ+	R	Switch, CH UP	AB
S1002	QSW-K0003AJZZ+	R	Switch, CH DOWN	AB
S1003	QSW-K0003AJZZ+	R	Switch, VOL. UP	AB
S1004	QSW-K0003AJZZ+	R	Switch, VOL. DOWN	AB
S1005	QSW-K0003AJZZ+	R	Switch, PICTUER/PRESET	AB

MISCELLANEOUS PARTS

⚠ ACC701	QACCZA019WJPZ	R	AC Cord (14D1-SA/14D1-GA/14D2-SA/14D2-GA)	AH
⚠ ACC701	QACCZA020WJPZ	R	AC Cord	AH
⚠ F701	QFS-C3229CEZZ	R	Fuse, T3.15A/250V	AD
⚠ FH701	QFSHD1013CEZZ+	R	Fuse Holder	AC
⚠ FH702	QFSHD1014CEZZ+	R	Fuse Holder	AC
J402	QJAKE0210CE04	R	Jack, Video	AC
J403	QJAKE0210CE09	R	Jack, Audio	AC
J409	QJAKHA004WJZZ	R	Jack, AV-1 IN	AE
P301	QPLGNA107WJZZ	R	Plug, 2Pin(S) (14D1-SA/14D1-SF/14D1-GA/14D1-GF)	AA
P302	QPLGNA109WJZZ	R	Plug, 4Pin(S) (14D2-SA/14D2-SF/14D2-GA/14D2-GF)	AB
P303	QPLGNA109WJZZ	R	Plug, 4Pin(HP) (14D1-SA/14D1-SF/14D1-GA/14D1-GF)	AB
P303	QPLGNA110WJZZ	R	Plug, 5Pin(HP) (14D2-SA/14D2-SF/14D2-GA/14D2-GF)	AB
P601	QPLGN0660CEZZ	R	Plug,6Pin(F)	AC
P602	LHLDW1104PEZZ	R	Holder, 4Pin(H)	AB
P603	QPLGNA108WJZZ	R	Plug, 3Pin(TP651-3)	AB
P701	QPLGN0260CEZZ	R	Plug,2Pin(M)	AC
P702	QPLGA0201PEZZ	R	Plug,2Pin	AB
P1001	LHLDW1105PEZZ	R	Holder, 5Pin(K)	AB
P1002	QPLGNA110WJZZ	R	Plug, 5Pin(BC)	AB
RDA302	PRDAR0340PEFW	R	Heat Sink for IC302 (14D2-SA/14D2-SF/14D2-GA/14D2-GF)	AE
RDA302	PRDAR0341PEFW	R	Heat Sink for IC302 (14D1-SA/14D1-SF/14D1-GA/14D1-GF)	AD
RDA501	PRDAR0118GJFW	R	Heat Sink for IC501	AD
RDA701	PRDARA028WJFW	R	Heat Sink for IC701	AE
RMC1001	RRMCUA009WJZZ	R	Remote Receiver	AF
	LHLDP1066PE00	R	Holder	AC
TP201	QLUGP0102PEZZ	R	Lug	AA

Ref. No.	Part No.	★	Description	Code

DUNTKB509WED3 (14D1-SA/14D1-GA)
DUNTKB509WED4 (14D1-SF/14D1-GF)
DUNTKB509WED1 (14D2-SA/14D2-GA)
DUNTKB509WED2 (14D2-SF/14D2-GF)
PWB-B CRT UNIT

TRANSISTORS

Q870	RH-TX0110BMZZ+	R	TX0110BM	AC
Q871	RH-TX0110BMZZ+	R	TX0110BM	AC
Q872	RH-TX0110BMZZ+	R	TX0110BM	AC
Q883	RH-TX0124BMZZ+	R	TX0124BM	AC
Q885	RH-TX0124BMZZ+	R	TX0124BM	AC
Q887	RH-TX0124BMZZ+	R	TX0124BM	AC

DIODES

D881	VHD1SS244//-1Y	R	1SS244	AB
D882	VHD1SS244//-1Y	R	1SS244	AB
D883	VHD1SS244//-1Y	R	1SS244	AB
D884	VHD1SS133++-1Y	R	1SS133++	AA
D885	VHD1SS133++-1Y	R	1SS133++	AA
D886	VHD1SS82///1AY	R	1SS82	AC
D887	VHD1SS82///1AY	R	1SS82	AC
D888	VHD1SS82///1AY	R	1SS82	AC

CAPACITORS

C871	VCCCCY1HH471JY	R	470p	50V	Ceramic	AA
C872	VCCCCY1HH391JY	R	390p	50V	Ceramic	AB
C873	VCCCCY1HH471JY	R	470p	50V	Ceramic	AA
C875	VCKYPA2HB102K+	R	1000p	500V	Ceramic	AA
C876	RC-KZ0150CEZZ	R	1000p	3kV		AB
C878	VCEA0A2EW106M+	R	10	250V	Electrolytic	AD
C880	VCCCCY1HH471JY	R	470p	50V	Ceramic	AA
C881	VCKYPA1HB471K+	R	470p	50V	Ceramic	AA
C882	VCKYPA1HB471K+	R	470p	50V	Ceramic	AA
C886	VCKYPA2HB102K+	R	1000p	500V	Ceramic	AA

RESISTORS

R879	VRS-CY1JF471JY	R	470	1/16W	Metal Oxide	AA
R880	VRS-CY1JF471JY	R	470	1/16W	Metal Oxide	AA
R881	VRS-CY1JF471JY	R	470	1/16W	Metal Oxide	AA
R882	VRS-VU3DE153J	R	15k	2W	Metal Oxide	AB
R883	VRD-RM2HD272JY	R	2.7k	1/2W	Carbon	AA
R884	VRS-VU3DE153J	R	15k	2W	Metal Oxide	AB
R885	VRD-RM2HD272JY	R	2.7k	1/2W	Carbon	AA
R886	VRS-VU3DE153J	R	15k	2W	Metal Oxide	AB
R887	VRD-RM2HD272JY	R	2.7k	1/2W	Carbon	AA
R888	VRS-CY1JF471JY	R	470	1/16W	Metal Oxide	AA
R892	VRS-CY1JF102JY	R	1k	1/16W	Metal Oxide	AA
R893	VRS-CY1JF102JY	R	1k	1/16W	Metal Oxide	AA
R894	VRS-CY1JF102JY	R	1k	1/16W	Metal Oxide	AA
R898	VRS-CY1JF471JY	R	470	1/16W	Metal Oxide	AA
R899	VRS-CY1JF471JY	R	470	1/16W	Metal Oxide	AA

MISCELLANEOUS PARTS

SC881	QSOCV0017PEZZ	R	Socket, 9Pin	AF
P882	LHLDW1105PEZZ	R	Holder, 5Pin(K)	AB
P884	LHLDW1104PEZZ	R	Holder, 4Pin(H)	AB

DUNTKB510WEB4
PWB-C HEADPHONE UNIT

RESISTORS

RJ60	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ61	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
RJ62	VRS-CY1JF000JY	R	0	1/16W	Metal Oxide	AA
R370	VRS-CY1JF471JY	R	470	1/16W	Metal Oxide	AA
R371	VRS-CY1JF471JY	R	470	1/16W	Metal Oxide	AA

MISCELLANEOUS PARTS

J351	QJAKJ0101SEZZ	R	Jack	AE
P351	QPLGNA109WJZZ	R	Plug, 4Pin(HP)	AB

Ref. No.	Part No.	★	Description	Code

MISCELLANEOUS PARTS

SP301	VSP9050PB53WA	R	Speaker (R) (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AH
SP301	VSP9050PB53WA	R	Speaker (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AH
SP302	VSP9050PB53WA	R	Speaker (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AH
	QCNW-A291WJZZ	R	Connecting Cord (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AD
	QCNW-A292WJZZ	R	Connecting Cord (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AD
	QCNW-A293WJZZ	R	Connecting Cord (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AC
	QCNW-A343WJZZ	R	Connecting Cord (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AC
	QCNW-C007WJZZ	R	Connecting Cord (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AF
	QCNW-2206PEZZ	R	Connecting Cord (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AD
	QCNW-2379PEZZ	R	Connecting Cord (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AE
	QCNW-2452PEZZ	R	Connecting Cord (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AE
	QPLGA0017CEZZ	R	Plug (14D1-SF/14D1-GF/14D2-SF/ 14D2-GF)	AK
	QPLGJ0113CEZZ	R	Plug	AG

SUPPLIED ACCESSORIES

ACCESSORIES

	RRMCG1342PESA	R	I/R Control Unit	AU
	TiNS-B017WJZZ	R	Operation Manual (14D2-SA/14D2-SF/14D2-GA/ 14D2-GF)	AH
	TiNS-B069WJZZ	R	Operation Manual (14D1-SA/14D1-SF/14D1-GA/ 14D1-GF)	AH
	TMAPCA049WJZZ	R	Circuit Diagram (14D2-SA/14D2-GA)	AC
	TMAPCA050WJZZ	R	Circuit Diagram (14D1-SA/14D1-GA)	AC
	TMAPCA054WJZZ	R	Circuit Diagram (14D2-SF/14D2-GF)	AC
	TMAPCA057WJZZ	R	Circuit Diagram (14D1-SF/14D1-GF)	AC
	QANTRA002WJZZ	R	Rod Antenna	AL

PACKING PARTS
(NOT REPLACEMENT ITEM)

Part No.		Description	Code
SPAKCB094WJZZ	–	Packing Case(14D1-SA)	—
SPAKCB095WJZZ	–	Packing Case(14D1-GA)	—
SPAKCB096WJZZ	–	Packing Case(14D1-SF)	—
SPAKCB097WJZZ	–	Packing Case(14D1-GF)	—
SPAKCB020WJZZ	–	Packing Case(14D2-SA)	—
SPAKCB022WJZZ	–	Packing Case(14D2-GA)	—
SPAKCB021WJZZ	–	Packing Case(14D2-SF)	—
SPAKCB023WJZZ	–	Packing Case(14D2-GF)	—
SPAKXA138WJZZ	–	Packing Form (14D1-SA/14D1-SF/14D1-GA/14D1-GF)	—
SPAKXA163WJZZ	–	Buffer Material (14D2-SA/14D2-SF/14D2-GA/14D2-GF)	—
SSAKH0015PEZZ	–	Wrapping Bag (14D2-SA/14D2-SF/14D2-GA/14D2-GF)	—
SSAKH0009PEZZ	–	Wrapping Bag (14D1-SA/14D1-SF/14D1-GA/14D1-GF)	—
SPAKP0056PEZZ	–	Wrapping Sheet (14D1-SA/14D1-SF/14D1-GA/14D1-GF)	—

CABINET PARTS

14D1-SA

Ref. No.	Part No.	★	Description	Code
1	CCABAA484WEV0	R	Front Cabinet Ass'y	BD
1-1	*Not Available*	–	Front Cabinet	—
1-2	HBDGB0018PESB	R	SHARP Badge	AD
1-3	JBTN-A067WJSA	R	Control Button	AG
1-4	GCOVAA193WJSA	R	R/C LED Cover	AD
1-5	JBTN-A175WJSA	R	Power Button	AD
1-6	MSPRC0005PEFW	R	Power Button Spring	AB
2	CCABBA087WEV1	R	Rear Cabinet Ass'y	AV
2-1	*Not Available*	–	Rear Cabinet	—

14D1-GA

Ref. No.	Part No.	★	Description	Code
1	CCABAA485WEV0	R	Front Cabinet Ass'y	BC
1-1	*Not Available*	–	Front Cabinet	—
1-2	HBDGB0018PESB	R	SHARP Badge	AD
1-3	JBTN-A067WJSA	R	Control Button	AG
1-4	GCOVAA193WJSA	R	R/C LED Cover	AD
1-5	JBTN-A175WJSB	R	Power Button	AD
1-6	MSPRC0005PEFW	R	Power Button Spring	AB
2	CCABBA087WEV1	R	Rear Cabinet Ass'y	AV
2-1	*Not Available*	–	Rear Cabinet	—

14D1-SF

Ref. No.	Part No.	★	Description	Code
1	CCABAA486WEV0	R	Front Cabinet Ass'y	BD
1-1	*Not Available*	–	Front Cabinet	—
1-2	HBDGB0018PESB	R	SHARP Badge	AD
1-3	JBTN-A067WJSA	R	Control Button	AG
1-4	GCOVAA193WJSA	R	R/C LED Cover	AD
1-5	JBTN-A175WJSA	R	Power Button	AD
1-6	MSPRC0005PEFW	R	Power Button Spring	AB
2	CCABBA087WEV1	R	Rear Cabinet Ass'y	AV
2-1	*Not Available*	–	Rear Cabinet	—

14D1-GF

Ref. No.	Part No.	★	Description	Code
1	CCABAA487WEV0	R	Front Cabinet Ass'y	BC
1-1	*Not Available*	–	Front Cabinet	—
1-2	HBDGB0018PESB	R	SHARP Badge	AD
1-3	JBTN-A067WJSA	R	Control Button	AG
1-4	GCOVAA193WJSA	R	R/C LED Cover	AD
1-5	JBTN-A175WJSB	R	Power Button	AD
1-6	MSPRC0005PEFW	R	Power Button Spring	AB
2	CCABBA087WEV1	R	Rear Cabinet Ass'y	AV
2-1	*Not Available*	–	Rear Cabinet	—

14D2-SA

Ref. No.	Part No.	★	Description	Code
1	CCABAA458WEV0	R	Front Cabinet Ass'y	BC
1-1	*Not Available*	–	Front Cabinet	—
1-2	HBDGB0019PESB	R	SHARP Badge	AD
1-3	JBTN-A028WJSA	R	Control Button	AF
1-4	GCOVAA106WJSA	R	R/C LED Cover	AC
1-5	JBTN-A206WJSA	R	Power Button	AD
1-6	MSPRC0068CEFW	R	Power Button Spring	AA
2	CCABBA096WEV0	R	Rear Cabinet Ass'y	AX
2-1	*Not Available*	–	Rear Cabinet	—

14D2-GA

Ref. No.	Part No.	★	Description	Code
1	CCABAA460WEV0	R	Front Cabinet Ass'y	BC
1-1	*Not Available*	–	Front Cabinet	—
1-2	HBDGB0019PESB	R	SHARP Badge	AD
1-3	JBTN-A028WJSB	R	Control Button	AF
1-4	GCOVAA106WJSA	R	R/C LED Cover	AC
1-5	JBTN-A206WJSB	R	Power Button	AD
1-6	MSPRC0068CEFW	R	Power Button Spring	AA
2	CCABBA096WEV0	R	Rear Cabinet Ass'y	AX
2-1	*Not Available*	–	Rear Cabinet	—

14D2-SF

Ref. No.	Part No.	★	Description	Code
1	CCABAA459WEV0	R	Front Cabinet Ass'y	BC
1-1	*Not Available*	–	Front Cabinet	—
1-2	HBDGB0019PESB	R	SHARP Badge	AD
1-3	JBTN-A028WJSA	R	Control Button	AF
1-4	GCOVAA106WJSA	R	R/C LED Cover	AC
1-5	JBTN-A206WJSA	R	Power Button	AD
1-6	MSPRC0068CEFW	R	Power Button Spring	AA
2	CCABBA096WEV0	R	Rear Cabinet Ass'y	AX
2-1	*Not Available*	–	Rear Cabinet	—

14D2-GF

Ref. No.	Part No.	★	Description	Code
1	CCABAA461WEV0	R	Front Cabinet Ass'y	BC
1-1	*Not Available*	–	Front Cabinet	—
1-2	HBDGB0019PESB	R	SHARP Badge	AD
1-3	JBTN-A028WJSB	R	Control Button	AF
1-4	GCOVAA106WJSA	R	R/C LED Cover	AC
1-5	JBTN-A206WJSB	R	Power Button	AD
1-6	MSPRC0068CEFW	R	Power Button Spring	AA
2	CCABBA096WEV0	R	Rear Cabinet Ass'y	AX
2-1	*Not Available*	–	Rear Cabinet	—

Ref. No.	Part No.	★	Description	Code

Ref. No.	Part No.	★	Description	Code

CABINET PARTS LOCATION

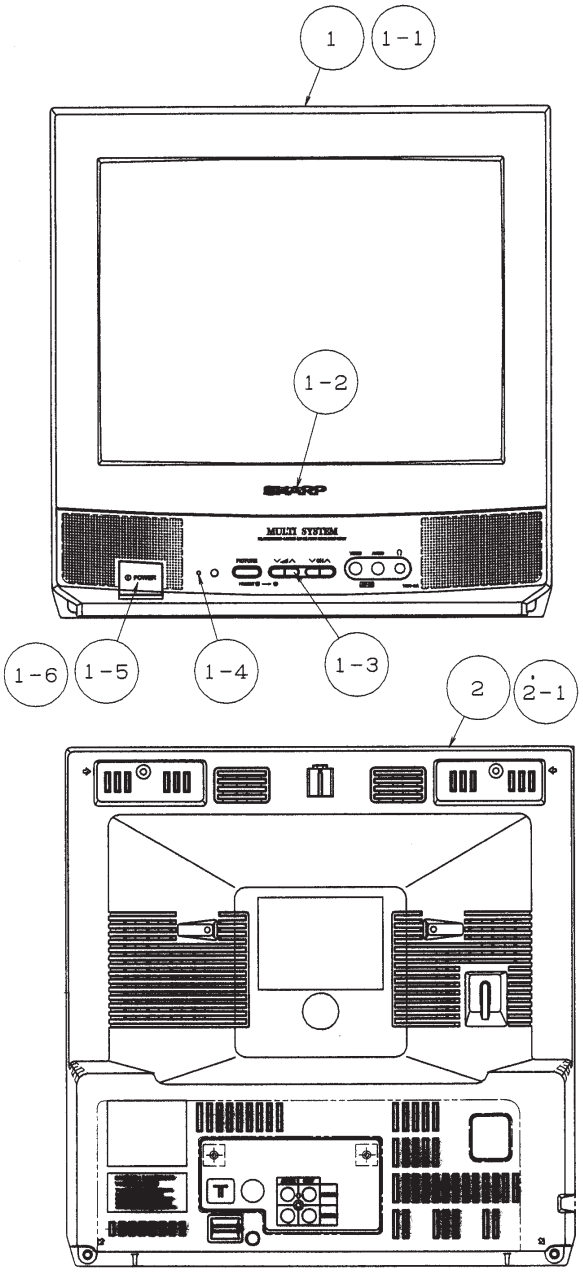

14D1-SA/SF/GA/GF

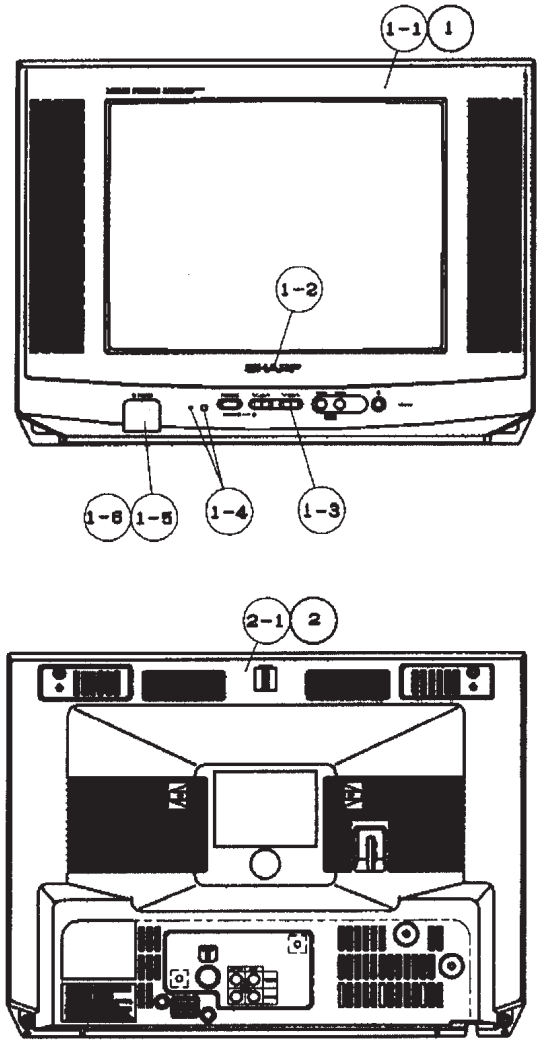

14D2-SA/SF/GA/GF

PACKING OF THE SET
(14D1-SA/GA)

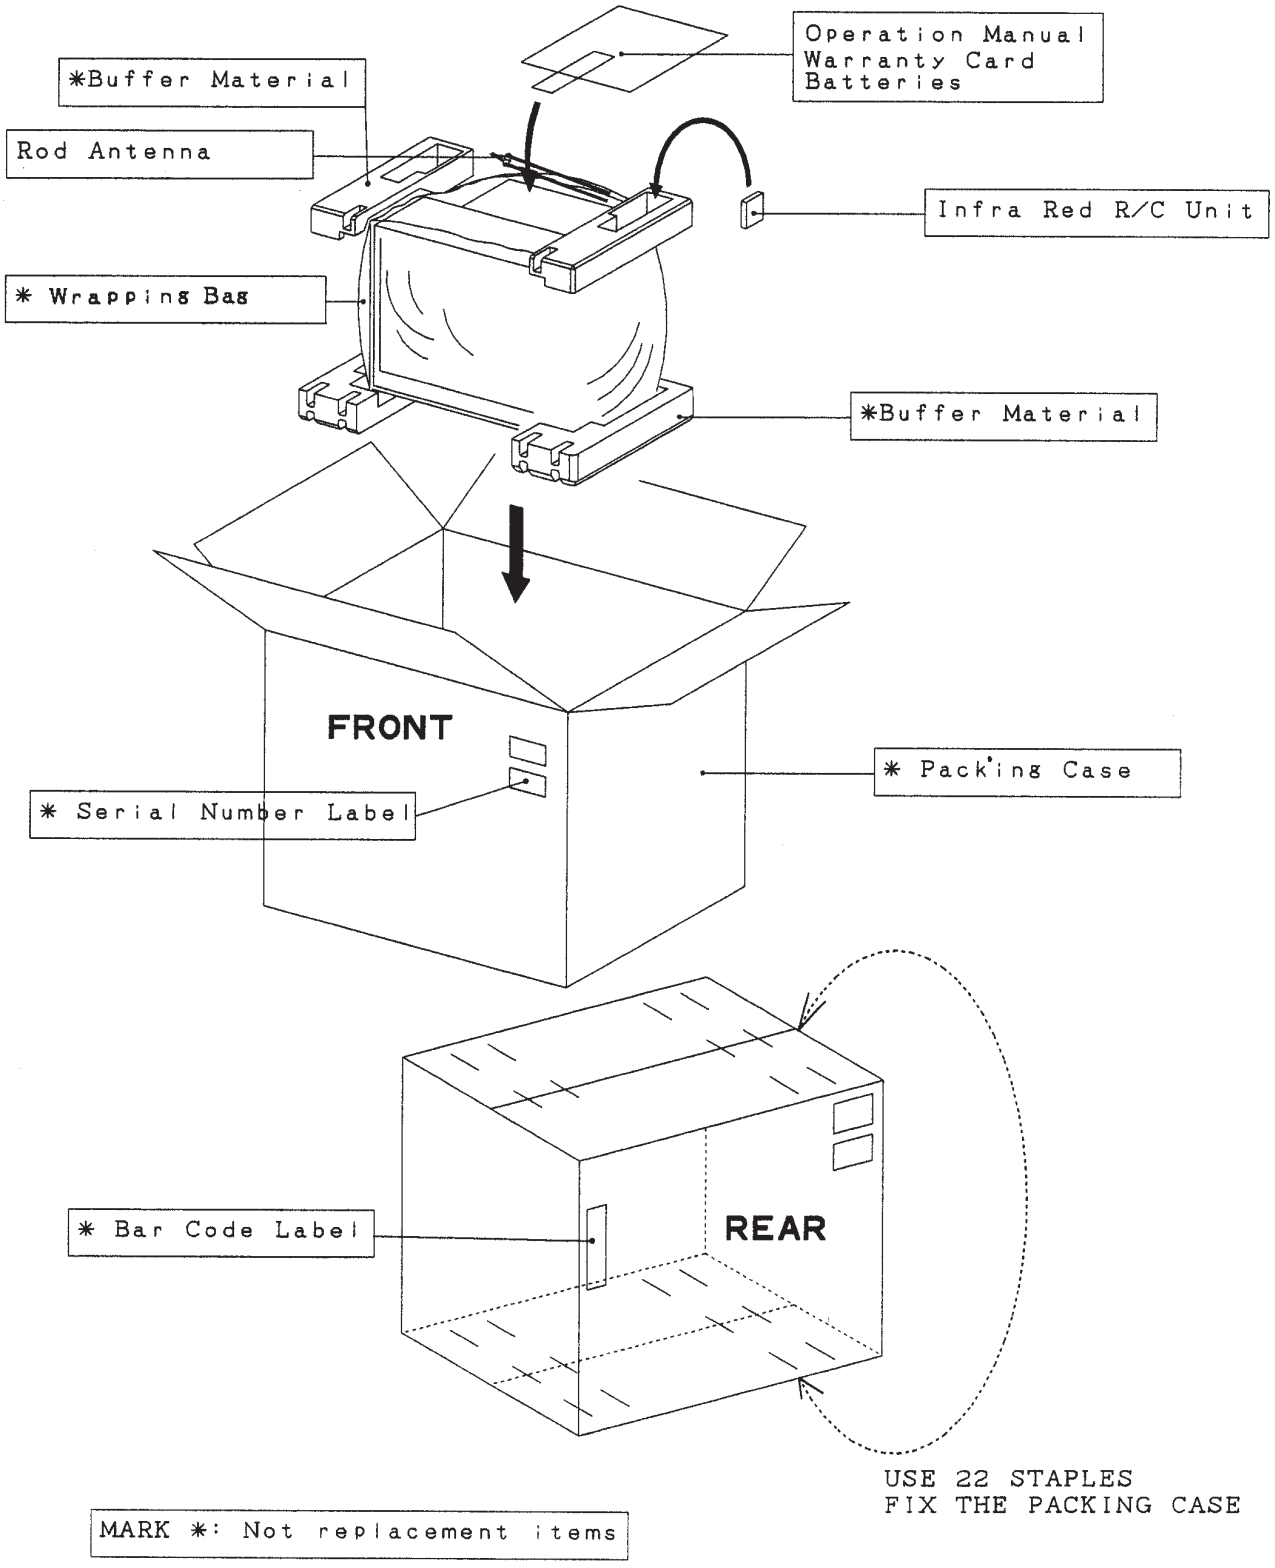

(14D1-SF/GF)

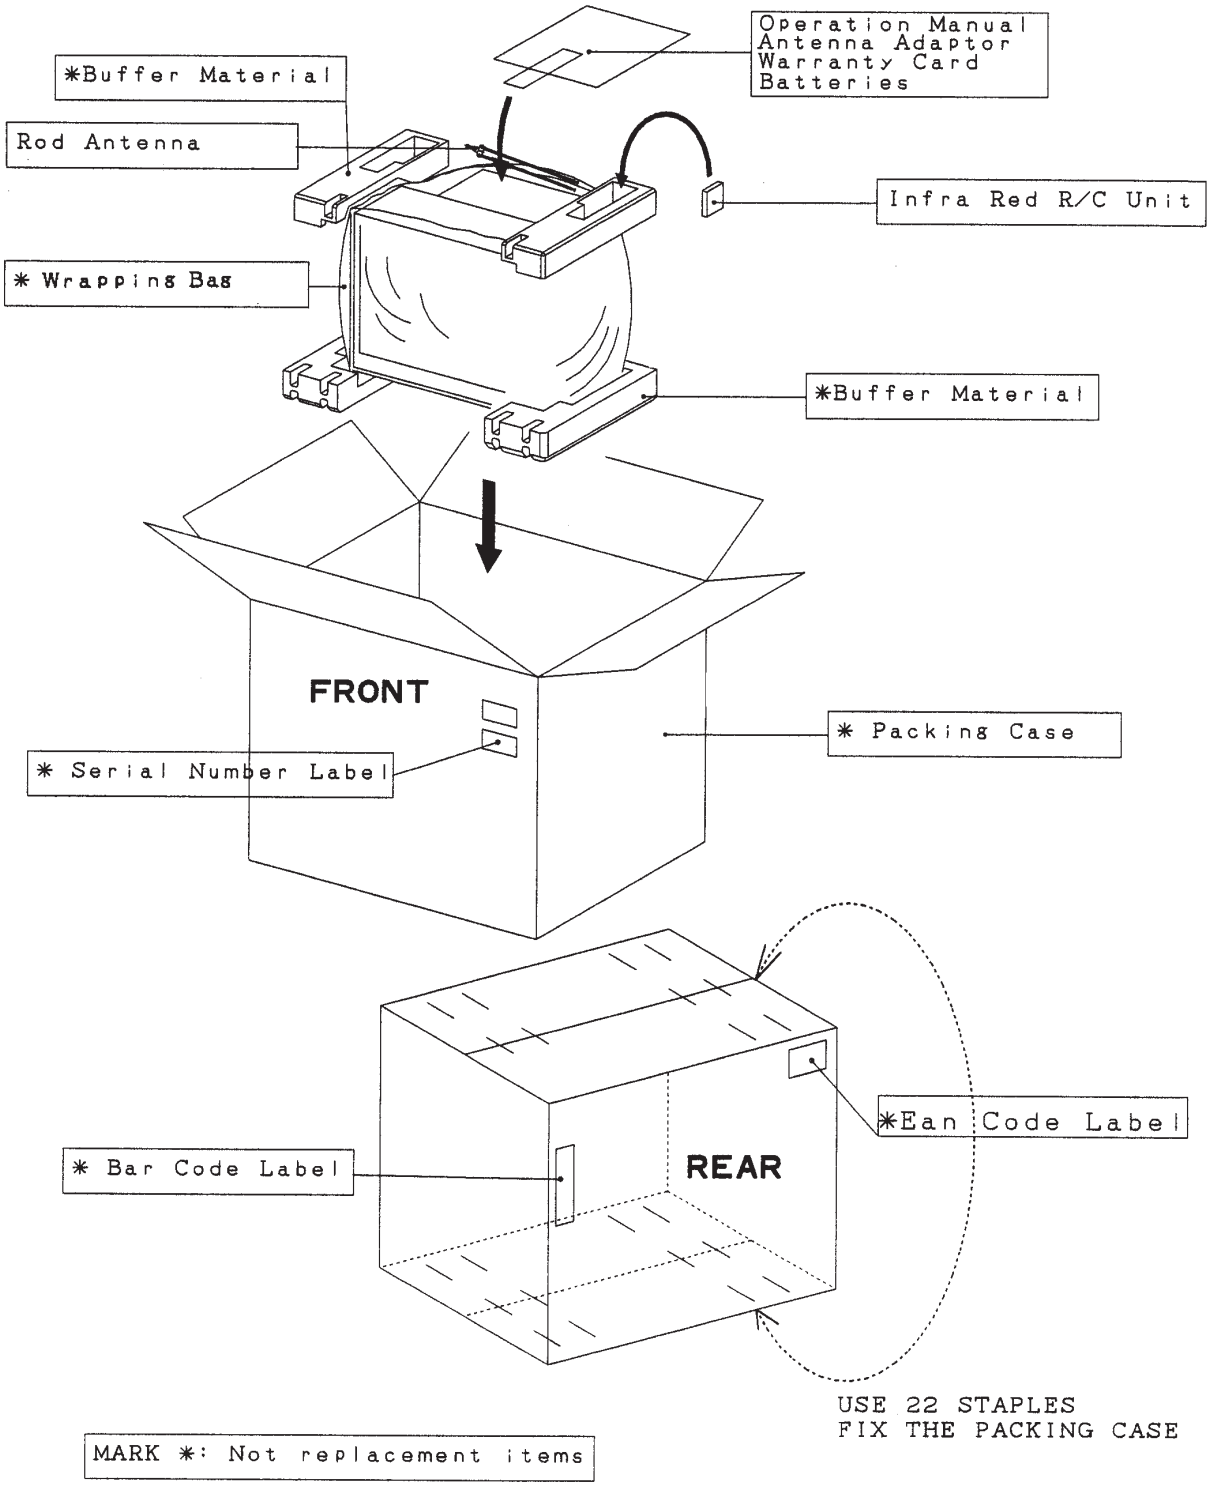
Operation Manual
Antenna Adaptor
Warranty Card
Batteries
*Buffer Material
Rod Antenna
Infra Red R/C Unit
* Wrapping Bag
*Buffer Material
FRONT
* Packing Case
* Serial Number Label
*Ean Code Label
* Bar Code Label
REAR
USE 22 STAPLES
FIX THE PACKING CASE
MARK *: Not replacement items

(14D2-SA/GA)

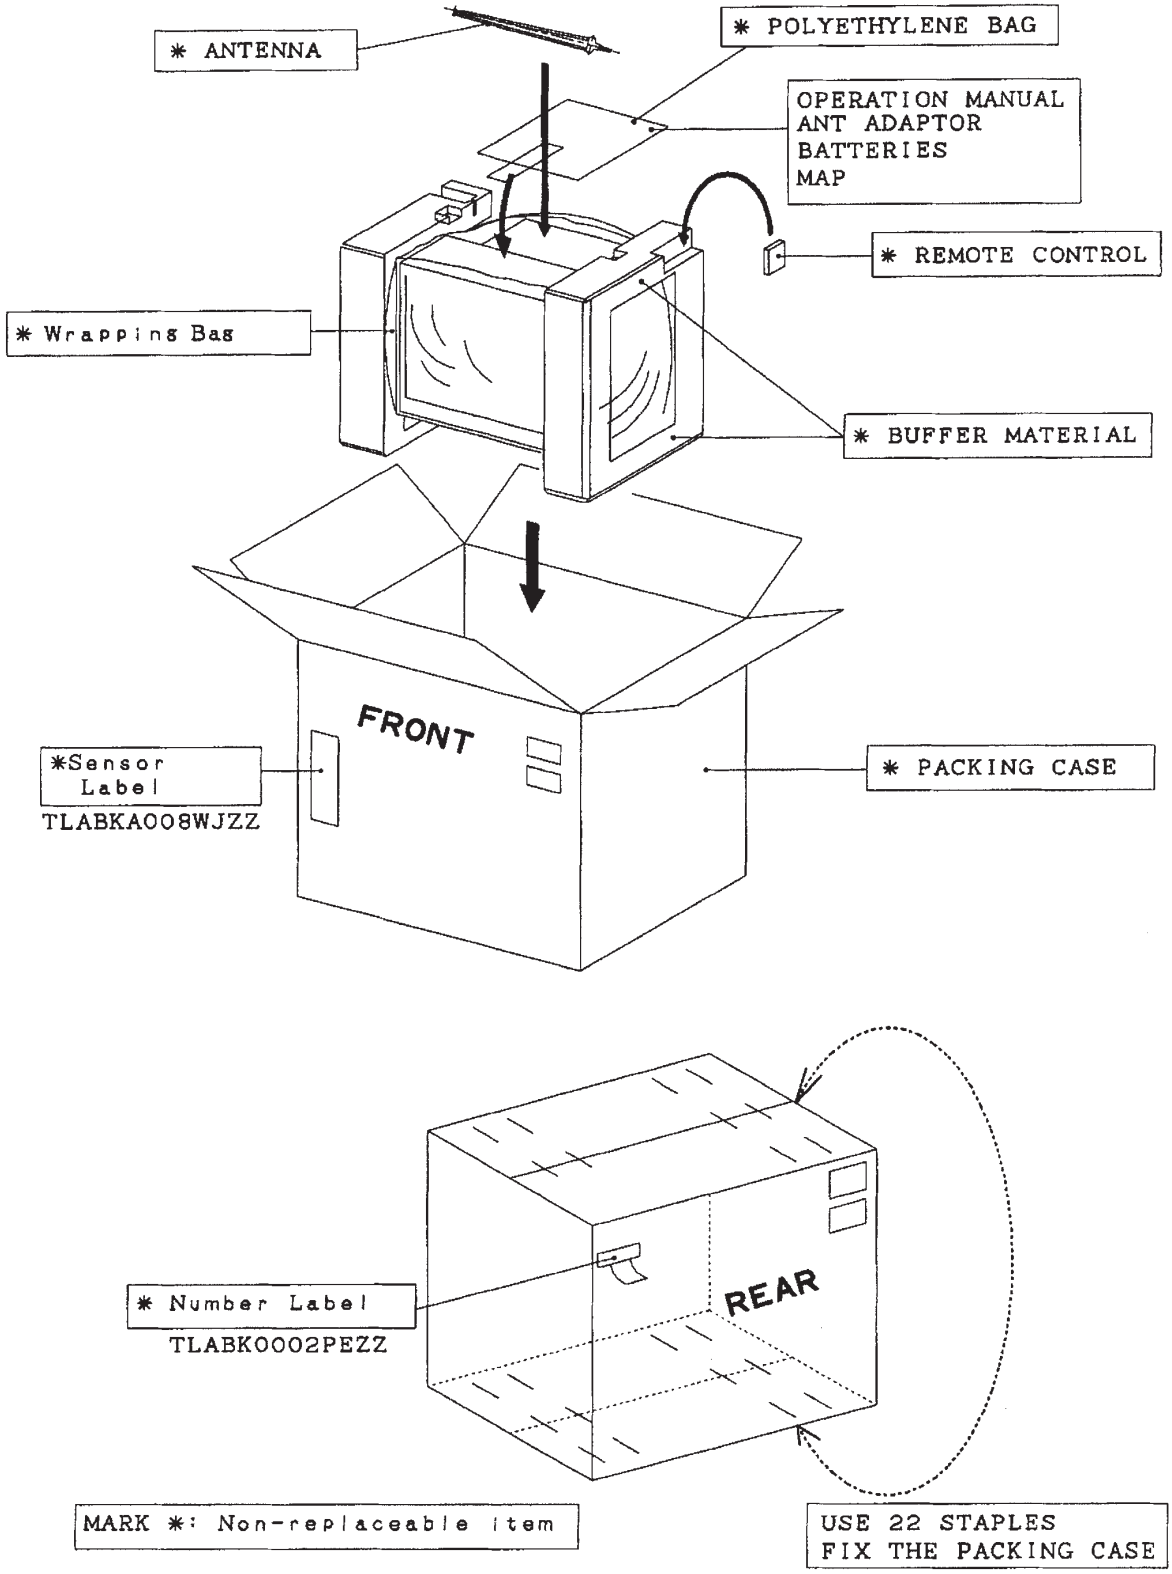
* ANTENNA
* POLYETHYLENE BAG
OPERATION MANUAL
ANT ADAPTOR
BATTERIES
MAP
* REMOTE CONTROL
* Wrapping Bag
* BUFFER MATERIAL
FRONT
*Sensor Label
TLABKA008WJZZ
* PACKING CASE
* Number Label
TLABK0002PEZZ
REAR
MARK *: Non-replaceable item
USE 22 STAPLES
FIX THE PACKING CASE

(14D2-SF/GF)

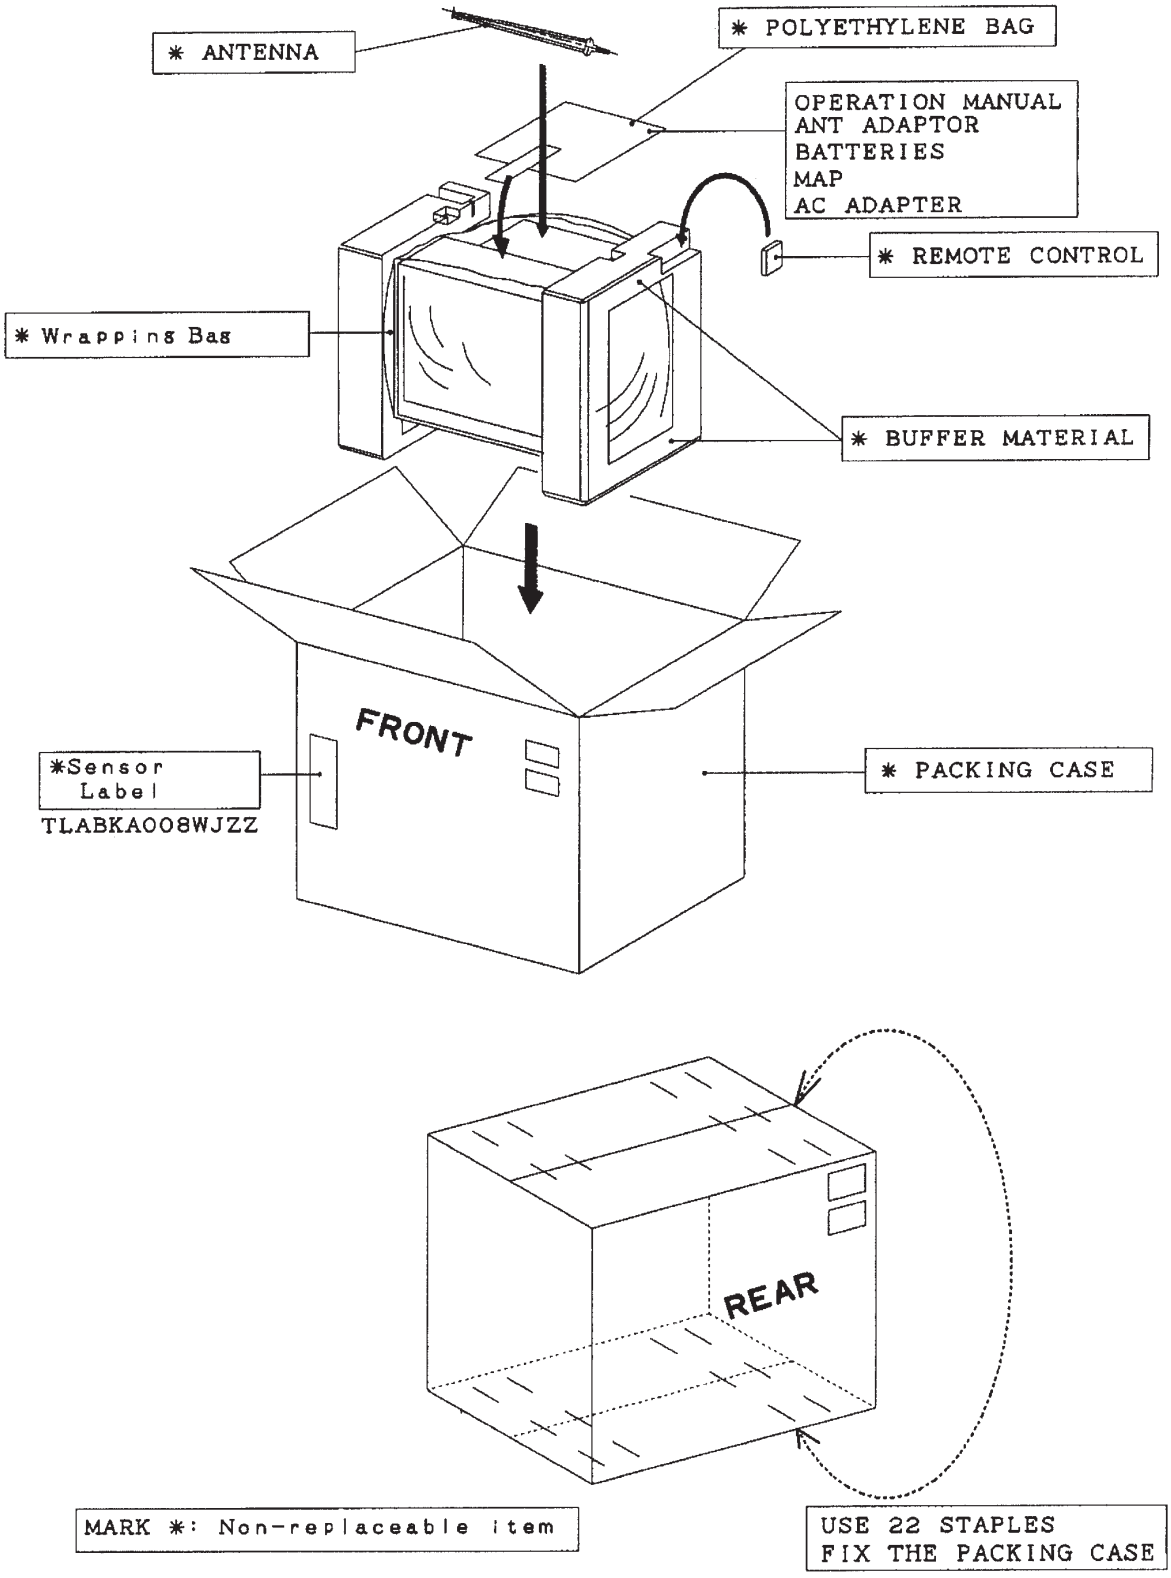
* ANTENNA
* POLYETHYLENE BAG
OPERATION MANUAL
ANT ADAPTOR
BATTERIES
MAP
AC ADAPTER
* REMOTE CONTROL
* Wrapping Bag
* BUFFER MATERIAL
FRONT
*Sensor Label
TLABKA008WJZZ
* PACKING CASE
REAR
MARK *: Non-replaceable item
USE 22 STAPLES
FIX THE PACKING CASE

SHARP

COPYRIGHT © 2004 BY SHARP CORPORATION

ALL RIGHTS RESERVED.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted in
any form or by any means, electronic, mechanical,
photocopying, recording, or otherwise, without
prior written permission of the publisher.

TQ1671-S
Jan. 2004 Printed in Japan
In Japan gedruckt

Design and Production Information	
Design	: SEM
Production	: SREC

MY. DS

SHARP CORPORATION
AV Systems Group
Quality & Reliability Control Center
Yaita, Tochigi 329-2193, Japan

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages